

### CoreAPB Datasheet

# **DirectCore**

## **Product Summary**

#### **Intended Use**

- Intended for Use in a CoreMP7-Based Subsystem to Implement the APB Bus Fabric
- Configured for Easy and Automatic System Design with CoreConsole

### **Key Features**

- Supplied in SysBASIC Core Bundle
- Up to 16 APB Slave Devices Supported
- Automatic Connection to AHB Bridge (CoreAHB2APB) and APB Slaves

#### **Benefits**

- Allows Easy Connection of APB Devices to a CoreMP7 Subsystem
- Auto Stitch in CoreConsole for Rapid Development
- Compatible with AMBA and CoreMP7

### **ARM Supported Families**

- ProASIC<sup>®</sup>3 (M7A3P)
- ProASIC3E (M7A3PE)
- Fusion (M7AFS)

### **Synthesis and Simulation Support**

• Supported in the Actel Libero® Integrated Design Environment (IDE)

### **Verification and Compliance**

· Compliant with AMBA

### Contents

General Description	1
Connecting CoreAPB in CoreConsole	2
Resource Requirements	2
Ordering Information	2
Datasheet Categories	3

## **General Description**

Along with the CoreAHB2APB, the CoreAPB Bus component provides an AMBA APB fabric which supports up to 16 APB slaves. CoreAHB2APB provides APB address decoding in the form of select signals. CoreAPB is concerned with multiplexing the read data busses from all the APB slaves into one single read data bus to send to CoreAHB2APB. Figure 1 gives an illustration of CoreAPB.

There is one APB master interface which is typically connected to the AMBA Bridge, and 16 equal-sized (16 MB) APB slave interfaces.

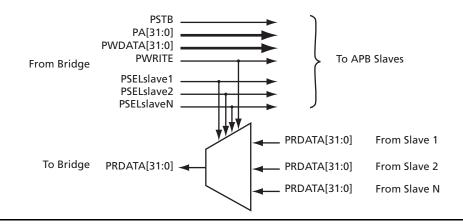


Figure 1 • CoreAPB

## **Connecting CoreAPB in CoreConsole**

Table 1 lists the ports present on the APB Bus and describes how to connect these in CoreConsole.

Table 1 • APB Bus Connections

Connection	CoreConsole Label	Description
	Requi	ired Connections
APB mirrored master interface	APBmmaster	This interface connects to the APBmaster interface of CoreAHB2APB.
	Optio	nal Connections
	APBmslave0	APB mirrored slave 0 interface
	APBmslave1	APB mirrored slave 1 interface
	APBmslave2	APB mirrored slave 2 interface
	APBmslave3	APB mirrored slave 3 interface
	APBmslave4	APB mirrored slave 4 interface
	APBmslave5	APB mirrored slave 5 interface
	APBmslave6	APB mirrored slave 6 interface
	APBmslave7	APB mirrored slave 7 interface
	APBmslave8	APB mirrored slave 8 interface
	APBmslave9	APB mirrored slave 9 interface
	APBmslave10	APB mirrored slave 10 interface
	APBmslave11	APB mirrored slave 11 interface
	APBmslave12	APB mirrored slave 12 interface
	APBmslave13	APB mirrored slave 13 interface
	APBmslave14	APB mirrored slave 14 interface
	APBmslave15	APB mirrored slave 15 interface

## **Resource Requirements**

The utilization for CoreAPB in a ProASIC3E device is 125 tiles.

## **Ordering Information**

CoreAPB is included in the SysBASIC core bundle that is supplied with the Actel CoreConsole IP Deployment Platform tool. The obfuscated RTL version of SysBASIC (SysBASIC-OC) is available for free with CoreConsole. The source RTL version of SysBASIC (SysBASIC-RM) can be ordered through your local Actel sales representative. CoreAPB cannot be ordered separately from the SysBASIC core bundle.

2 Advanced v0.1

## **Datasheet Categories**

In order to provide the latest information to designers, some datasheets are published before data has been fully characterized. Datasheets are designated as "Product Brief," "Advanced," and "Production." The definitions of these categories are as follows:

#### **Product Brief**

The product brief is a summarized version of an advanced or production datasheet containing general product information. This brief summarizes specific device and family information for unreleased products.

#### **Advanced**

This datasheet version contains initial estimated information based on simulation, other products, devices, or speed grades. This information can be used as estimates, but not for production.

### **Unmarked (production)**

This datasheet version contains information that is considered to be final.

Actel and the Actel logo are registered trademarks of Actel Corporation.

All other trademarks are the property of their owners.



#### www.actel.com

#### **Actel Corporation**

2061 Stierlin Court Mountain View, CA 94043-4655 USA **Phone** 650.318.4200

**Fax** 650.318.4600

#### Actel Europe Ltd.

Dunlop House, Riverside Way Camberley, Surrey GU15 3YL United Kingdom

**Phone** +44 (0) 1276 401 450 **Fax** +44 (0) 1276 401 490

#### **Actel Japan**

www.jp.actel.com

EXOS Ebisu Bldg. 4F 1-24-14 Ebisu Shibuya-ku Tokyo 150 Japan

**Phone** +81.03.3445.7671 **Fax** +81.03.3445.7668

### Actel Hong Kong

www.actel.com.cn

Suite 2114, Two Pacific Place 88 Queensway, Admiralty Hong Kong

**Phone** +852 2185 6460 **Fax** +852 2185 6488