


Connect the XChecker Cable to the Serial Port of your Computer



Use DB25F Socket

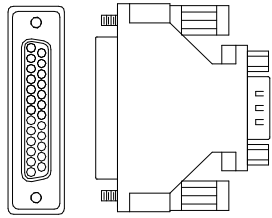


IBM PC or compatibles or IBM RS6000 workstations

No Adapter required.



HP Workstations

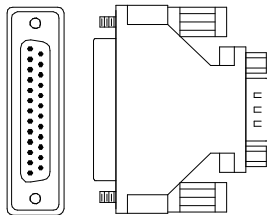

Use DB25M Plug



Sun Workstations