




REL-16.PCI™

USER MANUAL

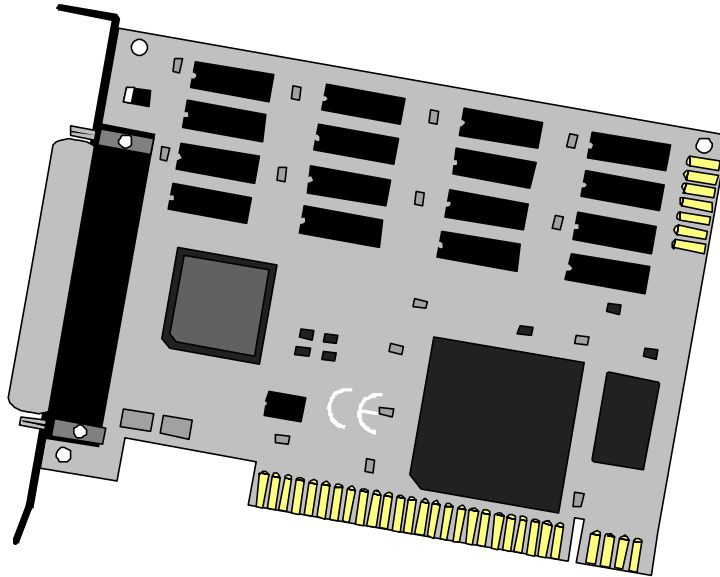

Part # 8003

Sealevel Systems, Inc
155 Technology Place
P.O. Box 830
Liberty, SC 29657 USA

Phone: (864) 843-4343
FAX: (864) 843-3067
www.sealevel.com

Contents

INTRODUCTION.....	1
OVERVIEW	1
WHAT'S INCLUDED.....	1
INSTALLATION.....	1
CARD SETUP.....	1
SOFTWARE INSTALLATION	1
FOR WINDOWS USERS	1
TECHNICAL DESCRIPTION	2
FEATURES	2
REED RELAYS	2
RELAY SPECIFICATIONS	2
SOFTWARE	3
PIN ASSIGNMENTS (P3 DB-37 MALE)	3
PROGRAMMING	4
APPLICATION PROGRAMMERS INTERFACE (API)	4
Relative Addressing Vs. Absolute Addressing	4
DIRECT HARDWARE CONTROL	6
Reading the Outputs (relays) (direct) :	6
Writing the Outputs (relays) (direct) :	6
REGISTER DESCRIPTION.....	6
SPECIFICATIONS	7
ENVIRONMENTAL SPECIFICATIONS.....	7
POWER CONSUMPTION	7
MEAN TIME BETWEEN FAILURES (MTBF)	7
PHYSICAL DIMENSIONS.....	7
APPENDIX A - TROUBLESHOOTING.....	8
APPENDIX B - HOW TO GET ASSISTANCE.....	9
APPENDIX C - SILK-SCREEN	10

APPENDIX D - COMPLIANCE NOTICES..... 11
FEDERAL COMMUNICATIONS COMMISSION STATEMENT..... 11
EMC DIRECTIVE STATEMENT 11
WARRANTY 12

© 2002a Sealevel Systems, Incorporated. All rights reserved.

Introduction

Overview

The **REL-16.PCI** provides 16 reed relays that can latch power, data or other electronic signals for control applications. The **REL-16.PCI** is PCI 2.1 bus compliant.

What's Included

The **REL-16.PCI** is shipped with the following items. If any of these items is missing or damaged, contact the supplier.

- **REL-16.PCI** Adapter
- Sealevel Systems' Software

Installation

Card Setup

The **REL-16.PCI** is a fully compliant PCI 'Plug and Play' adapter. I/O address is auto-assigned by either your system BIOS or your 'Plug and Play' operating system.

Software Installation

For Windows Users

Choose **Install Software** at the beginning of the CD and select the **Digital I/O** software drivers and install **SeaIO.System Installation**

The **REL-16.PCI** can be installed in any of the PCI expansion slots.

1. Turn off PC power. Disconnect the power cord.
2. Remove the PC case cover.
3. Locate an available PCI slot and remove the blank metal slot cover.
4. Gently insert the **REL-16.PCI** into the slot. Make sure that the adapter is seated properly.
5. Replace the screw.
6. Replace the cover.
7. Connect the power cord. Installation is complete.

Technical Description

The **REL-16.PCI** provides two parallel Reed Relay output ports. The ports are organized as ports A, B, C, and D. In order to maintain compatibility with the existing ISA interface adapter (Sealevel Part number 3095), ports C and D (Base address+2 and 3) are the Reed Relay output port addresses.

Features

- 16 SPST relays
- DB-37 Male connector
- Highly reliable 10 VA DIP reed relays utilized
- Multiple adapters can reside in same computer
- PCI 2.1 Bus compliant

Reed Relays

Reed relays provide very high quality, long life, low power, dry contact switch closures. Reed relays are not suited for high current applications, and can be destroyed by inductive load switching, where a spark occurs across the contacts internally. The relays are normally open, and close when energized.

Relay Specifications

- Contact Power Ratings: 10-Watts Maximum
- Contact Voltage Maximum: 100 Volts DC or AC Maximum
- Contact Current Maximum: .5 Amps DC or AC RMS
- Contact Resistance, Initial: .15 Ohms
- Rated Life:
 - Low Load: 200 Million Closures
 - Maximum Load: 100 Million Closures
- Contact Speed:
 - Operate: .5 mS
 - Release: .5 mS
 - Bounce: .5 mS
- Maximum Operating Speed: 600 Hertz

Software

The **REL-16.PCI** ships with Sealevel Systems' Seal/O suite of Windows drivers. Seal/O provides the user with a consistent and straightforward API, allowing the developer to concentrate on the details of the application as opposed to low level driver development. Popular development environments, including Visual C++, Visual Basic, and Delphi, are supported for application development. Seal/O includes a utility for configuring the driver parameters under Windows, further simplifying installation.

For DOS, QNX, Linux and other operating systems, please refer to the software included with your card.

Pin Assignments (P3 DB-37 Male)

Port C Bit	Relay	P3 Pin
0	K1	2,20
1	K2	3,21
2	K3	4,22
3	K4	5,23
4	K5	6,24
5	K6	7,25
6	K7	8,26
7	K8	9,27

Port D Bit	Relay	P3 Pin
0	K9	10,28
1	K10	11,29
2	K11	12,30
3	K12	13,31
4	K13	14,32
5	K14	15,33
6	K15	16,34
7	K16	17,35

Power and Ground Pin Assignments (P3 DB-37 Male)

Ground	18,36,37
+ 5 Volts	19
+ 12 Volts	1

Programming

Application Programmers Interface (API)

Most modern operating systems do not allow direct hardware access. The SeaIO driver and API have been included to provide control over the hardware in Windows and Linux environments.

The purpose of this section of the manual is to help the customer with the mapping of the API to the actual relays for the 8003 specifically. Complete documentation of the API can be found in its accompanying help file.

Relative Addressing vs. Absolute Addressing

The SeaIO API makes a distinction between “absolute” and “relative” addressing modes. In absolute addressing mode, the Port argument to the API function acts as a simple byte offset from the base I/O address of the device. For instance, Port #0 refers to the I/O address base + 0; Port #1 refers to the I/O address base + 1.

Relative addressing mode, on the other hand, refers to input and output ports in a logical fashion. With a Port argument of 0 and an API function meant to output data, the first (0th) output port on the device will be utilized. Likewise, with a Port argument of 0 and an API function designed to input data, the first (0th) input port of the device will be utilized.

In all addressing modes, port numbers are zero-indexed; that is, the first port is port #0, the second port is #1, the third #2, and so on.

Technical Description

Tables : API Port/bit reference numbers for Absolute and Relative Addressing

R = Read

W = Write

R/W = Read or Write

Port	API Port # Absolute Address (function)	API Port # Relative Address (function)	Port Type
A	0		Unused
B	1		Unused
C	2 (R/W)	0 (W)	Output Port (Reed Relays)
D	3 (R/W)	1 (W)	Output Port

API Bit # Absolute Address (function)	API Bit # Relative Address (function)	Port Bit
16 (R/W)	0 (W)	C0 - Output
17 (R/W)	1 (W)	C1 - Output
18 (R/W)	2 (W)	C2 - Output
19 (R/W)	3 (W)	C3 - Output
20 (R/W)	4 (W)	C4 - Output
21 (R/W)	5 (W)	C5 - Output
22 (R/W)	6 (W)	C6 - Output
23 (R/W)	7 (W)	C7 - Output
24 (R/W)	8 (W)	D0 - Output
25 (R/W)	9 (W)	D1 - Output
26 (R/W)	10 (W)	D2 - Output
27 (R/W)	11 (W)	D3 - Output
28 (R/W)	12 (W)	D4 - Output
29 (R/W)	13 (W)	D5 - Output
30 (R/W)	14 (W)	D6 - Output
31 (R/W)	15 (W)	D7 - Output

Direct Hardware Control

In systems where the users program has direct access to the hardware (DOS) the table below gives the mapping and functions That the 8003 provides. The address of each eight-bit port is calculated as shown in the table on the following page, the cards base address plus an offset.

Reading the Outputs (relays) (direct) :

The relay ports return the ones complement of the value that is currently being used to drive the relays. When using the API the value is returned not the complement of the value.

Writing the Outputs (relays) (direct) :

The output ports are the only ports that can be written. The relays on a standard 8003 are normally open. To close a relay a one must be written to the appropriate bit.

R = Read
 W = Write
 R/W = Read or Write

Function Available	Port	Port address	Port Type
	A	Base + 0	Unused
	B	Base + 1	Unused
R/W	C	Base + 2	Output Port (Reed Relays)
R/W	D	Base + 3	Output Port

Register Description

Address	Mode	D7	D6	D5	D4	D3	D2	D1	D0
Base+0	R	{0}	{0}	{0}	{0}	{0}	{0}	{0}	{0}
Base+1		{0}	{0}	{0}	{0}	{0}	{0}	{0}	{0}
Base+2	R/W	PCD7	PCD6	PCD5	PCD4	PCD3	PCD2	PCD1	PCD0
Base+3	R/W	PDD7	PDD6	PDD5	PDD4	PDD3	PDD2	PDD1	PDD0
Base+4	R	{0}	{0}	{0}	{0}	{0}	{0}	{0}	{0}
Base+5	R	{0}	{0}	{0}	{0}	{0}	{0}	{0}	{0}
Base+6	R	{0}	{0}	{0}	{0}	{0}	{0}	{0}	{0}
Base+7	R	{0}	{0}	{0}	{0}	{0}	{0}	{0}	{0}

Specifications

Environmental Specifications

Specification	Operating	Storage
Temperature Range	0° to 50° C (32° to 122° F)	-20° to 70° C (-4° to 158° F)
Humidity Range	10 to 90% R.H. Non-Condensing	10 to 90% R.H. Non-Condensing

Power Consumption

Supply line	+5 VDC
Rating	360mA

Mean Time Between Failures (MTBF)

MTBF is calculated as greater than 150,000 hours, **excluding relays**.
Relay Life expectancy is dependent on actual application usage.

Physical Dimensions

Board Length	5.00 inches	(12.700 cm.)
Board Height including Goldfingers	3.900 inches	(9.906 cm.)
Board Height excluding Goldfingers	3.575 inches	(9.080 cm.)
Board Weight	3.2 ounces	(90.71 g)

Appendix A - Troubleshooting

Following these simple steps can eliminate most common problems without the need to call Technical Support.

1. Install software **first**. After installing the software then proceed to adding the hardware. This places the required installation files in the correct locations.
2. Identify all I/O adapters currently installed in your system. This includes your on-board serial ports, controller cards, sound cards etc. The I/O addresses used by these adapters, as well as the IRQ (if any) should be identified.
3. Ensure that there is no conflict with currently installed adapters. No two adapters can occupy the same I/O address and may not be allowed to share IRQs.
4. Make sure the Sealevel Systems adapter is securely installed in a motherboard slot.


Appendix B - How To Get Assistance

Please refer to Troubleshooting Guide prior to calling Technical Support.

1. Read this manual thoroughly before attempting to install the adapter in your system.
2. When calling for technical assistance, please have your user manual and current adapter settings. If possible, please have the adapter installed in a computer ready to run diagnostics.
3. Sealevel Systems maintains a Home page on the Internet. Our home page address is www.sealevel.com. The latest software updates, and newest manuals are available via our FTP site that can be accessed from our home page.
4. Technical support is available Monday to Friday from 8:00 a.m. to 5:00 p.m. eastern time. Technical support can be reached at (864) 843-4343.

RETURN AUTHORIZATION MUST BE OBTAINED FROM SEALEVEL SYSTEMS BEFORE RETURNED MERCHANDISE WILL BE ACCEPTED. AUTHORIZATION CAN BE OBTAINED BY CALLING SEALEVEL SYSTEMS AND REQUESTING A RETURN MERCHANDISE AUTHORIZATION (RMA) NUMBER.

Appendix C - Silk-Screen

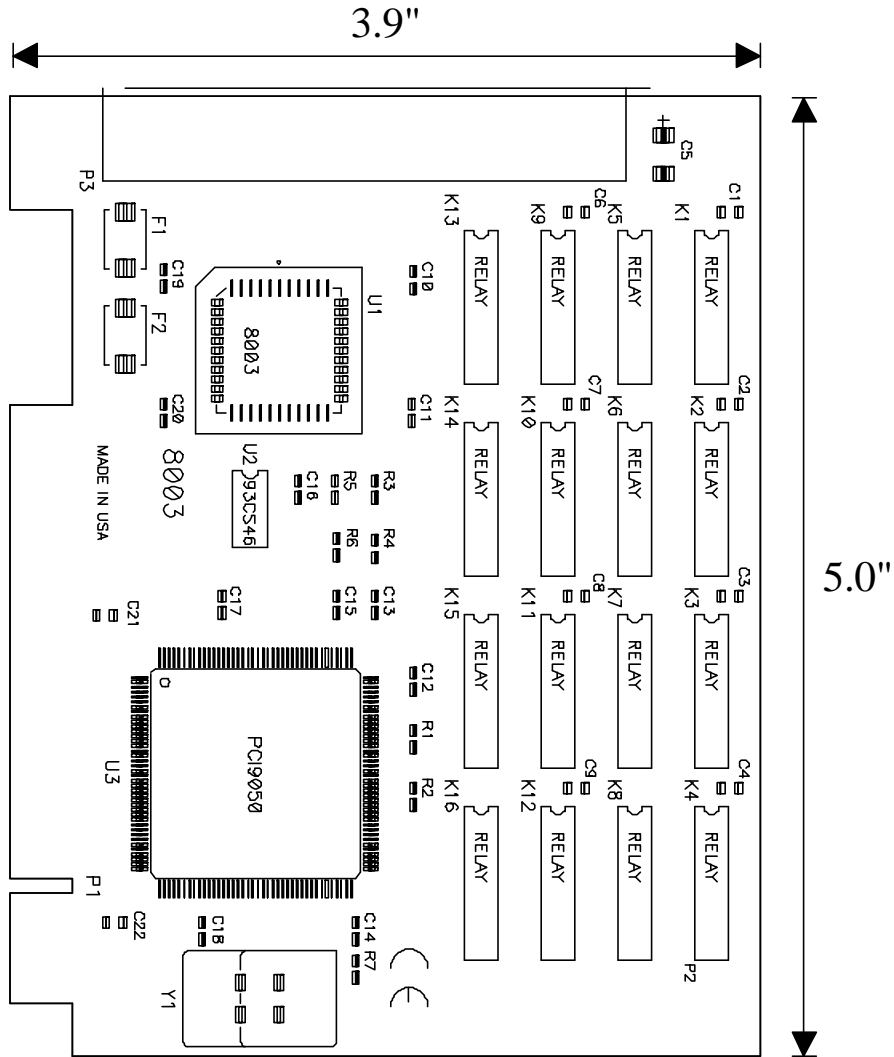

Appendix D - Compliance Notices

Federal Communications Commission Statement

FCC - This equipment has been tested and found to comply with the limits for Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference. In such case the user will be required to correct the interference at his own expense.

EMC Directive Statement



Products bearing the CE Label fulfill the requirements of the EMC directive (89/336/EEC) and of the low-voltage directive (73/23/EEC) issued by the European Commission.

To obey these directives, the following European standards must be met:

- **EN55022 Class A** - "Limits and methods of measurement of radio interference characteristics of information technology equipment"
- **EN55024**- 'Information technology equipment Immunity characteristics Limits and methods of measurement.
- **EN60950 (IEC950)** - "Safety of information technology equipment, including electrical business equipment"

Warning

This is a Class A Product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Always use cabling provided with this product if possible. If no cable is provided or if an alternate cable is required, use high quality shielded cabling to maintain compliance with FCC/EMC directives.

Warranty

Sealevel Systems, Inc. provides a lifetime warranty for this product. Should this product fail to be in good working order at any time during this period, Sealevel Systems will, at its option, replace or repair it at no additional charge except as set forth in the following terms. This warranty does not apply to products damaged by misuse, modifications, accident or disaster.

Sealevel Systems assumes no liability for any damages, lost profits, lost savings or any other incidental or consequential damage resulting from the use, misuse of, or inability to use this product. Sealevel Systems will not be liable for any claim made by any other related party.

RETURN AUTHORIZATION MUST BE OBTAINED FROM SEALEVEL SYSTEMS BEFORE RETURNED MERCHANDISE WILL BE ACCEPTED. AUTHORIZATION CAN BE OBTAINED BY CALLING SEALEVEL SYSTEMS AND REQUESTING A RETURN MERCHANDISE AUTHORIZATION (RMA) NUMBER.

Sealevel Systems, Incorporated
155 Technology Place
P.O. Box 830
Liberty, SC 29657 USA
(864) 843-4343 FAX: (864) 843-3067
www.sealevel.com
email: support@sealevel.com

Technical Support is available from 8 a.m. to 5 p.m. Eastern time.
Monday - Friday

Trademarks

Sealevel Systems, Incorporated acknowledges that all trademarks referenced in this manual are the service mark, trademark, or registered trademark of the respective company.

REL-16.PCI is a trademark of Sealevel Systems, Incorporated.