



Explanation of Atmel's Part Number Code

All Atmel part numbers begin with the prefix "AT". The next four to nine digits are the part number. In addition, Atmel parts can be ordered in particular speeds, in specific packages, for particular temperature ranges and with the option of 883C level B military compliance. The available options

for each part are listed at the back of its data sheet in its "Ordering Information" table. These options are designated by the following suffixes placed at the end of the Atmel part number, in the order given:

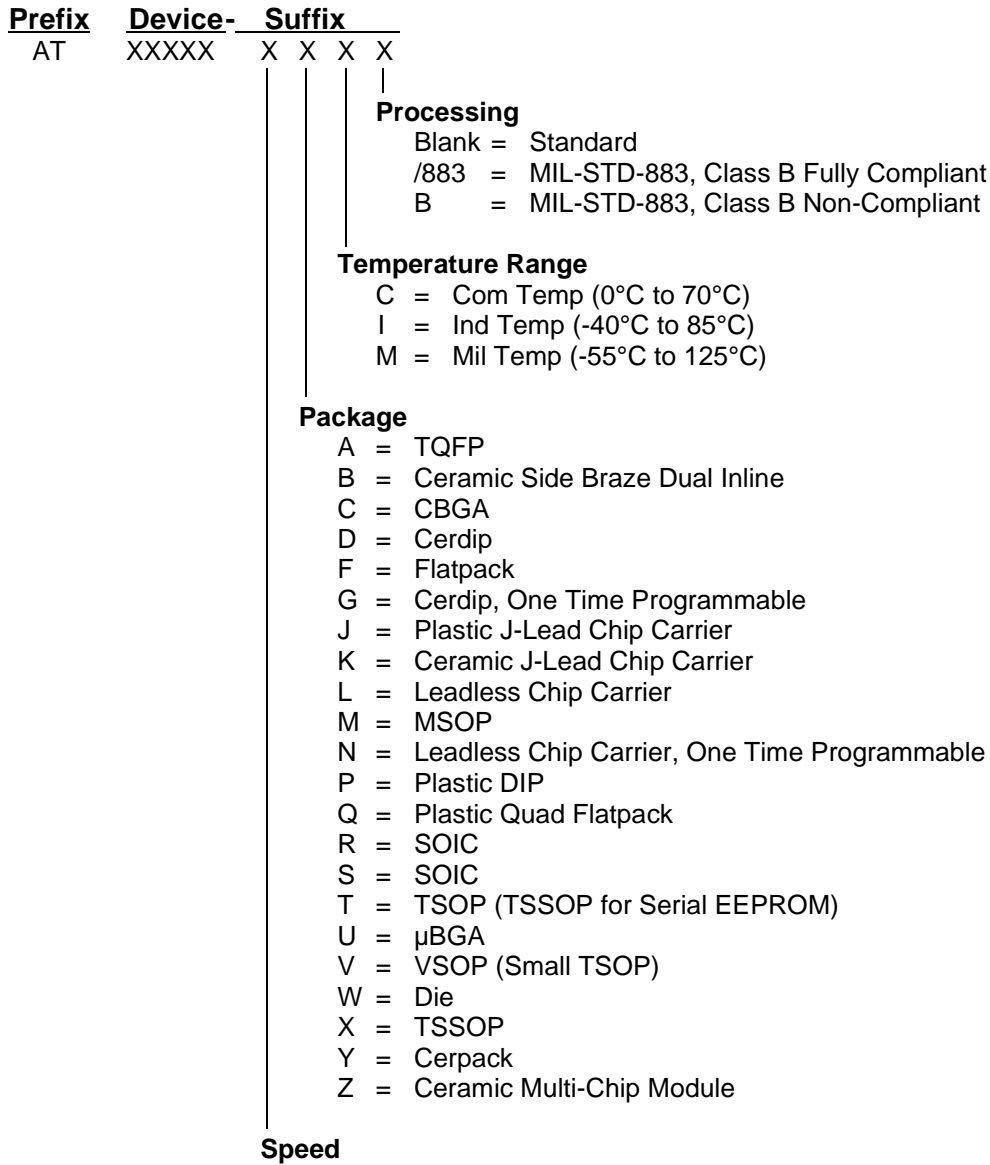

Here is an example Atmel part number:

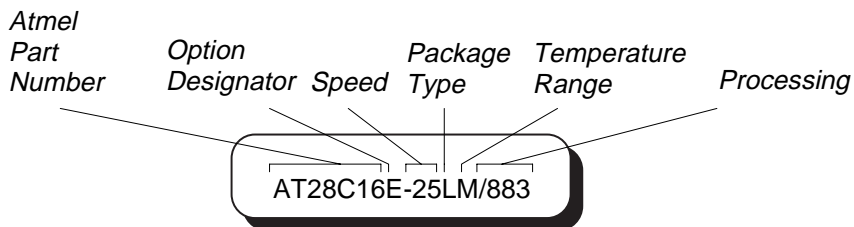

Rev. 0538B-10/98