

## Summary of Features

- System-Level Features:
  - High-capacity pre-engineered configuration solution for FPGAs
  - Chipset configuration solution:
    - ACE Controller™ – Configuration manager
    - ACE Flash™ – High-capacity CompactFlash™ storage device
  - Non-volatile system solution
  - Flexible configuration interfaces
  - System configuration rates of up to 30 Mbits/sec
  - Board space requirement as low as 25 cm<sup>2</sup>
- ACE Flash (Xilinx-supplied Flash Cards):
  - Densities of 128 Mbits and 256 Mbits
  - CompactFlash Type I form factor
  - PC Card ATA protocol compatible
  - Noiseless and low CMOS power
  - Automatic error correction and write retry capabilities
  - Multiple partitions
  - Program/erase over full commercial/industrial temperature range
- Removable storage device
- Excellent quality and reliability
  - MTBF >1,000,000 hours
  - Minimum 10,000 insertions
- ACE Controller:
  - CompactFlash interface supports ACE Flash cards, standard third-party CompactFlash (Type I or Type II) cards, and IBM Microdrives with up to 8 Gbit capacity
  - Configuration of a target FPGA chain through IEEE 1149.1 JTAG with a throughput up to 16.7 Mbits/sec
  - Interfaces include CompactFlash, JTAG, and MPU
  - MPU interface is compatible with microprocessor/microcontroller bus interfaces, such as the IBM PPC405, and Siemens 80C166
  - IEEE 1149.1 Boundary-Scan Standard Compliant (JTAG)
  - FAT12/16 file system
  - Compact 144-pin TQFP package
  - Low power

## General Description

Xilinx developed the System Advanced Configuration Environment (System ACE) family to address the need for a space-efficient, pre-engineered, high-density configuration solution for systems with multiple FPGAs. System ACE technology is a ground-breaking in-system programmable configuration solution that provides substantial savings in development effort and cost per bit over traditional PROM and embedded solutions for high-capacity FPGA systems.

The System ACE family combines Xilinx expertise in configuration control with industry expertise in commodity memories. The first member of the System ACE family uses CompactFlash.

As shown in **Figure 1**, the System ACE CompactFlash solution is a chipset, consisting of a controller device (ACE Controller) and a CompactFlash storage device (ACE Flash).

ACE Flash  
CompactFlash Storage Device



128 Mbits or 256 Mbits

System ACE  
Controller Device




Interface to FPGA Target Chain  
from CompactFlash, MPU,  
or Test JTAG Port

DS080\_01\_032101

Figure 1: System ACE Chipset

Figure 2 shows that the ACE Controller contains multiple interfaces, including CompactFlash, MPU, and JTAG, to allow for a highly flexible configuration solution. For added flexibility, a CompactFlash or IBM Microdrive storage device such as the Xilinx ACE Flash card can be used to store

multiple bitstreams, with a capacity of up to 256 Mbits. The combination of the ACE Controller and a standard CompactFlash or IBM Microdrive storage device delivers a powerful configuration solution for high-density FPGA systems.

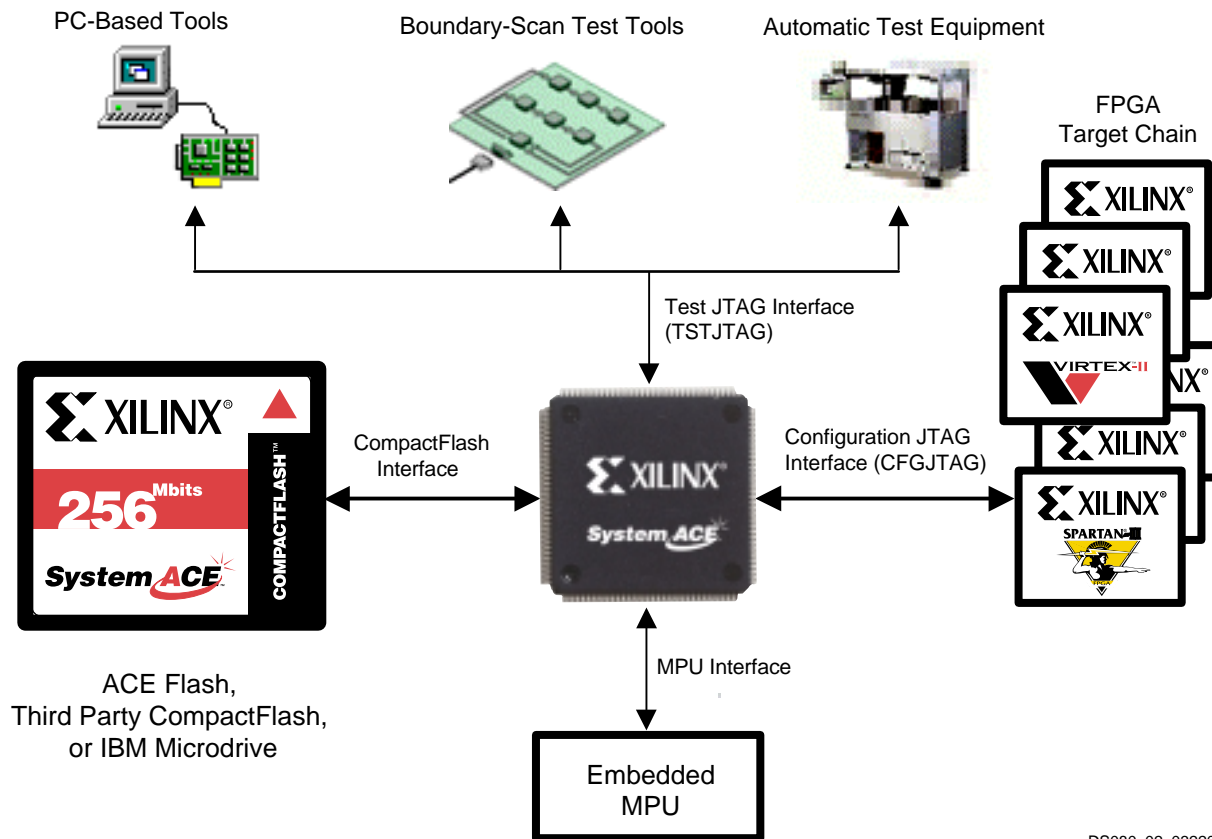

DS080\_02\_032201


Figure 2: ACE Controller Interfaces

## ACE Flash Memory Card

The Xilinx ACE Flash memory card is a CompactFlash solid-state storage device that complies with the Personal Computer Memory Card International Association ATA (PCMCIA ATA) specification. The ACE Flash card is available in two densities: 128 Mbits and 256 Mbits. This card contains an on-card intelligent controller that manages interface protocols, data storage and retrieval, ECC, defect handling and diagnostics, power management, and clock control.

Using commercially available, low-cost peripheral devices, the ACE Flash card can be programmed independently in a PC environment, in which the Flash card appears as an additional hard drive. Besides these standard options, the System ACE solution allows for in-system programming of an ACE Flash card through the ACE Controller MPU interface.

The ACE Flash card also interfaces directly with the ACE Controller to provide a powerful pre-engineered configuration solution. See [Figure 3](#).

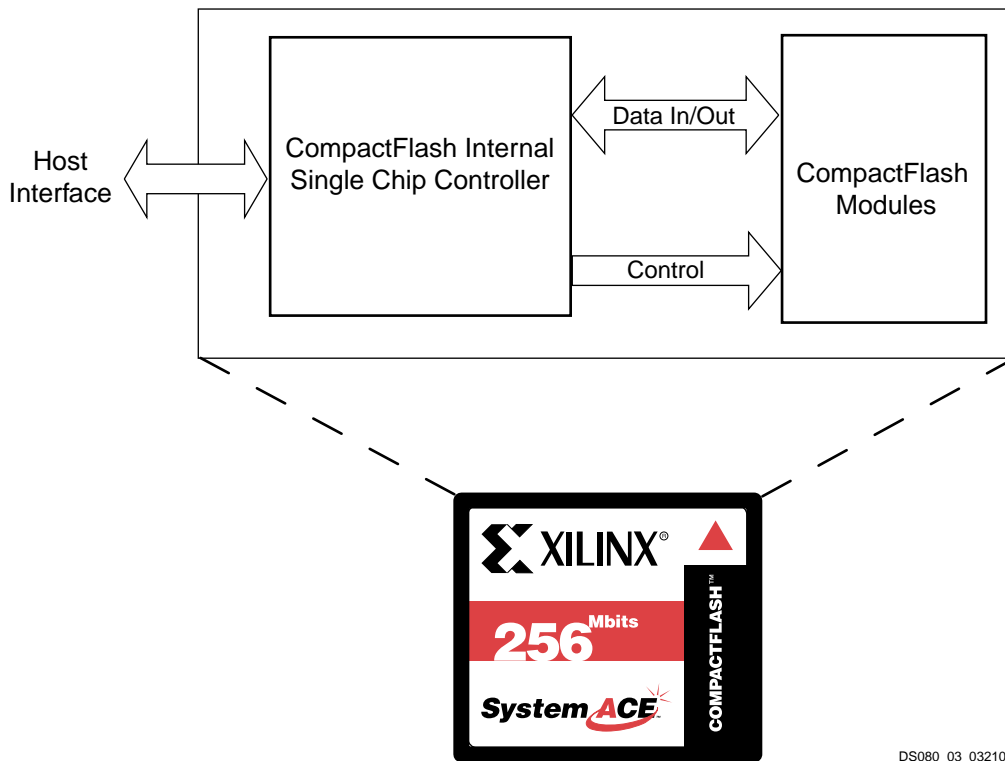

DS080\_03\_032101

Figure 3: ACE Flash Card Block Diagram

## System ACE File Structure

The System ACE file structure setup allows ACE Flash memory not used for configuration storage to be used as scratchpad memory for other system storage needs. The ability to store multiple bitstreams empowers designers to use a single ACE Flash card to run BIST patterns, PCI applications, or store multiple bitstream variations of a

design (for example, versions for different geographical regions).

The file structure also gives designers the flexibility to store supporting information with the bitstreams in addition to configuration data, such as release notes, user guides, FAQs, or other supporting files.


Table 1: ACE Flash Card Capacity Specifications

Capacity (Bits)	Sectors/Card (Max LBA+1)	Number of Heads	Number of Sectors/Tracks	Number of Cylinders
128,450,560	31,360	2	32	490
256,901,120	62,720	4	32	490

## ACE Controller

The ACE Controller manages FPGA configuration data. The controller provides an intelligent interface between an FPGA target chain and various supported configuration sources; it can target multiple FPGA devices using JTAG at a selectable throughput of up to 16.7 Mb/s. As shown in

Figure 4, three interfaces are available for configuring a target FPGA chain through the Configuration JTAG Port. These interfaces are: CompactFlash, Microprocessor (MPU), and Test JTAG.

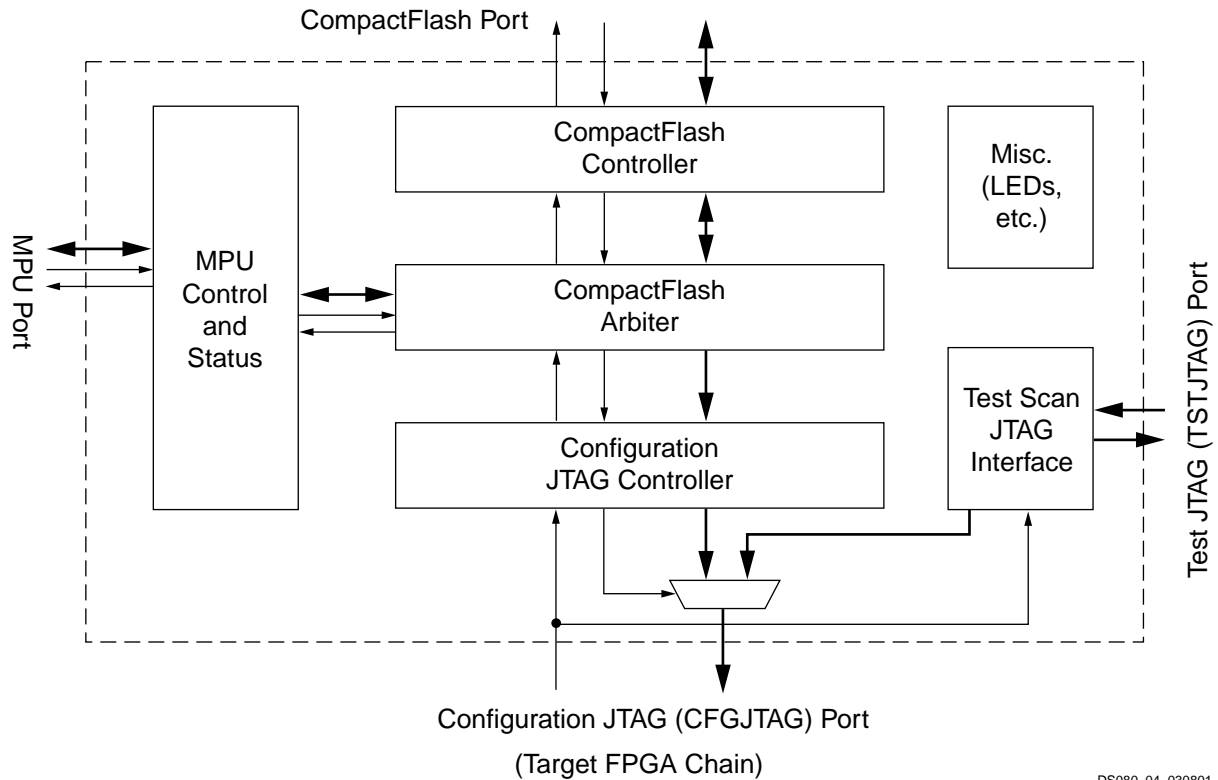

DS080\_04\_030801


Figure 4: System ACE Controller Block Diagram

The directory structure used by the ACE Controller enables it to support both CompactFlash and IBM Microdrive devices through the CompactFlash port.

The MPU interface has access to the CompactFlash port, the Configuration JTAG port, and local control/status features. The Test JTAG port is used when doing Boundary-Scan testing of the target FPGA chain or the ACE Controller. Details about each interface are discussed below.

The ACE Controller has two main power supplies: the core power supply ( $V_{CCL}$ ) and a CompactFlash/Test JTAG interface power supply ( $V_{CCH}$ ). The  $V_{CCH}$  power source supplies the Test JTAG and CompactFlash port levels. These two interfaces must be powered at 3.3V. The  $V_{CCL}$  core power source supplies the MPU and Configuration JTAG ports, which can be run at 3.3V or 2.5V. It is important to note that these two interfaces are always powered at the same voltage. Considerations for the interface voltage are discussed in **Typical Configuration Modes** on page 33. See Figure 5.

- ◆ Shaded output buffers drive  $V_{OH} = V_{CCL} = 2.5V$  or  $3.3V$
- ◆ Shaded input buffers sense  $V_{IH} = V_{CCL} = 2.5V$  or  $3.3V$
- ◆ All non-shaded output buffers drive  $V_{OH} = V_{CCH} = 3.3V$
- ◆ All non-shaded input buffers sense  $V_{IH} = V_{CCH} = 3.3V$
- ◆ "LS" denotes level-shifter
- ◆ Core voltage level =  $V_{CCL} = 2.5V$  or  $3.3V$

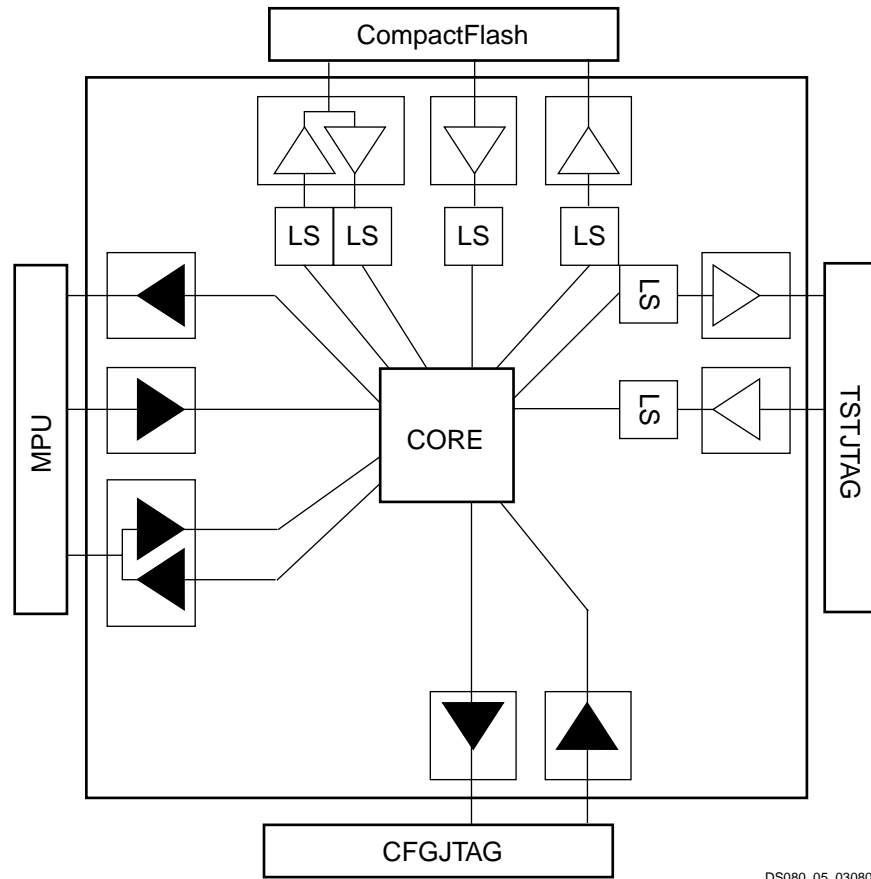

DS080\_05\_030801

Figure 5: ACE Controller I/O Requirements

## Status Indicators

The ACE Controller has indicator pins to help monitor device status during operation.

Table 2: ACE Controller Status Indicators

Name	Pin	Description
$\overline{\text{STATLED}}$	95	<ul style="list-style-type: none"> <li>• When on, the Status LED indicates that configuration is DONE.</li> <li>• When blinking, this LED indicates that configuration is still in progress.</li> <li>• When off this LED indicates that configuration is in an IDLE state.</li> </ul>
$\overline{\text{ERRLED}}$	96	<ul style="list-style-type: none"> <li>• When on, the ERROR LED indicates that an error occurred.</li> <li>• When blinking, this LED indicates that no CompactFlash device was found when the CompactFlash for the Configuration JTAG interface was enabled.</li> <li>• When off, this LED indicates that no errors are detected.</li> </ul>
$\overline{\text{RESET}}$	33	<ul style="list-style-type: none"> <li>• When activated, the Reset pin on the ACE Controller performs a complete system reset.</li> </ul>

## Interfaces Overview

This section discusses the details of each supported ACE Controller interface.

### CompactFlash Interface (CF)

The CompactFlash interface is the key ACE Controller interface for high-capacity systems. The CompactFlash port can accommodate Xilinx ACE Flash cards, any standard CompactFlash module, or IBM Microdrives up to 8 Gbits, all with the same form factor and board space requirements.

The use of standard CompactFlash devices gives system designers access to high-density Flash in a very efficient footprint that does not change with density. CompactFlash is a removable medium, which makes changes and/or upgrades to the memory contents or density simple.

The CompactFlash interface is comprised of two pieces: a CompactFlash Controller, and a CompactFlash Arbiter. The CompactFlash Controller detects the presence and

maintains the status of the CompactFlash device. This Controller also handles all CompactFlash device access bus cycles, and abstracts and implements CompactFlash commands such as soft reset, identify drive, and read/write sector(s). The CompactFlash Arbiter controls the interface between the MPU and the Configuration JTAG Controller for access to the CompactFlash data buffer.

CompactFlash devices are compliant with multiple read and write modes. The System ACE Configuration Controller supports ATA Common Memory Read and Write functions specifically. [Figure 6](#) and [Figure 7](#) provide detailed timing information on these functions.


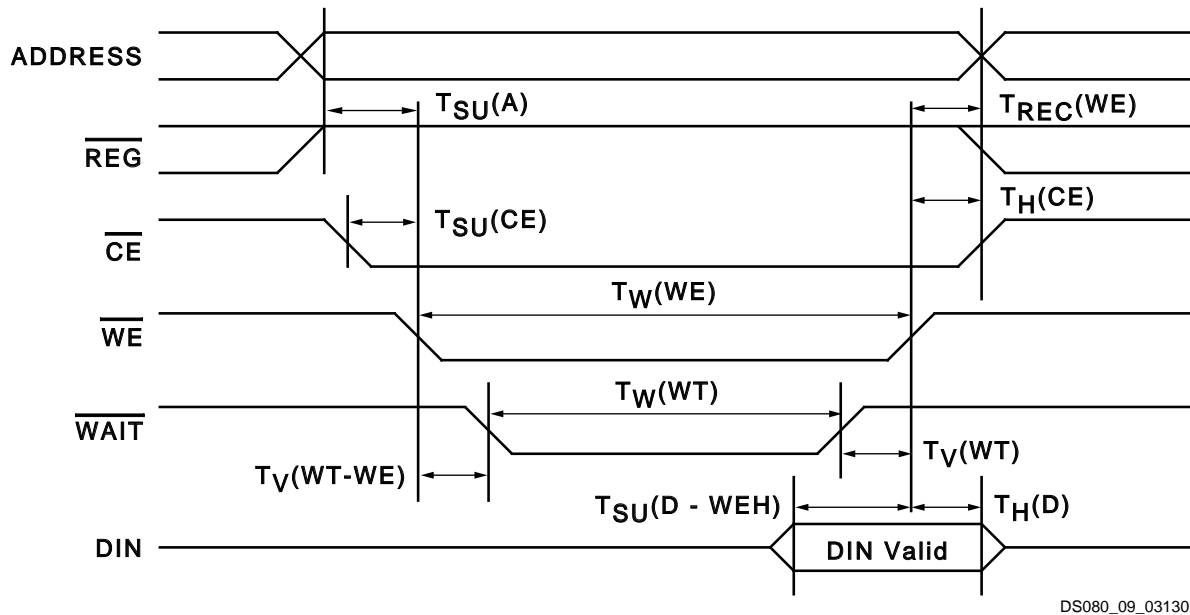


Figure 6: ACE Flash ATA Memory Write Timing Diagram

Table 3: Common Memory Write Timing

Item	Symbol	IEEE Symbol	Min (ns)	Max (ns)
Data Setup before WE	$T_{SU}(D-WEH)$	tDVWH	80	
Data Hold following WE	$T_H(D)$	tIWMDX	30	
WE Pulse Width	$T_W(WE)$	tWLWH	150	
Address Setup Time	$T_{SU}(A)$	tAVWL	30	
CE Setup before WE	$T_{SU}(CE)$	tELWL	0	
Write Recovery Time	$T_{REC}(WE)$	tWMAX	30	
CE Hold following WE	$T_H(CE)$	tGHEH	20	
Wait Delay Falling from WE	$T_V(WT-WE)$	tWLWTV		35
WE HIGH from Wait Release	$T_V(WT)$	tWTHWH	0	
Wait Width Time (Default Speed)	$T_W(WT)$	tWTLWTH		350

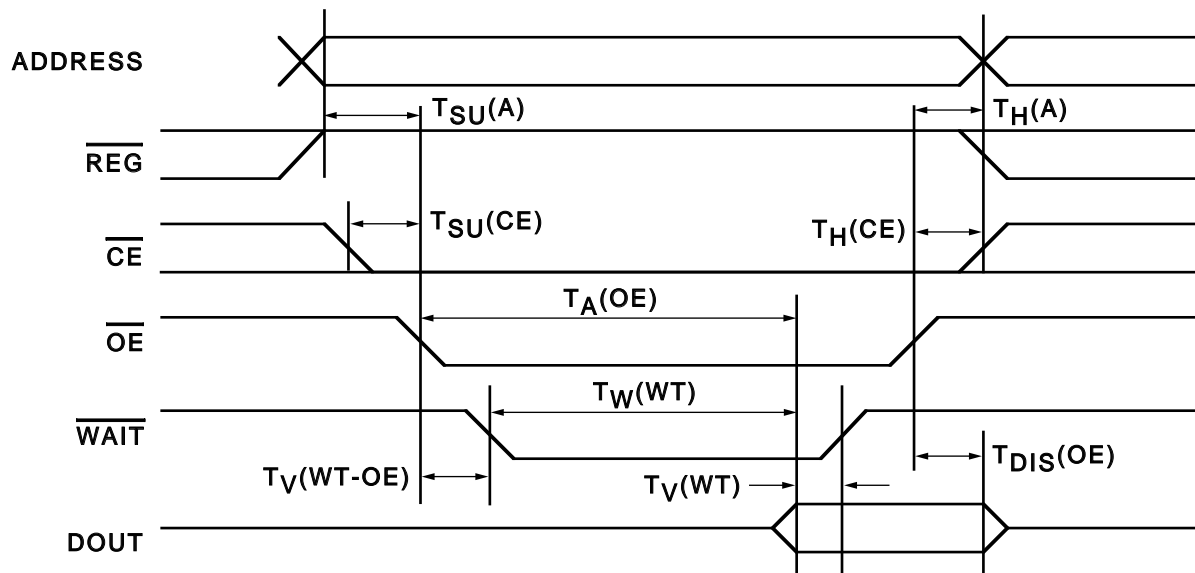

DS080\_10\_031301

Figure 7: ACE Flash ATA Memory Read Timing Diagram

Table 4: I/O Read Timing

Item	Symbol	IEEE Symbol	Min (ns)	Max (ns)
Data Delay after IORD	$T_D(\text{IORD})$	tIGLQV		100
Data Hold following IORD	$T_H(\text{IORD})$	tIGHQX	0	
IORD Width Time	$T_W(\text{IORD})$	tIGLIGH	165	
Address Setup before IORD	$T_{SU} A(\text{IORD})$	tAVIGL	70	
Address Hold following IORD	$T_H A(\text{IORD})$	tIGHAX	20	
CE Setup before IORD	$T_{SU} CE(\text{IORD})$	tELIGL	5	
CE Hold following IORD	$T_H CE(\text{IORD})$	tIGHEH	20	
REG Setup before IORD	$T_{SU} REG(\text{IORD})$	tRGLIGL	5	
REG Hold following IORD	$T_H REG(\text{IORD})$	tIGHRGH	0	
INPACK Delay Falling from IORD	$T_{DF} \text{INPACK}(\text{IORD})$	tIGLIAL	0	45
INPACK Delay Rising from IORD	$T_{DR} \text{INPACK}(\text{IORD})$	tIGHIAH		45
IOIS16 Delay Falling from Address	$T_{DF} \text{IOIS16}(\text{ADR})$	tAVISL		35
IOIS16 Delay Rising from Address	$T_{DR} \text{IOIS16}(\text{ADR})$	tAVISH		35
Wait Delay Falling from IORD	$T_D WT(\text{IORD})$	tIGLWTL		35
Data Delay from Wait Rising	$T_D(WT)$	tWTHQV		0
Wait Width Time (Default Speed)	$T_W(WT)$	tWTLWTH		350

A basic understanding of the typical System ACE file and directory structure (shown in Figure 8) is useful when programming an FPGA target system with a CompactFlash device in the System ACE solution.

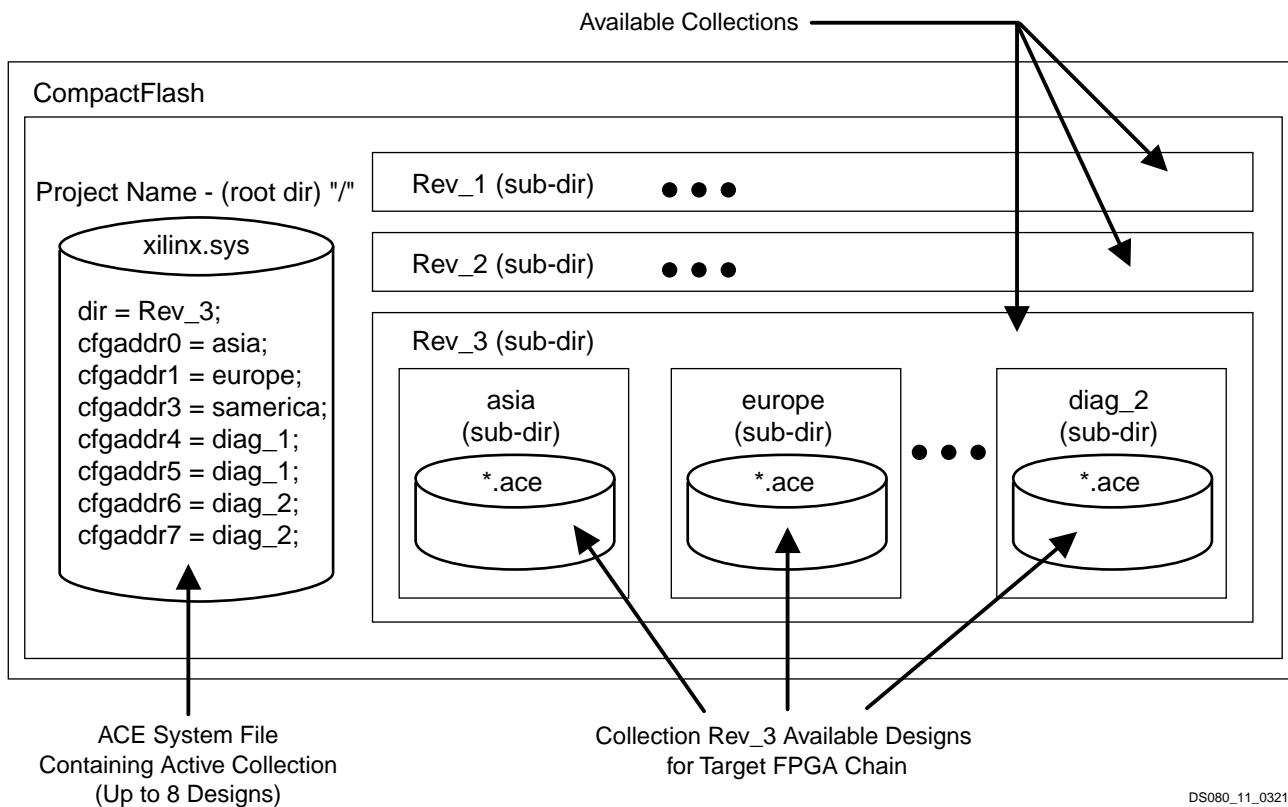


Figure 8: System ACE Directory Structure

The **.ACE** file is at the lowest level of the directory structure. The Xilinx System ACE software converts a revision of a design (bitstream) into a **.ACE** file. A **.ACE** file represents a single set of bitstreams for a particular chain of devices.

The next level up in the file structure is a collection. The collection consists of eight **.ACE** files grouped together. All of the **.ACE** files in a collection (directory) can be addressed when in the System ACE environment. There can be several collections stored on a CompactFlash device, but only one collection can be active at any given time.

The **xilinx.sys** file determines the collection from which designs can be read.

The hierarchical design of the System ACE directory structure provides the ability to maintain multiple revisions or collections of different designs in a single ACE Flash device. Each collection directory can contain one or more designs that reside in different subdirectories. Each design subdirectory should contain a single **.ACE** file that represents a single set of bitstreams for a particular chain of devices. In addition to FPGA configuration information, the collection and design subdirectories can contain other information pertaining to the system design such as system software, documentation, etc.

The **xilinx.sys** file in the root directory of the ACE Flash device is used to control which of the designs within the active collection is to be used to configure the chain of target devices. Only one collection, containing up to eight designs, can be active at one time.

The ACE Controller parses the **xilinx.sys** file to determine the active collection designs and uses the three configuration address pins or MPU register bits (CFGADDR) to select the desired design. If no **xilinx.sys** file exists in the root directory of the ACE Flash device, a single **.ACE** file in the root directory is used by System ACE as the active design.

Following are rules for the System ACE directory structure:

- System ACE configuration files must reside on the first partition of the CompactFlash device.
- The System ACE partition must be formatted as FAT12 or FAT16.
- A **xilinx.sys** or single **.ACE** file must be in the root (project) directory. A **.ACE** file is used only if the **xilinx.sys** file cannot be found in this directory.
- Only one **.ACE** file should exist in the ROOT and/or design directories. This directory structure allows the Configuration controller to be able to use the **.ACE** file to program the FPGA target system correctly.



## Microprocessor Interface (MPU)

The MPU Interface provides a useful means of monitoring the status of and controlling the System ACE Controller, as well as ACE Flash card READ / WRITE data. The MPU is not required for normal operation, but when used, it provides numerous capabilities. This interface enables communication between an MPU device and a CompactFlash module and the FPGA target system.

The MPU interface is composed of a set of registers that provide a means for communicating with CompactFlash control logic, configuration control logic, and other resources in the ACE Controller. Specifically, this interface can be used to read the identity of a CompactFlash device and read/write sectors from or to a CompactFlash device.

The MPU interface can also be used to control configuration flow. The MPU interface enables monitoring of ACE Controller configuration status and error conditions. The MPU interface can be used to delay configuration, start configuration, determine the source of configuration (CompactFlash or MPU), control the bitstream version, reset the device, and vary configuration speed.

### MPU Port Signal Description

MPU interface port signals are described in [Table 5](#).

Table 5: MPU Interface Port Signal Description

Name	Width	Direction	Active	Description
MPA	7	In	N/A	Synchronous address inputs. The internal address register is loaded by MPA by a combination of the rising edge of CLK and $\overline{MPCE}$ LOW.
MPD	16	In/Out	N/A	Synchronous data input/output pins. Both the data input and output path are registered and triggered by the rising edge of CLK.
$\overline{MPCE}$	1	In	LOW	Synchronous active LOW chip enable. $\overline{MPCE}$ LOW is used to enable the MPU interface. $\overline{MPCE}$ LOW is also used in conjunction with $\overline{MPOE}$ LOW to enable the MPD output.
$\overline{MPWE}$	1	In	LOW	Synchronous active LOW write enable. A high-to-low-to-high transition must occur on $\overline{MPWE}$ in three consecutive clock cycles in order for the write to take place. During a valid write cycle, $\overline{MPCE}$ must be LOW and MPD must be valid during the clock cycle that $\overline{MPWE}$ .
$\overline{MPOE}$	1	In	LOW	Asynchronous active LOW output enable. Both $\overline{MPOE}$ and $\overline{MPCE}$ must be LOW to read from the MPU interface. When either $\overline{MPOE}$ or $\overline{MPCE}$ is HIGH, the MPD pins of the ACE Controller are in a high-impedance state.
MPBRDY	1	Out	HIGH	Synchronous active HIGH buffer ready output. During data buffer read mode MPBRDY is HIGH when the data in the DATABUF buffer is valid. During data buffer write mode MPBRDY is HIGH when data can be written to the DATABUF buffer.
MPIRQ	1	Out	HIGH	Synchronous active HIGH interrupt request output. MPIRQ HIGH indicates that an interrupt condition has occurred in the MPU interface. All interrupt conditions must be manually cleared before MPIRQ will go LOW. MPIRQ is always LOW when interrupts are disabled.

Two important issues should be understood when using the microprocessor port:

- For the controller to be properly synchronized, the MPU must provide the clock.
- The MPU must comply with System ACE timing diagrams.

This general-purpose microprocessor interface can update the CompactFlash, read the ACE status or obtain direct access to the JTAG configuration ports using the ACE Microprocessor commands. This interface supports either 8-bit (default) or 16-bit data transfers. The bus width can be configured dynamically.

All communications between the ACE Controller and a host microprocessor involve transfer of data to or from ACE registers. There are 128 addressable registers in 8-bit mode and 64 addressable registers in 16-bit mode. For easy selection of a new configuration from CompactFlash data, the MPU interface allows for easy reconfiguration of an FPGA chain or capability.

The following sections describe supported operations when using the MPU interface.

## MPU Timing Description

This section contains timing diagrams for the MPU interface. Parameters used in the timing diagrams are described in [Table 6](#).


Table 6: MPU Interface Timing Parameters

Parameter	Symbol	Min (ns)	Max (ns)
Address setup time	$T_{SA}$	--	--
Chip enable setup time	$T_{SCE}$	--	--
Write enable setup time	$T_{SWE}$	--	--
Output enable setup time	$T_{SOE}$	--	--
Data setup time	$T_{SD}$	--	--
Clock HIGH to valid data	$T_{DD}$	--	--
Chip/Output enable LOW to valid data	$T_{DOE}$	--	--
Clock HIGH to buffer ready valid	$T_{Dbrdy}$	--	--
Hold time	$T_H$	--	--

### Single Register Read Cycle

The single register read cycle is shown in [Figure 9](#). A single register read is accomplished by asserting a valid address (MPA), asserting the chip enable ( $\overline{MPCE} = \text{LOW}$ ) and de-asserting the write enable ( $\overline{MPWE} = \text{HIGH}$ ) during the first clock cycle (Cycle 0). These signals should hold these values at least until the rising edge of the fourth clock cycle (Cycle 3).

The output enable signal should be asserted ( $\overline{MPOE} = \text{LOW}$ ) during the third clock cycle (Cycle 2). Register data associated with the specified address appears on the MPD bus two clock cycles after the falling edge of  $\overline{MPCE}$  during the assertion of  $\overline{MPCE}$ . The register read cycle is then completed by de-asserting the output enable during the fourth clock cycle (Cycle 3).

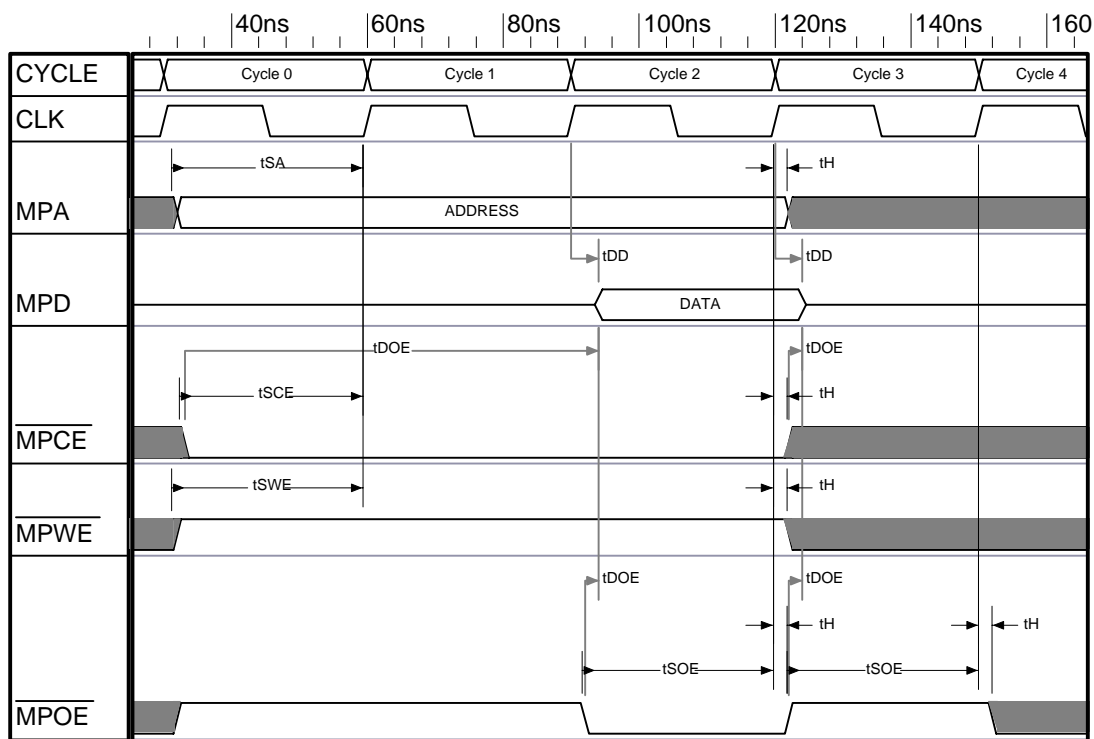


DS080\_14\_013101

Figure 9: Single Read From an ACE Register

**Single Register Write Cycle**

The single register write cycle is shown in Figure 10. A single register write is accomplished by asserting a valid address (MPA), asserting the chip enable ( $\overline{\text{MPCE}} = \text{LOW}$ ) and de-asserting the output enable ( $\overline{\text{MPOE}} = \text{HIGH}$ ) during the first clock cycle (Cycle 0). These signals should hold these values at least until the rising edge of the third clock cycle (Cycle 2).

The write enable signal should be asserted ( $\overline{\text{MPWE}} = \text{LOW}$ ) during the second clock cycle (Cycle 1). Data (MPD) to be written to the specified address should be asserted during the same clock cycle that the write enable is asserted (Cycle 1). The register write cycle is then completed by de-asserting the write enable during the third clock cycle (Cycle 2).

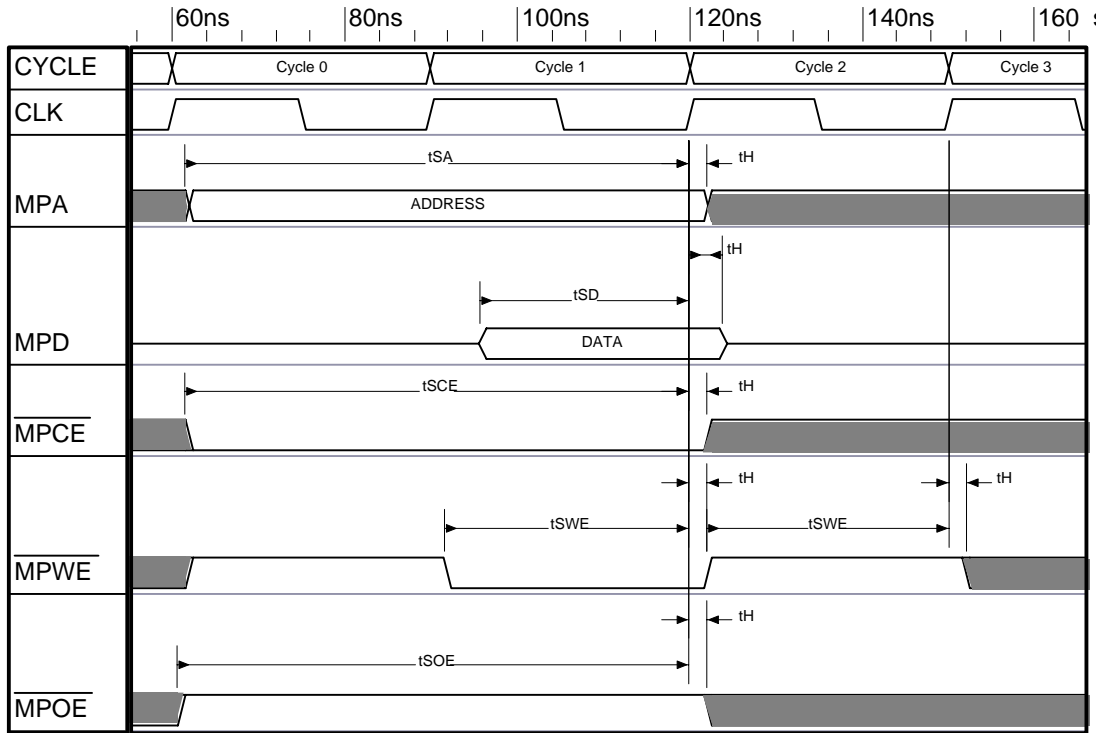


DS080\_15\_013101

Figure 10: Single WORD Write to an ACE Register

### Multiple Register Read Timing

The minimum timing requirements for sequential register read cycles are shown in Figure 11. Sequential read cycles are identical to single read cycles, except that the chip enable ( $\overline{\text{MPCE}}$ ) and write enable ( $\overline{\text{MPWE}}$ ) signals do not need to be de-asserted between read cycles.

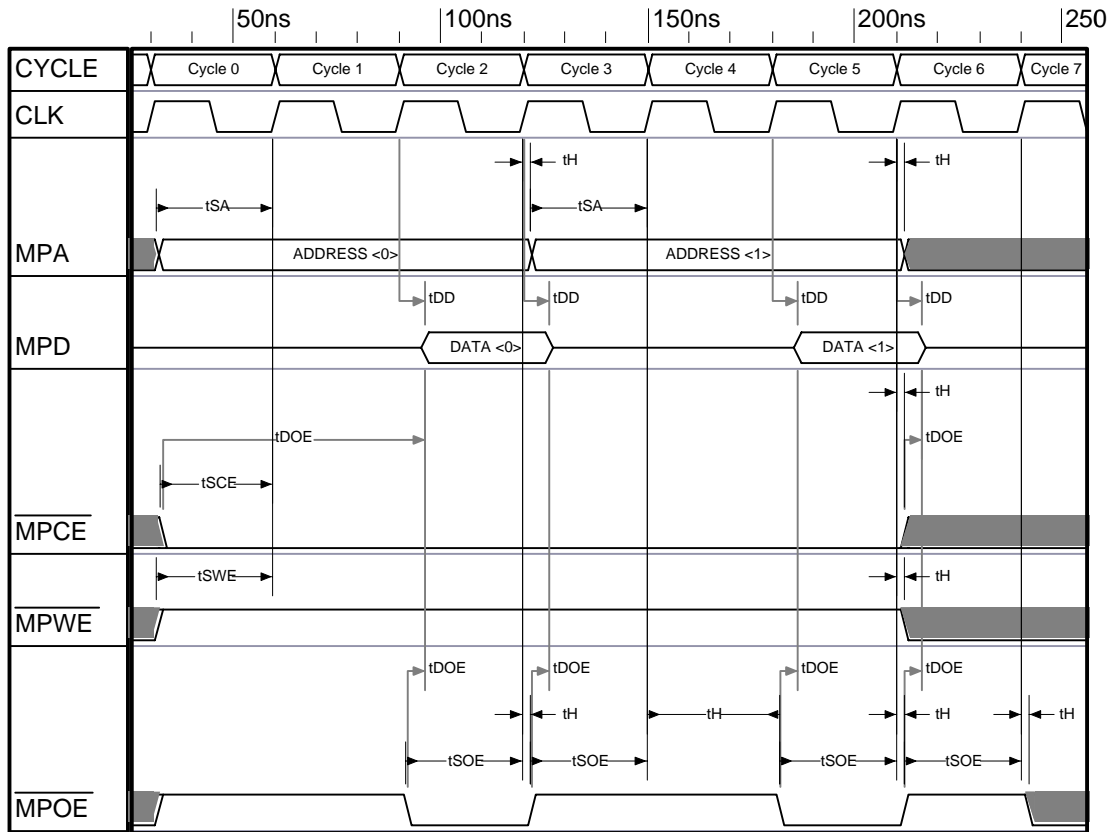


DS080\_16\_013101

Figure 11: Multiple WORD Reads From ACE Register(s)

### Multiple Register Write Timing

The minimum timing requirements for sequential write cycles are shown in Figure 12. Sequential write cycles are identical to single write cycles except that the chip enable ( $\overline{MPCE}$ ) and output enable ( $\overline{MPOE}$ ) signals do not need to be de-asserted between write cycles.

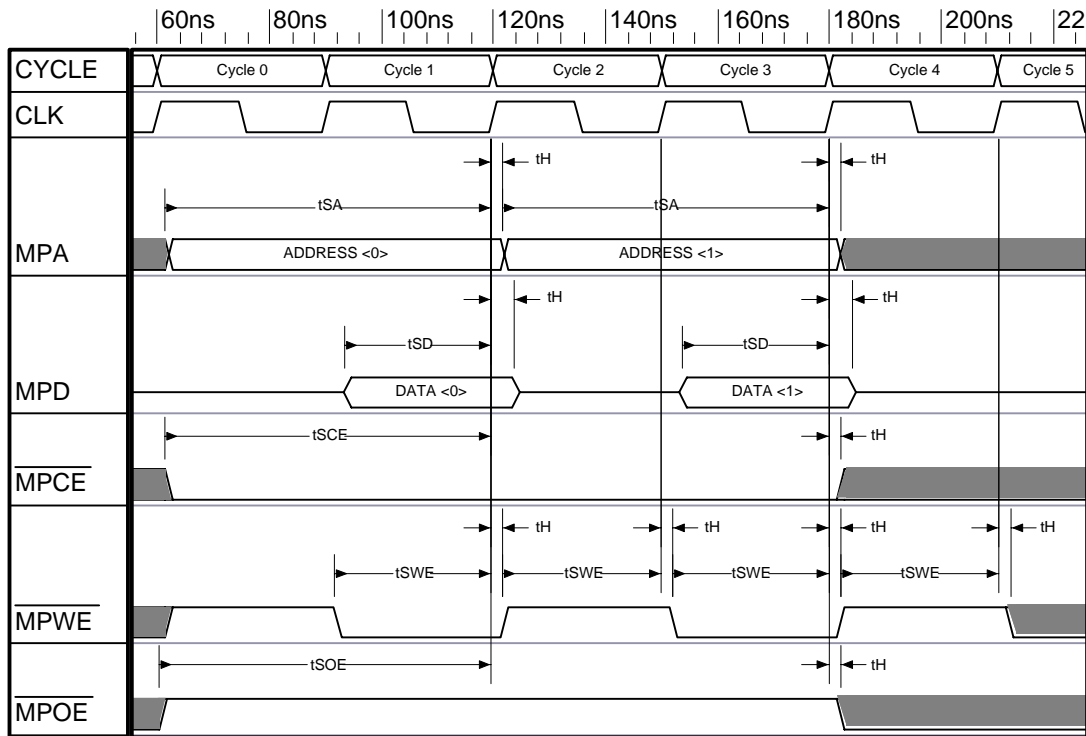

DS080\_17\_020101

Figure 12: Multiple WORD Writes to ACE Register(s)

### Data Buffer Ready Timing

The data buffer ready ( $\overline{MPBRDY}$ ) signal indicates whether the data buffer is ready to accept new data during a write cycle or whether the data buffer contains valid data to be read during a read cycle. The data buffer itself is sixteen words deep, where each word is 16 bits wide.


The data buffer mode transfer direction is identified by the state of the DATABUFMODE bit in the STATUSREG register:

- DATABUFMODE = 0 indicates data buffer read mode
- DATABUFMODE = 1 indicates data buffer write mode

The data buffer mode depends on the type of command that was issued to the ACE Controller. If an IdentifyMemCard or ReadMemCard command was issued, then the data buffer remains in read mode until the command is finished executing (i.e., all sector data has been read from the buffer). If a WriteMemCard command was issued, then the data buffer remains in write mode until the command is finished executing (i.e., all sector data has been written to the buffer).

### Data Buffer Read Cycle Ready Timing

When the data buffer is in read mode and the last data word is read from the buffer, the data buffer ready signal will go inactive (MPBRDY = LOW) two clock cycles following the last clock cycle that the output enable is active (MPOE = LOW). Any attempt to read data out of an "empty" data buffer (MPOE = LOW while MPBRDY = LOW) results in invalid data. Valid and invalid data buffer reads are shown in Figure 13.

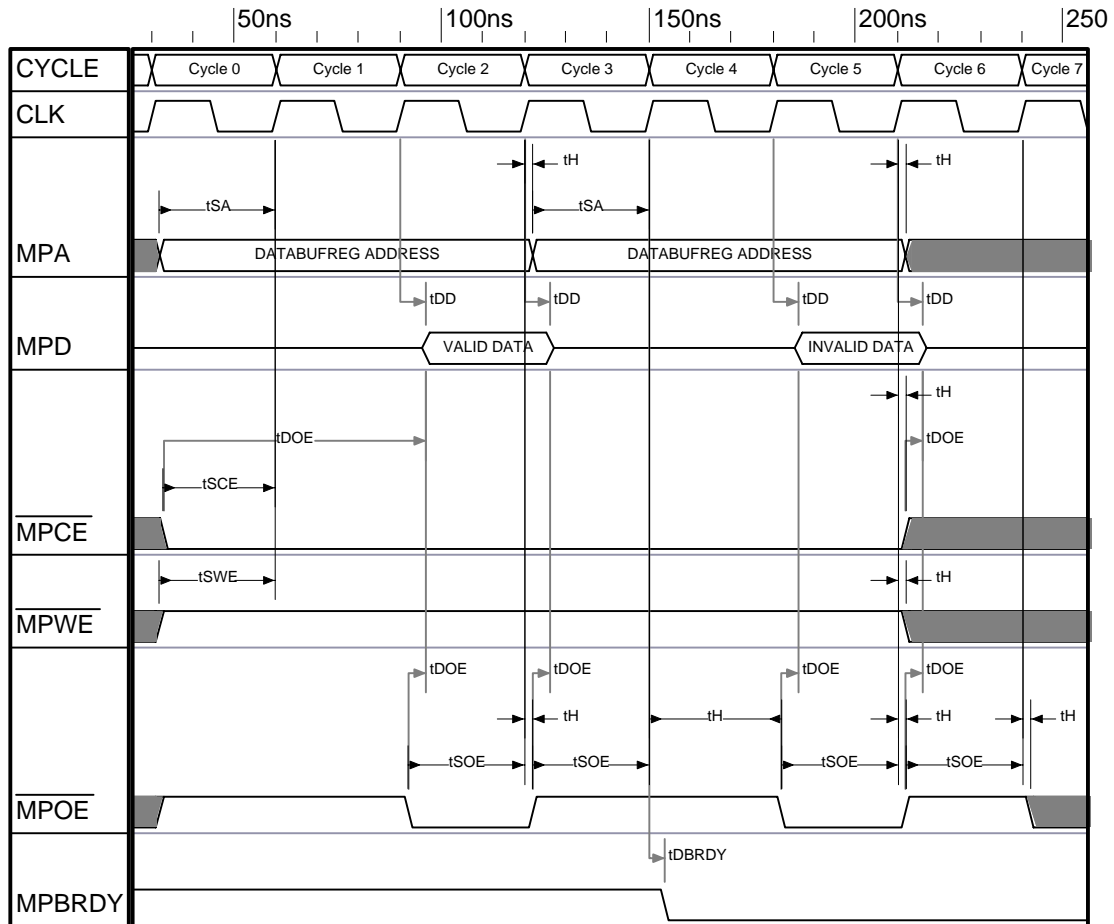


DS080\_18\_020101

Figure 13: Valid and Invalid Reads From DATABUFREG Data Buffer

### Data Buffer Read Cycle Ready Timing

When the data buffer is in write mode and the last available space for a data word has been filled, the data buffer ready signal will go inactive ( $\overline{\text{MPBRDY}} = \text{LOW}$ ) two clock cycles following the last clock cycle that the write enable is active ( $\overline{\text{MPWE}} = \text{LOW}$ ). Any attempt to write data to a "full" data buffer ( $\overline{\text{MPWE}} = \text{LOW}$  while  $\overline{\text{MPBRDY}} = \text{LOW}$ ) does not result in a successful write to the buffer. Valid and invalid data buffer writes are shown in **Figure 14**.

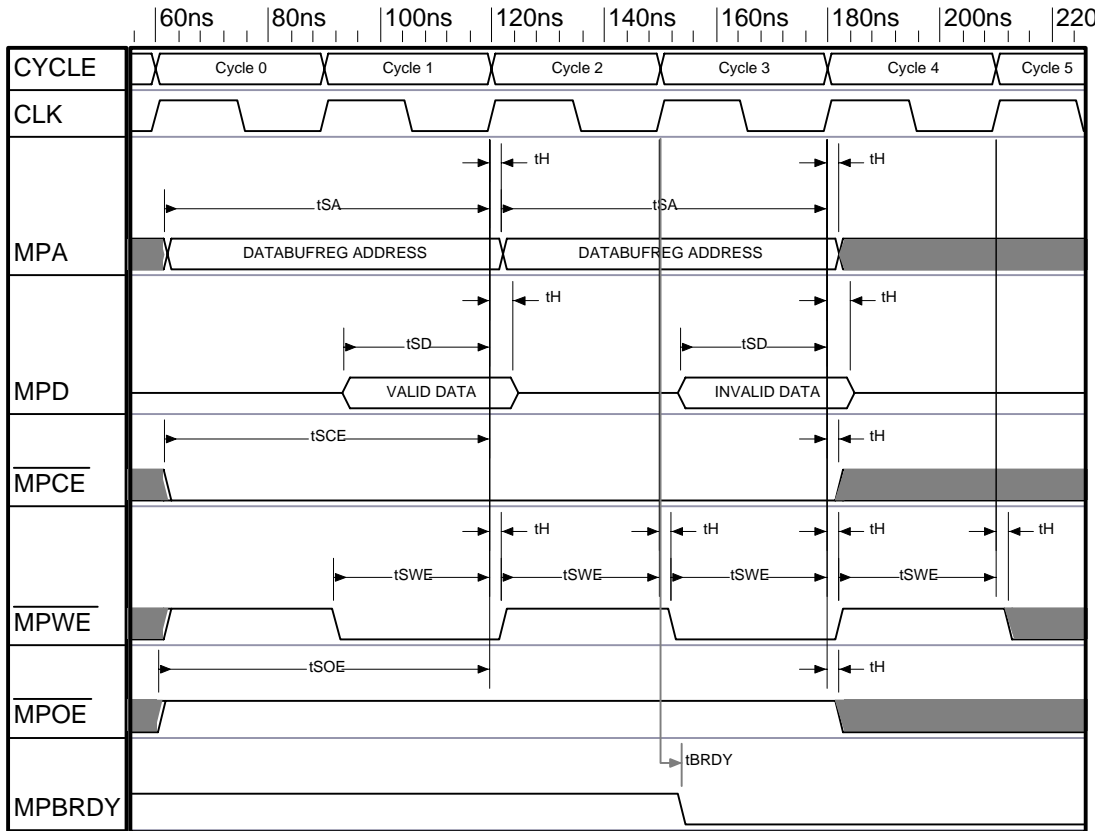


DS080\_19\_020101

Figure 14: Valid and Invalid Writes to DATABUFREG Data Buffer

### Interrupt Timing

The interrupt request and clearing cycles are shown in **Figure 15**. In **Figure 15**, the interrupt request (MPIRQ = HIGH) occurs sometime before Cycle 0. The interrupt request is cleared by performing a single MPU write cycle that sets RESETIRQ = 1 (bit number 11) in the CONTROLREG(15:0) register (BYTE address 0x19 or WORD address 0x0C).

The MPU interrupt request line (MPIRQ) remains active HIGH until the RESETIRQ bit is set. The MPIRQ line becomes inactive LOW two cycles after the completion of the RESETIRQ write cycle (Cycle 4). For subsequent MPU interrupt requests to be enabled, the RESETIRQ bit must be reset and one of the three IRQ enable bits (DATABUFRDYIRQ, ERRORIRQ, and/or CFGDONEIRQ) in the CONTROLREG register should be set.

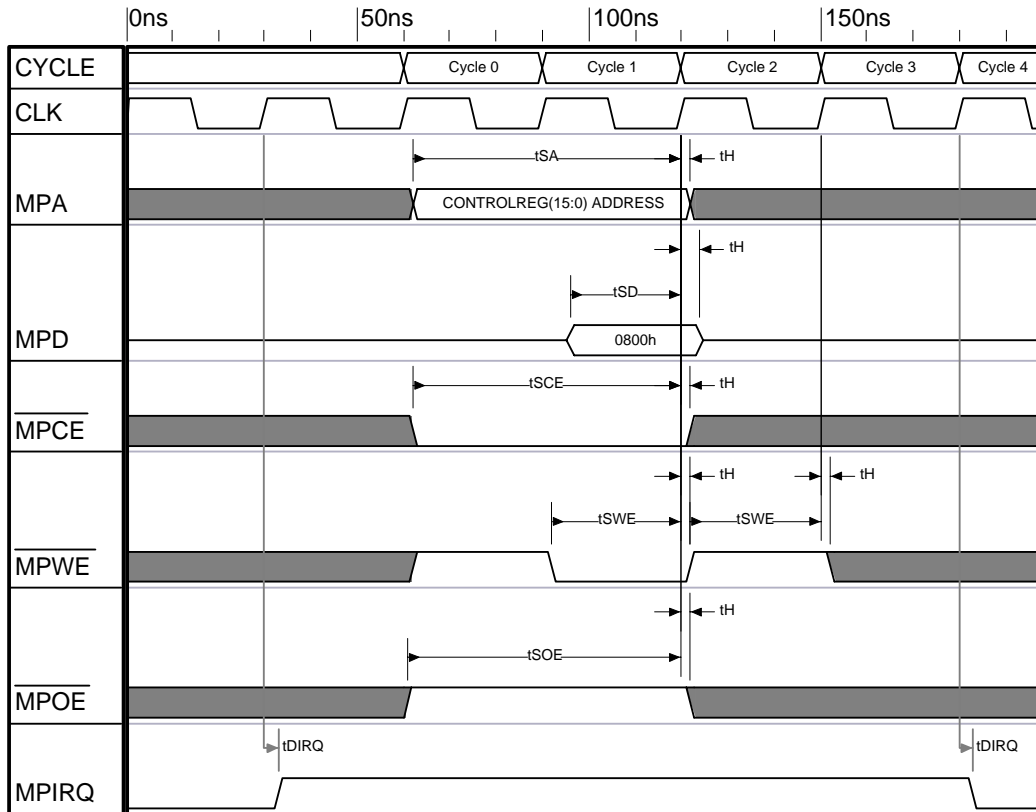

DS080\_44\_030501

Figure 15: Interrupt Request Timing



## Register Specification

The BYTE-mode register space of the MPU interface is shown in [Table 7](#).

**Table 7: Register Address Map (BYTE Mode Addresses)**

BYTE Address (MPA [6:0])	Register Name	Width	Mode	Description
0x00	BUSMODEREG	1	RW	Used to control the data bus access mode (8-bit BYTE mode or 16-bit WORD mode)
0x01	BUSMODEREG	1	RW	
0x02	--	--	--	Reserved
0x03	--	--	--	Reserved
0x04	STATUSREG(7:0)	8	R	Used to monitor ACE Controller status
0x05	STATUSREG(15:8)	8	R	
0x06	STATUSREG(23:16)	8	R	
0x07	STATUSREG(31:24)	8	R	
0x08	ERRORREG(7:0)	8	R	Used to indicate any existing error condition
0x09	ERRORREG(15:8)	8	R	
0x0A	ERRORREG(23:16)	8	R	
0x0B	ERRORREG(31:24)	8	R	
0x0C	CFGLBAREG(7:0)	8	R	Logical block address used by the Configuration Controller during CompactFlash data transfers
0x0D	CFGLBAREG(15:8)	8	R	
0x0E	CFGLBAREG(23:16)	8	R	
0x0F	CFGLBAREG(27:24)	4	R	
0x10	MPULBAREG(7:0)	8	RW	Logical block address used by the MPU interface during CompactFlash data transfers
0x11	MPULBAREG(15:8)	8	RW	
0x12	MPULBAREG(23:16)	8	RW	
0x13	MPULBAREG(27:24)	4	RW	
0x14	SECCNTCMDREG(7:0)	8	RW	Sector count and CompactFlash command register
0x15	SECCNTCMDREG(15:8)	8	RW	
0x16	VERSIONREG(7:0)	8	R	Version register
0x17	VERSIONREG(15:8)	8	R	
0x18	CONTROLREG(7:0)	8	RW	Used to control ACE Controller operations
0x19	CONTROLREG(15:8)	8	RW	
0x1A	CONTROLREG(23:16)	8	RW	
0x1B	CONTROLREG(31:24)	8	RW	
0x1C	FATSTATREG(7:0)	8	R	Contains information about the FAT table of the first valid partition found in the CompactFlash device.
0x1D	FATSTATREG(15:8)	8	R	
0x1E thru 0x3F	--	--	--	Reserved
Even Values 0x40 thru 0x7E	DATABUFREG(7:0)	8	RW	Address range that provides read and write access to the data buffer.
Odd Values 0x41 thru 0x7F	DATABUFREG(15:8)	8	RW	

The 16-bit WORD mode register space of the MPU interface is shown in [Table 8](#).

**Table 8: Register Address Map (WORD Mode Addresses)**

WORD Address (MPA [6:1])	Register Name	Width	Mode	Description
0x00	BUSMODEREG	1	RW	Used to control the data bus access mode (8-bit BYTE mode or 16-bit WORD mode)
0x01	--	--	--	Reserved
0x02	STATUSREG(15:0)	16	R	Used to monitor ACE Controller status
0x03	STATUSREG(31:16)	16	R	
0x04	ERRORREG(15:0)	16	R	Used to indicate any existing error condition
0x05	ERRORREG(31:16)	16	R	
0x06	CFGLBAREG(15:0)	16	R	Logical block address used by the Configuration Controller during CompactFlash data transfers
0x07	CFGLBAREG(27:16)	12	R	
0x08	MPULBAREG(15:0)	16	RW	Logical block address used by the MPU interface during CompactFlash data transfers
0x09	MPULBAREG(27:16)	12	RW	
0x0A	SECCNTCMDREG(15:0)	16	RW	Sector count and CompactFlash command register
0x0B	VERSIONREG(15:0)	16	R	Version register
0x0C	CONTROLREG(15:0)	16	RW	Used to control ACE Controller operations
0x0D	CONTROLREG(31:16)	16	RW	
0x0E	FATSTATREG(15:0)	16	R	Contains information about the FAT table of the first valid partition found in the CompactFlash device.
0x0F thru 0x1F	--	--	--	Reserved
0x20 thru 0x3F	DATABUFREG(15:0)	16	RW	Address range that provides read and write access to the data buffer.

### BUSMODEREG Register

The BUSMODEREG register is used to control the mode of the MPU address and data bus. The single-bit BUSMODEREG register is aliased across two BYTE addresses (0x00-0x01) and one 16-bit WORD address (0x0). This register aliasing ensures that the MPU bus mode can be set regardless of the mode of the microprocessor that is communicating with the ACE Controller. [Table 9](#) provides a description of the BUSMODEREG register bits.

**Table 9: BUSMODEREG Register Bit Descriptions**

Bit	Name	Description
0	BUSMODE0	The BUSMODE bits are used to select the width of the data bus portion of the Microprocessor/MultiLINUX bus (default is 0): <ul style="list-style-type: none"> <li>When 0, the MPU interface is in BYTE mode (all MPU address bits are used, but only MPU data bits 7:0 are used).</li> <li>When 1, the MPU interface is in WORD mode (all MPU data bits are used, but only MPU address bits 6:1 are used).</li> </ul>
1	--	Reserved
2	--	Reserved
3	--	Reserved
4	--	Reserved
5	--	Reserved
6	--	Reserved
7	--	Reserved

**STATUSREG Register**

The STATUSREG register allows a microprocessor to monitor important ACE Controller operating modes. This is also the register that is read upon receiving an IRQ request in order to identify an interrupt source. Table 10 provides a description of the STATUSREG register bits.

Table 10: STATUSREG Register Bit Descriptions

Bit	Name	Description
0	CFGLOCK	Configuration controller lock status: <ul style="list-style-type: none"> <li>• 0 means that the configuration controller does not currently have a lock on the CompactFlash controller resource</li> <li>• 1 means that the configuration controller has successfully locked the CompactFlash controller resource</li> </ul>
1	MPULOCK	MPU interface lock status: <ul style="list-style-type: none"> <li>• 0 means that the MPU interface does not currently have a lock on the CompactFlash controller resource</li> <li>• 1 means that the MPU interface has successfully locked the CompactFlash controller resource</li> </ul>
2	CFGERROR	Configuration Controller error status: <ul style="list-style-type: none"> <li>• 0 means that no Configuration Controller error condition exists</li> <li>• 1 means that an error has occurred in the Configuration Controller (check the ERRORREG register for more information)</li> </ul>
3	CFCERROR	CompactFlash Controller error status: <ul style="list-style-type: none"> <li>• 0 means that no CompactFlash Controller error condition exists</li> <li>• 1 means that an error has occurred in the CompactFlash controller (check the ERRORREG register for more information)</li> </ul>
4	CFDETECT	CompactFlash detect flag: <ul style="list-style-type: none"> <li>• 0 means that no CompactFlash device is connected to the ACE Controller</li> <li>• 1 means that a CompactFlash is connected to the ACE Controller</li> </ul>
5	DATABUFRDY	Data buffer ready status: <ul style="list-style-type: none"> <li>• 0 means that the data buffer is not ready for data transfer</li> <li>• 1 means that the data buffer is ready for data to be transferred out of the buffer when reading from the CompactFlash controller or into the buffer when writing to the CompactFlash or Configuration controller</li> </ul>
6	DATABUFMODE	Data buffer mode status: <ul style="list-style-type: none"> <li>• 0 means read-only mode</li> <li>• 1 means write-only mode</li> </ul>
7	CFGDONE	Configuration DONE status: <ul style="list-style-type: none"> <li>• 0 means that the configuration process has not completed</li> <li>• 1 means that the entire ACE Controller configuration file has been executed and configuration of all devices in the target Boundary-Scan chain is complete</li> </ul>
8	RDYFORCFCMD	Ready for CompactFlash controller command: <ul style="list-style-type: none"> <li>• 0 means not ready for command</li> <li>• 1 means ready for command</li> </ul>
9	CFGMODEPIN	Configuration mode pin (note that this can be overridden by the CFGMODE bit in the CONTROLREG register): <ul style="list-style-type: none"> <li>• 1 means automatically start the configuration process immediately after ACE Controller Reset</li> <li>• 0 means wait for CFGSTART bit in CONTROLREG before starting the configuration process</li> </ul>
10	--	Reserved
11	--	Reserved
12	--	Reserved

Table 10: STATUSREG Register Bit Descriptions (Continued)

Bit	Name	Description
13	CFGADDRPIN0	Configuration address pins that are used as an offset into the system configuration file in the CompactFlash device used to locate the ACE Controller configuration data file (note that these pins can be overridden by the contents of the CFGADDRBIT[2:0] of the CONTROLREG register)
14	CFGADDRPIN1	
15	CFGADDRPIN2	
16	CFRDYNOTBSY	CompactFlash ready-not-busy flag (i.e., identical to the state of the RDYNBSY pin of the CompactFlash device): <ul style="list-style-type: none"> <li>• 0 means that the CompactFlash device is not ready (i.e., it is busy)</li> <li>• 1 means that the CompactFlash card is not busy and is ready to accept commands</li> </ul>
17	CFBSY	CompactFlash BUSY bit (reflects the state of the BSY bit in the status register of the CompactFlash device): <ul style="list-style-type: none"> <li>• 0 means that the CompactFlash device is not busy</li> <li>• 1 means that the CompactFlash command register and data buffer cannot be accessed; Bits 1-6 of the STATUSREG register are not valid when this bit is set</li> </ul>
18	CFRDY	CompactFlash ready for operation bit (reflects the state of the RDY bit in the status register of the CompactFlash device): <ul style="list-style-type: none"> <li>• 0 means the CompactFlash device is NOT ready to accept commands</li> <li>• 1 means CompactFlash device is ready to accept commands</li> </ul>
19	CFDWF	CompactFlash data write fault bit (reflects the state of the DWF bit in the status register of the CompactFlash device): <ul style="list-style-type: none"> <li>• 0 means that a write fault has NOT occurred</li> <li>• 1 means that a write fault has occurred</li> </ul>
20	CFDSC	CompactFlash ready bit (reflects the state of the DSC bit in the status register of the CompactFlash device): <ul style="list-style-type: none"> <li>• 0 means that the CompactFlash device is NOT ready</li> <li>• 1 means that the CompactFlash device is ready</li> </ul>
21	CFDRQ	CompactFlash data request bit (reflects the state of the DRQ bit in the status register of the CompactFlash device): <ul style="list-style-type: none"> <li>• 0 means that no data is ready to be transferred to/from the data buffer of the CompactFlash device</li> <li>• 1 means that information be transferred to/from the data buffer of the CompactFlash device</li> </ul>
22	CFCORR	CompactFlash correctable error bit (reflects the state of the CORR bit in the status register of the CompactFlash device): <ul style="list-style-type: none"> <li>• 0 means that a correctable data error was NOT encountered</li> <li>• 1 means that a correctable data error was encountered (check the ERRORREG register for more information)</li> </ul>
23	CFERR	CompactFlash ERROR bit (reflects the state of the ERR bit in the status register of the CompactFlash device): <ul style="list-style-type: none"> <li>• 0 means that no error has occurred during the execution of the previous command</li> <li>• 1 means that the previous command has ended in some type of error (check the ERRORREG register for more information)</li> </ul>
24	--	Reserved
25	--	Reserved
26	--	Reserved
27	--	Reserved
28	--	Reserved
29	--	Reserved
30	--	Reserved
31	--	Reserved

## ERRORREG Register

The ERRORREG register identifies specific information on any error conditions that might exist in the ACE Controller.

Table 11 provides a description of the ERRORREG register bits.

Table 11: ERRORREG Register Bit Descriptions

Bit	Name	Description
0	CARDRESETERR	CompactFlash card reset error: <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that the CompactFlash card has failed to reset properly before a time-out condition occurred</li> </ul>
1	CARDRDYERR	CompactFlash card ready error: <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that the CompactFlash card has failed to become properly ready for commands before a time-out condition occurred</li> </ul>
2	CARDREADERR	CompactFlash card read error: <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that a CompactFlash data read command (either ReadMemCardData or IdentifyMemCard) has failed</li> </ul>
3	CARDWRITEERR	CompactFlash card write error: <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that a CompactFlash data write command (WriteMemCardData) has failed</li> </ul>
4	SECTORRDYERR	CompactFlash sector ready: <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that a sector has failed to become properly valid during a CompactFlash read or write command before a time-out condition occurred</li> </ul>
5	CFGADDRERR	CFGADDR error: <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that the CFGADDR (i.e., the CFGADDR(15:0) register or CFGADDR(1:0) pins, depending on the state of the FORCECFGADDR bit in the CONTROLREG register) does not correspond to a valid location in the CompactFlash</li> </ul>
6	CFGFAILED	Configuration failure error: <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that configuration of one or more devices in the target Boundary-Scan chain has failed</li> </ul>
7	CFGREADERR	Configuration read error: <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that an error occurred while reading configuration information from CompactFlash</li> </ul>
8	CFGINSTRERR	Configuration instruction error: <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that an invalid instruction was encountered during configuration</li> </ul>
9	CFGINITERR	Configuration INIT monitor error: <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that the <math>\overline{\text{CFGINIT}}</math> pin did not go HIGH within 500 ms of the start of configuration</li> </ul>
10	--	Reserved

Table 11: ERRORREG Register Bit Descriptions (Continued)

Bit	Name	Description
11	CFBBK	CompactFlash bad block error (reflects the state of the BBK bit in the error register of the CompactFlash device): <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that a bad block has been detected</li> </ul>
12	CFUNC	CompactFlash uncorrectable error (reflects the state of the UNC bit in the error register of the CompactFlash device): <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that an uncorrectable error has been encountered</li> </ul>
13	CFIDNF	CompactFlash ID not found error (reflects the state of the IDNF bit in the error register of the CompactFlash device): <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that the requested sector ID is in error or cannot be found</li> </ul>
14	CFABORT	CompactFlash command abort error (reflects the state of the ABRT bit in the error register of the CompactFlash device): <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that the command has been aborted because of a CompactFlash status condition (i.e., Not Ready, Write Fault) or when an invalid command has been issued</li> </ul>
15	CFAMNF	CompactFlash general error (reflects the state of the AMNF bit in the error register of the CompactFlash device): <ul style="list-style-type: none"> <li>• 0 means no error</li> <li>• 1 means that a general error has occurred</li> </ul>
16	--	Reserved
17	--	Reserved
18	--	Reserved
19	--	Reserved
20	--	Reserved
21	--	Reserved
22	--	Reserved
23	--	Reserved
24	--	Reserved
25	--	Reserved
26	--	Reserved
27	--	Reserved
28	--	Reserved
29	--	Reserved
30	--	Reserved
31	--	Reserved

## CFGLBAREG Register

The CFGLBAREG read-only register contains the logical block address used by the ACE Controller configuration logic during CompactFlash read/write operations. The CFGLBAREG register affects only transfers between the ACE Controller configuration logic and the CompactFlash card. The MPU uses a separate set of registers (MPULBAREG(27:0)) to transfer data to and from the CompactFlash card. [Table 12](#) provides a description of the CFGLBAREG register bits.

Table 12: CFGLBAREG Register Bit Descriptions

Bit	Name	Description
0	CFGLBA00	Logical Block Address used during CompactFlash read or write sector commands: each block address points to a sector location which is made up of 512 bytes (i.e., maximum CompactFlash device capacity is up to 128 gigabytes, or 137,438,953,472 bytes)
1	CFGLBA01	
2	CFGLBA02	
3	CFGLBA03	
4	CFGLBA04	
5	CFGLBA05	
6	CFGLBA06	
7	CFGLBA07	
8	CFGLBA08	
9	CFGLBA09	
10	CFGLBA10	
11	CFGLBA11	
12	CFGLBA12	
13	CFGLBA13	
14	CFGLBA14	
15	CFGLBA15	
16	CFGLBA16	
17	CFGLBA17	
18	CFGLBA18	
19	CFGLBA19	
20	CFGLBA20	
21	CFGLBA21	
22	CFGLBA22	
23	CFGLBA23	
24	CFGLBA24	
25	CFGLBA25	
26	CFGLBA26	
27	CFGLBA27	
28	--	Reserved
29	--	Reserved
30	--	Reserved
31	--	Reserved

## MPULBAREG Register

The MPULBAREG read-write register contains the logical block address that is used by the MPU interface during CompactFlash read/write operations. The MPULBAREG register affects only transfers between the MPU interface and the CompactFlash card. ACE Controller configuration logic maintains a separate set of registers (CFGLBAREG(27:0)) for use when transferring data to and from the CompactFlash card. [Table 13](#) provides a description of MPULBAREG register bits.

Table 13: MPULBAREG Register Bit Descriptions

Bit	Name	Description
0	MPULBA00	Logical Block Address used during CompactFlash read or write sector commands: each block address points to a sector location which is made up of 512 bytes (i.e., maximum CompactFlash device capacity is up to 128 gigabytes, or 137,438,953,472 bytes)
1	MPULBA01	
2	MPULBA02	
3	MPULBA03	
4	MPULBA04	
5	MPULBA05	
6	MPULBA06	
7	MPULBA07	
8	MPULBA08	
9	MPULBA09	
10	MPULBA10	
11	MPULBA11	
12	MPULBA12	
13	MPULBA13	
14	MPULBA14	
15	MPULBA15	
16	MPULBA16	
17	MPULBA17	
18	MPULBA18	
19	MPULBA19	
20	MPULBA20	
21	MPULBA21	
22	MPULBA22	
23	MPULBA23	
24	MPULBA24	
25	MPULBA25	
26	MPULBA26	
27	MPULBA27	
28	--	Reserved
29	--	Reserved
30	--	Reserved
31	--	Reserved



## SECCNTCMDREG Register

The SECCNTCMDREG register provides the means for an MPU interface to set the sector count and execute CompactFlash Controller commands. [Table 14](#) provides a description of the SECCNTCMDREG register bits.

The SECCNT bits of the SECCNTCMDREG register specify the number of sectors to transfer during each ReadMemCardData or WriteMemCardData command:

- A SECCNT value of 1 to 255 indicates to the CompactFlash device that 1 to 255 sectors should be transferred.
- A SECCNT value of 0 indicates that 256 sectors should be transferred.

The CMD bits of the SECCNTCMDREG register identify a specific command to be executed:

- If the MPU has NOT successfully locked access to the CompactFlash Controller, then writes to the CMD bits of the SECCNTCMDREG register do not change the value of the register.
- If the MPU has successfully locked access to the CompactFlash Controller and a non-zero value is written to the CMD bits of the SECCNTCMDREG register, then the specified command is executed by the CompactFlash Controller.
- If the MPU has successfully locked access to the CompactFlash Controller and a zero value is written to the CMD bits of the SECCNTCMDREG register, there is no effect on the value of the CMD bits. The only way to clear the CMD bits is to issue the cfAbort command, which aborts the currently executing command and waits until the CompactFlash Controller clears the CMD bits.

Table 14: SECCNTCMDREG Register Bit Descriptions

Bit	Name	Description
0	SECCNT0	Sector Count used during CompactFlash read or write sector commands: each sector is made up of 512 bytes
1	SECCNT1	
2	SECCNT2	
3	SECCNT3	
4	SECCNT4	
5	SECCNT5	
6	SECCNT6	
7	SECCNT7	
8	CMD0	Command value: 0x0 : Reserved 0x1 : ResetMemCard command 0x2 : IdentifyMemCard command 0x3 : ReadMemCardData command 0x4 : WriteMemCardData command 0x5 : Reserved 0x6 : Abort command 0x7 : Reserved
9	CMD1	
10	CMD2	
11	--	Reserved
12	--	Reserved
13	--	Reserved
14	--	Reserved
15	--	Reserved

## VERSIONREG Register

The VERSIONREG register holds the ACE Controller version number in the form of a 4-bit major version field, a 4-bit minor version field, and an 8-bit revision/build number field. [Table 15](#) provides a description of the VERSIONREG register bits.

Table 15: VERSIONREG Register Bit Descriptions

Bit	Name	Description
0	VERSION0	Revision / build number: MSB is bit 7, LSB is bit 0
1	VERSION1	
2	VERSION2	
3	VERSION3	
4	VERSION4	
5	VERSION5	
6	VERSION6	
7	VERSION7	
8	VERSION8	Minor version number: MSB is bit 11, LSB is bit 8
9	VERSION9	
10	VERSION10	
11	VERSION11	
12	VERSION12	Major version number: MSB is bit 15, LSB is bit 12
13	VERSION13	
14	VERSION14	
15	VERSION15	

## CONTROLREG Register

The CONTROLREG register provides the means for the MPU interface to control ACE Controller functionality. Table 16 provides a description of the CONTROLREG register bits.

Table 16: CONTROLREG Register Bit Descriptions

Bit	Name	Description
0	FORCELOCKREQ	Forces the CompactFlash arbitration logic to grant a lock to the MPU interface based on the value of the LOCKREQ bit of the CONTROLREG register (default is 0): <ul style="list-style-type: none"> <li>• 0 means do not force MPU lock request (i.e., arbitrate between Configuration Controller and MPU interface)</li> <li>• 1 means force MPU lock request (i.e., do not perform arbitration: grant lock request based only on MPU requests)</li> </ul>
1	LOCKREQ	CF arbitration lock request signal; Once a lock is granted, the LOCKREQ must be de-asserted before the lock is removed (default is 0): <ul style="list-style-type: none"> <li>• 0 means do not request CompactFlash access lock</li> <li>• 1 means request CompactFlash access lock</li> </ul>
2	FORCECFGADDR	Forces the overriding of the CFGADDR(1:0) pins in favor of using the CFGADDRBIT(2:0) bits of the CONTROLREG(15:13) register (default is 0): <ul style="list-style-type: none"> <li>• 0 means use the CFGADDR(1:0) pins</li> <li>• 1 means use the CONTROLREG(15:13) register bits</li> </ul>
3	FORCECFGMODE	Forces the overriding of CFGMODEPIN in favor of using the CFGMODE bit of the CONTROLREG register (default is 0): <ul style="list-style-type: none"> <li>• 0 means use CFGMODEPIN</li> <li>• 1 means use the CFGMODE bit of the CONTROLREG register</li> </ul>
4	CFGMODE	Configuration mode (default is 0): <ul style="list-style-type: none"> <li>• 1 means automatically start the configuration process immediately after ACE Controller Reset</li> <li>• 0 means wait for CFGSTART bit in CONTROLREG before starting the configuration process</li> </ul>
5	CFGSTART	Configuration start bit (default is 0): <ul style="list-style-type: none"> <li>• 0 means do not start configuration</li> <li>• 1 means start configuration process</li> </ul>
6	CFGSEL	Configuration select (default is 0): <ul style="list-style-type: none"> <li>• 0 means configure from CompactFlash</li> <li>• 1 means configure from MPU interface</li> </ul>
7	CFGRESET	Configuration/CompactFlash controller reset (default is 0): <ul style="list-style-type: none"> <li>• 0 means do not reset</li> <li>• 1 means reset the Configuration and CompactFlash controllers (this also causes a "soft-reset" of the CompactFlash device)</li> </ul>
8	DATABUFRDYIRQ	Data buffer ready IRQ enable (default is 0): <ul style="list-style-type: none"> <li>• 1 means interrupts are enabled for when data buffer is ready for transfer of data into or out of the buffer</li> <li>• 0 means data buffer ready interrupts are disabled</li> </ul>
9	ERRORIRQ	Error IRQ enable (default is 0): <ul style="list-style-type: none"> <li>• 1 means interrupts are enabled for when an error occurs</li> <li>• 0 means error interrupts are disabled</li> </ul>
10	CFGDONEIRQ	Configuration DONE IRQ enable (default is 0): <ul style="list-style-type: none"> <li>• 1 means interrupts are enabled for when configuration is DONE</li> <li>• 0 means configuration DONE interrupts are disabled</li> </ul>

Table 16: CONTROLREG Register Bit Descriptions (Continued)

Bit	Name	Description
11	RESETIRQ	Resets the interrupt request line when a '1' is written to this register bit. Note that a '0' must be written to this register bit in order to re-arm for subsequent interrupt conditions.
12	$\overline{\text{CFGPROG}}$	Inverted ACE Controller $\overline{\text{CFGPROG}}$ pin control (default is 0): <ul style="list-style-type: none"> <li>• 0 means set the <math>\overline{\text{CFGPROG}}</math> pin to its inactive HIGH state of 1</li> <li>• 1 means set the <math>\overline{\text{CFGPROG}}</math> pin to its active LOW state of 0</li> </ul>
13	CFGADDRBIT0	Configuration address register bits that are used as an offset into the system configuration file in the CompactFlash device used to locate the ACE Controller configuration data file (note that these register bits can be used to override the CFGADDR[2:0] pins of the ACE Controller)
14	CFGADDRBIT1	
15	CFGADDRBIT2	
16	CFGCLKSPDSEL0	Configuration clock speed mode select: divide system clock by 2 raised to the power of CFGCLKSPDSEL. For instance, $2^0 = \text{divide by } 1$ , $2^1 = \text{divide by } 2$ , $2^2 = \text{divide by } 4$ , etc. (default is 0)
17	CFGCLKSPDSEL1	
18	CFGCLKSPDSEL2	
19	--	Reserved
20	--	Reserved
21	--	Reserved
22	--	Reserved
23	--	Reserved
24	--	Reserved
25	--	Reserved
26	--	Reserved
27	--	Reserved
28	--	Reserved
29	--	Reserved
30	--	Reserved
31	--	Reserved

## FATSTATREG Register

The FATSTATREG register contains information about the first valid partition of the CompactFlash device such as the boot record and FAT types found. [Table 17](#) provides a description of the FATSTATREG register bits.

Table 17: FATSTATREG Register Bit Descriptions

Bit	Name	Description
0	MBRVALID	Master boot record (MBR) valid flag: <ul style="list-style-type: none"> <li>• 0 means no MBR was detected</li> <li>• 1 means a valid MBR was found</li> </ul>
1	PBRVALID	Partition boot record (PBR) valid flag: <ul style="list-style-type: none"> <li>• 0 means no PBR was detected</li> <li>• 1 means a valid PBR was found</li> </ul>
2	MBRFAT12	Master boot record (MBR) FAT12 flag: <ul style="list-style-type: none"> <li>• 0 means FAT12 flag is not set in MBR</li> <li>• 1 means FAT12 flag is set in MBR</li> </ul>
3	PBRFAT12	Partition boot record (PBR) FAT12 flag: <ul style="list-style-type: none"> <li>• 0 means FAT12 flag is not set in PBR</li> <li>• 1 means FAT12 flag is set in PBR</li> </ul>
4	MBRFAT16	Master boot record (MBR) FAT16 flag: <ul style="list-style-type: none"> <li>• 0 means FAT16 flag is not set in MBR</li> <li>• 1 means FAT16 flag is set in MBR</li> </ul>
5	PBRFAT16	Partition boot record (PBR) FAT16 flag: <ul style="list-style-type: none"> <li>• 0 means FAT16 flag is not set in PBR</li> <li>• 1 means FAT16 flag is set in PBR</li> </ul>
6	CALCFAT12	Calculated FAT12 flag (based on cluster count): <ul style="list-style-type: none"> <li>• 0 means not FAT12 (cluster count &gt; 4085)</li> <li>• 1 means FAT12 (cluster count &lt; 4085)</li> </ul>
7	CALCFAT16	Calculated FAT16 flag (based on cluster count): <ul style="list-style-type: none"> <li>• 0 means not FAT16 (cluster count &gt; 65525)</li> <li>• 1 means FAT16 (4085 &lt; cluster count &lt; 65535)</li> </ul>
8	--	Reserved
9	--	Reserved
10	--	Reserved
11	--	Reserved
12	--	Reserved
13	--	Reserved
14	--	Reserved
15	--	Reserved

## DATABUFREG Register

The DATABUFREG register is the portal register to the data buffer that is used to transfer data between the MPU interface and the CompactFlash and/or Configuration controllers. The description of the DATABUFREG register bits are shown in [Table 18](#).

Table 18: DATABUFREG Register Bit Descriptions

Bit	Name	Description
0	DATA00	Data buffer portal register: <ul style="list-style-type: none"> <li>Data register bits are read-only when the DATABUFMODE bit in the STATUSREG register is a 0, otherwise they are write-only when the DATABUFMODE bit is a 1.</li> <li>DATABUFREG(07:00) are accessible in BYTE and WORD bus modes.</li> </ul>
1	DATA01	
2	DATA02	
3	DATA03	
4	DATA04	
5	DATA05	
6	DATA06	
7	DATA07	
8	DATA08	Data register: <ul style="list-style-type: none"> <li>Data register bits are read-only when the DATABUFMODE bit in the STATUSREG register is a 0, otherwise they are write-only when the DATABUFMODE bit is a 1.</li> <li>DATABUFREG(15:08) are accessible in BYTE and WORD bus modes.</li> <li>During BYTE bus write mode, if the data buffer is ready, any writes to the DATABUFREG(15:08) bits cause the DATABUFREG(15:00) contents to be written to the data buffer.</li> <li>During BYTE bus read mode, if the data buffer is ready, the DATABUFREG(15:00) register will hold the current value until the DATABUFREG(15:08) bits are read. After DATABUFREG(15:08) is read, the DATABUFREG(15:00) register is loaded with any pending new data.</li> </ul>
9	DATA09	
10	DATA10	
11	DATA11	
12	DATA12	
13	DATA13	
14	DATA14	
15	DATA15	

## Test JTAG Interface (TSTJTAG)


The Test JTAG Interface (TSTJTAG) supports 1149.1 Boundary-Scan operations on the ACE Controller and all chained FPGA devices connected to the Configuration JTAG (CFGJTAG) port. This interface can also be used to program the target FPGA chain on the CFGJTAG port, using Xilinx or third-party JTAG programming tools.

The ACE Controller is fully compliant with the IEEE 1149.1 Boundary-Scan standard, commonly referred to as JTAG. As shown in [Figure 16](#), a Test Access Port (TAP), instruction decoder, and the required IEEE 1149.1 Registers are included in the ACE Controller to support the mandatory Boundary-Scan instructions. In addition, the Controller also

supports an optional 32-bit identification register. Refer to the 1149.1 Boundary-Scan standard specification for a complete description of the required instructions and detailed information on JTAG.

Table 19: ACE Controller TAP Pins

Pins	Description
TSTTDI (TDI)	Test Data In
TSTTDO (TDO)	Test Data Out
TSTTMS (TMS)	Test Mode Select
TSTTCK (TCK)	Test Clock

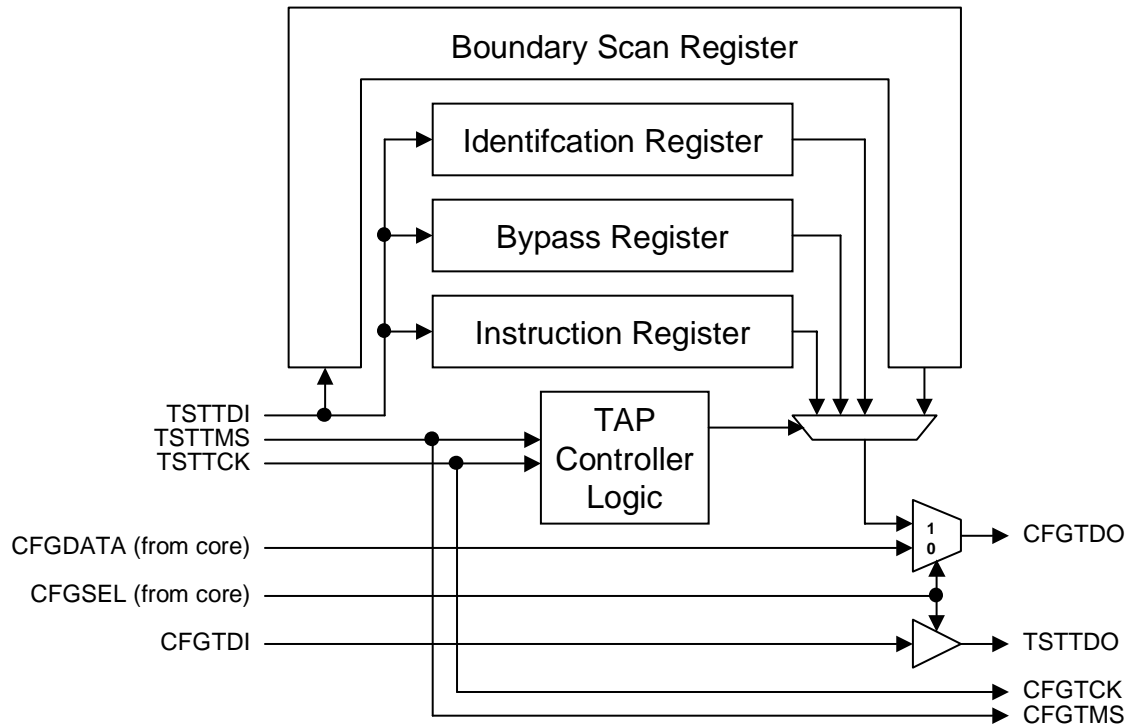

DS080\_45\_030801

Figure 16: Test JTAG Interface Block Diagram

The TSTJTAG logic is connected to the CFGJTAG port as long as the CompactFlash and MPU interfaces are not connected to the CFGJTAG port. Outlined in the following sections are the details of the JTAG interface for the ACE Controller.

The available Boundary-Scan registers for the ACE Controller are shown in [Table 20](#).

Table 20: ACE Controller Boundary-Scan Registers

Register Name	Register Length	Description
Instruction Register	8 bits	Holds current instruction OPCODE and captures internal device status.
Boundary-Scan Register	109 bits	Controls and observes input, output, and output enable.
Identification Register	32 bits	Captures device IDCODE.
Bypass Register	1 bit	Device bypass.

### Instruction Register

The Instruction Register (IR) for the ACE Controller is eight bits wide and is connected between TDI and TDO during an instruction scan sequence. The Instruction Register is parallel loaded with a fixed instruction capture pattern in preparation for an instruction sequence. This pattern is shifted out onto TDO (LSB first), while an instruction is shifted into the instruction register from TDI. This pattern is illustrated in [Table 21](#).

Table 21: Instruction Register Values Loaded into IR During Instruction Scan Sequence

IR[7]	IR[6]	IR[5]	IR[4]	IR[3]	IR[2]	IR[1:0]
CFGINSTRERR (MPU ERRORREG register bit)	CFGFAILED (MPUERRORREG register bit)	CFGREADERR (MPU ERRORREG register bit)	CFCERROR (MPU STATUSREG register bit)	CFGERROR (MPUSTATUSREG register bit)	CFGDONE	01

The optional IDCODE instruction is supported in addition to the mandatory instructions (BYPASS, SAMPLE/PRELOAD, and EXTEST). The binary values for these instructions are listed in [Table 22](#).

Table 22: ACE Controller Boundary-Scan Instructions

Boundary-Scan Instruction	Binary Code [7:0]	Description
BYPASS	11111111	Enables BYPASS
SAMPLE/PRELOAD	00000001	Enables boundary-scan SAMPLE/PRELOAD Operation
IDCODE	00001001	Enables shifting out 32-bit IDCODE
EXTEST	00000000	Enables boundary-scan EXTEST operation

### Boundary-Scan Register

The Boundary-Scan register, which is the primary test data register, is used to control and observe the state of device pins during EXTEST and SAMPLE/PRELOAD instructions. For more information on the System ACE Boundary-Scan register (such as bit sequence, 3-state control, and so forth), refer to the System ACE Boundary-Scan Description Language (BSDL) file available from the software download area at: [www.xilinx.com](http://www.xilinx.com).

### Bit Sequence

The bit sequence of the device is obtainable from the Boundary-Scan Description Language (BSDL) Files. These files are available from the software download area at: [www.xilinx.com](http://www.xilinx.com).

### Identification Register

The Identification Register known as the IDCODE is a fixed, vendor-assigned value that is used to electronically identify the type of device and the manufacturer for a specific device being tested. The ACE Controller IDCODE register is 32 bits wide. The contents of this register can be shifted out for examination by selecting the IDCODE instruction. The IDCODE is available to any other system component via JTAG. The IDCODE register has the following binary format, described in

**Table 23:** vvv:fff:fff:aaaa:aaaa:ccc:ccc:ccc1

Table 23: ACE Controller Identification Register


Version	Family	Array Size	Manufacturer	Required by 1149.1
0000	0000001	00000000	00001001001	1

### Bypass Register

The last standard 1149.1 Boundary-Scan data register in the ACE Controller is the single flip-flop BYPASS register. It directly passes data serially from the TDI pin to the TDO pin during a bypass instruction. This register is initialized to zero when the TAP controller is in the UPDATE-DR state.

### TAP Timing Characteristics

IEEE 1149.1 boundary-scan (JTAG) testing is performed via the standard 4-wire Test Access Port (TAP). The Boundary-Scan timing waveforms and switching characteristics of the TAP are described in [Figure 17](#) and [Table 24](#), respectively.

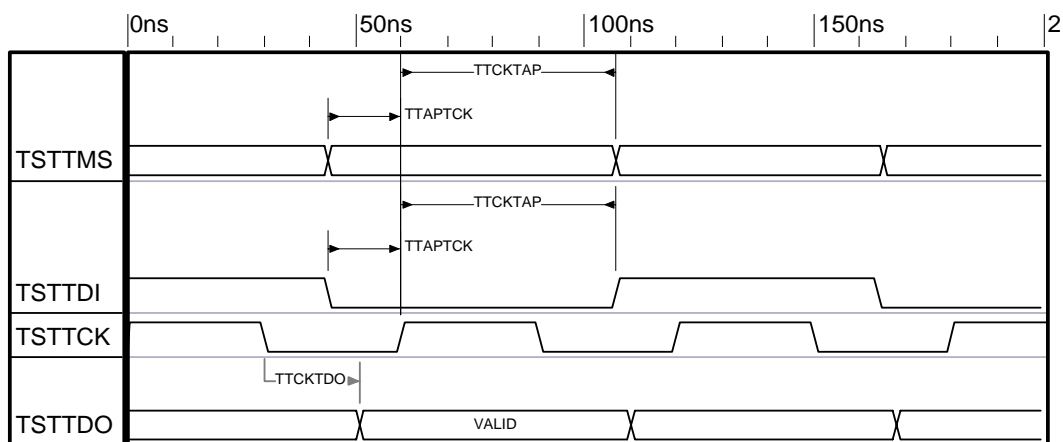

DS080\_46\_030801

Figure 17: Test JTAG Boundary-Scan Port Timing Waveforms



Table 24: ACE Controller TAP Characteristics

Symbol	Parameter	Min	Max	Units
T(TAPTCK)	TMS and TDI setup time before TCK	TBD		Ns
T(TCKTAP)	TMS and TDI hold times after TCK	TBD		Ns
T(TCKTDO)	TCK falling edges to TDO output valid		TBD	Ns
F(TSTTCK)	Maximum TSTTCK clock frequency		16.7	MHz

## Configuration JTAG Interface (CFGJTAG)

Configuration JTAG Port is the interface between the ACE Controller and the target FPGA chain. This port is accessed when configuring the target FPGA chain of devices via any of the ACE Controller interfaces (Test JTAG, MPU, or CompactFlash). To program or test the FPGA target chain, the data from these interfaces is converted to 1149.1 Boundary-Scan (JTAG) serial data.

## Typical Configuration Modes

The four ACE Controller interfaces are designed to work together in a number of different combinations. This section discusses typical user configuration modes. A handful of signals determine which interface provides the configuration data source. Table 25 describes these important signals, and Table 26 shows how they work together to determine which interface will be used. This is especially important when using multiple interfaces in a design, or when not using the default values of these signals. The default values of these signals set the CompactFlash interface as the source of configuration data.

Table 25: Configuration Signals Used for Selecting Configuration Modes and Active Design

Configuration Signal	Description	Default
CFGMODE	Pin or MPU register bit	CFGMODEPIN = 1 CFGMODE Register Bit = 0
CFGADDR[2:0]	Pins or MPU register bits	0
CFGSEL	MPU register bit	0
CFGSTART	MPU register bit	0
CFGRESET	MPU register bit (CFGRESET is a subset of the $\overline{\text{RESET}}$ pin)	0
FORCECFGADDR	MPU register bit (Overrides value on CFGADDR [2:0] pins)	0
FORCECFGMODE	MPU register bit (Overrides value on CFGMODEPIN)	0

Table 26: Active Configuration Modes


Configuration Interface	CFGMODE <sup>(1)</sup>	CFGSEL	CFGSTART	CFGRESET <sup>(2)</sup>
CompactFlash (Configure from CF immediately after reset)	0	0	X <sup>(3)</sup>	0
CompactFlash (Configure from CF after receiving MPU start signal)	1	0	1	0
Microprocessor (Configure from MPU after receiving the MPU start signal)	1	1	1	0
Microprocessor (Configure from the MPU)	1	1	X	0
Test JTAG (Configure using the TSTJTAG port)	1	X	0	0

### Notes:

- The FORCECFGMODE bit in the CONTROLREG register of the MPU interface can be used to force the CFGMODE register bit to override the ACE Controller CFGMODEPIN.
- If CFGRESET = 1, all values are reset to their default.
- An X entry indicates “don’t care”.

## CompactFlash (CF) to Configuration JTAG (CFGJTAG) Setup


This setup provides a standard CompactFlash interface for high-density FPGA systems. The CompactFlash interface is the source of configuration data. The data configures the Xilinx FPGA chain through Boundary-Scan (JTAG) using the Configuration JTAG port, as shown in **Figure 18**.

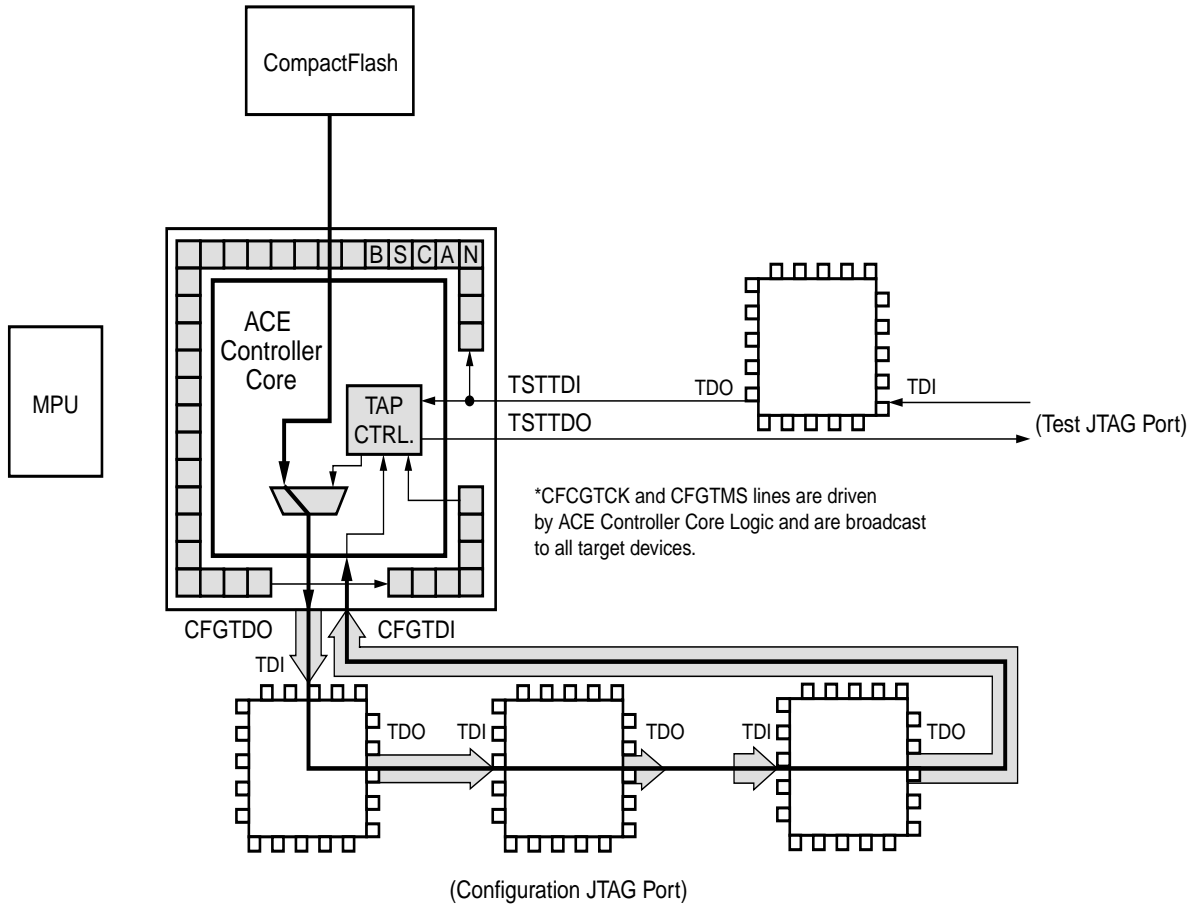

DS080\_22\_030801

Figure 18: Data Flow Diagram of CF to CFGJTAG

The ACE Controller handles all necessary steps to perform configuration from the CF to the target system. The appropriate signal connections for this setup are shown in **Figure 19**. This setup can be used in conjunction with any of the other interfaces.

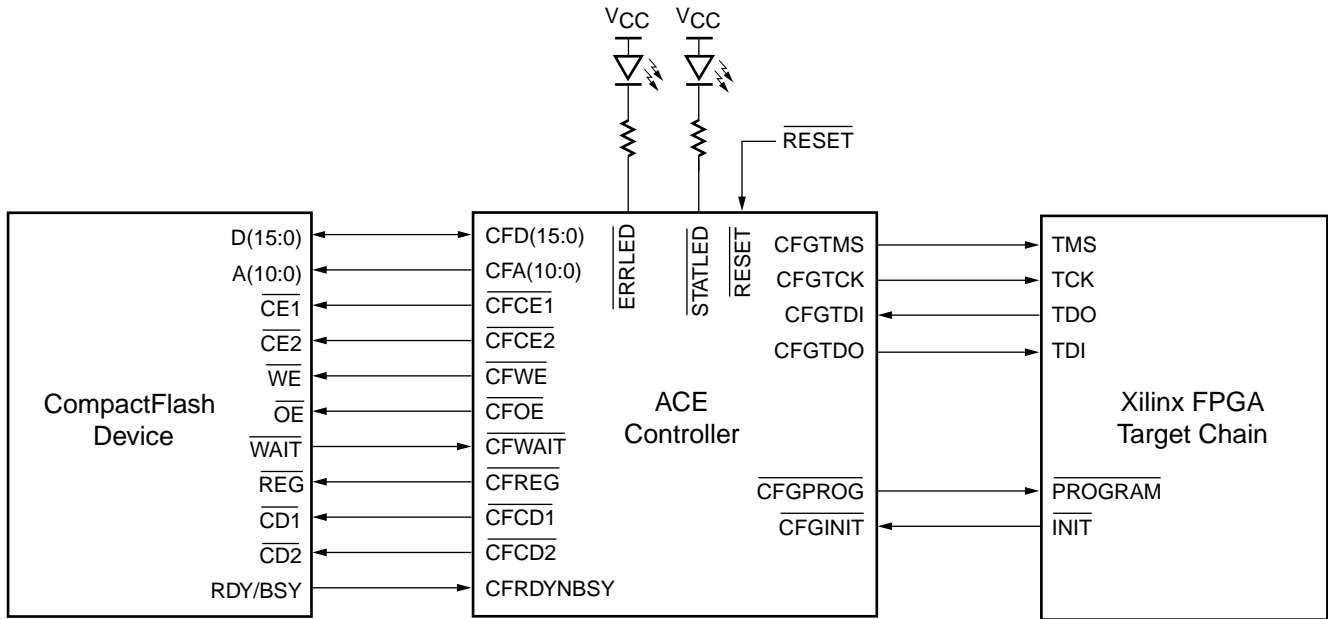


DS080\_24\_032101

Figure 19: Wiring Diagram for CF to CFGJTAG

### CompactFlash (CF) to Microprocessor (MPU) Setup


This setup provides a standard CompactFlash to MPU interface for high-density FPGA systems. This interface provides a great deal of flexibility. The ability to communicate with the CF through the MPU port allows the user to perform many operations, such as being able to switch the programming .ACE file so that it can be used for the target system.

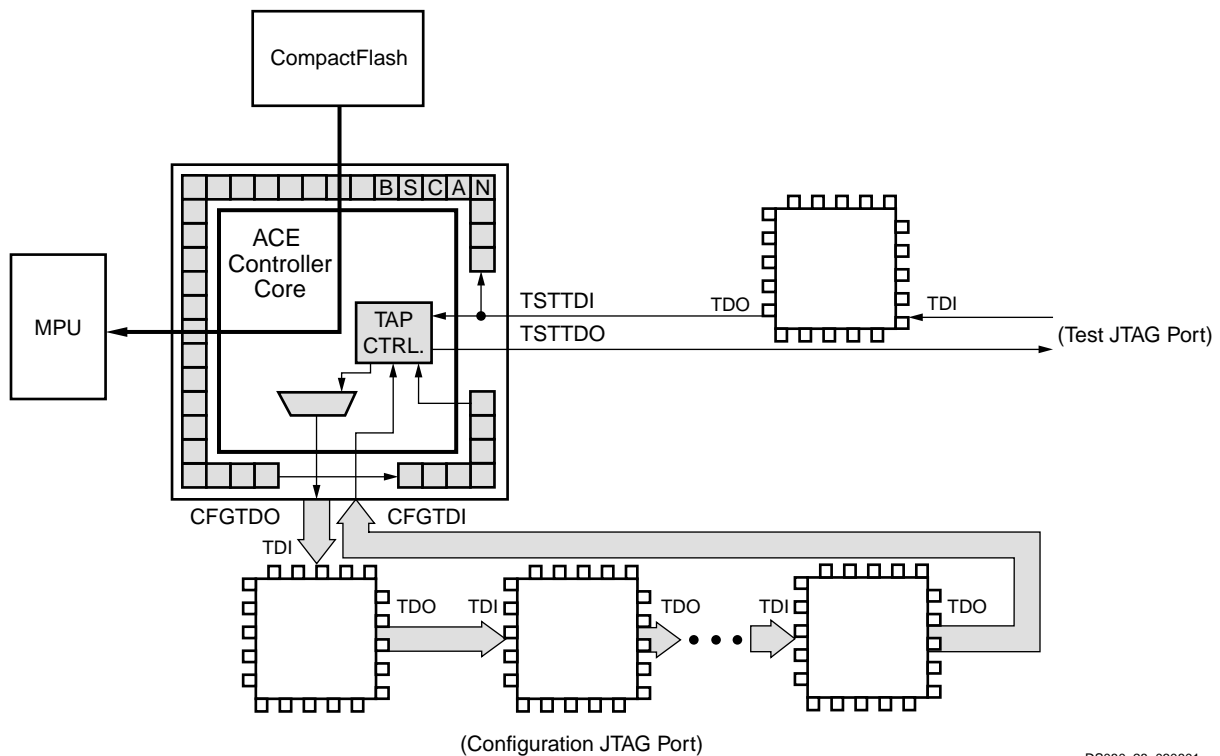

DS080\_28\_030801

Figure 20: Data Flow Diagram of CF to MPU

The ACE Controller handles all necessary steps to perform a CF to MPU operation. This setup uses the CF to MPU signals shown in the wiring diagram in **Figure 21**.

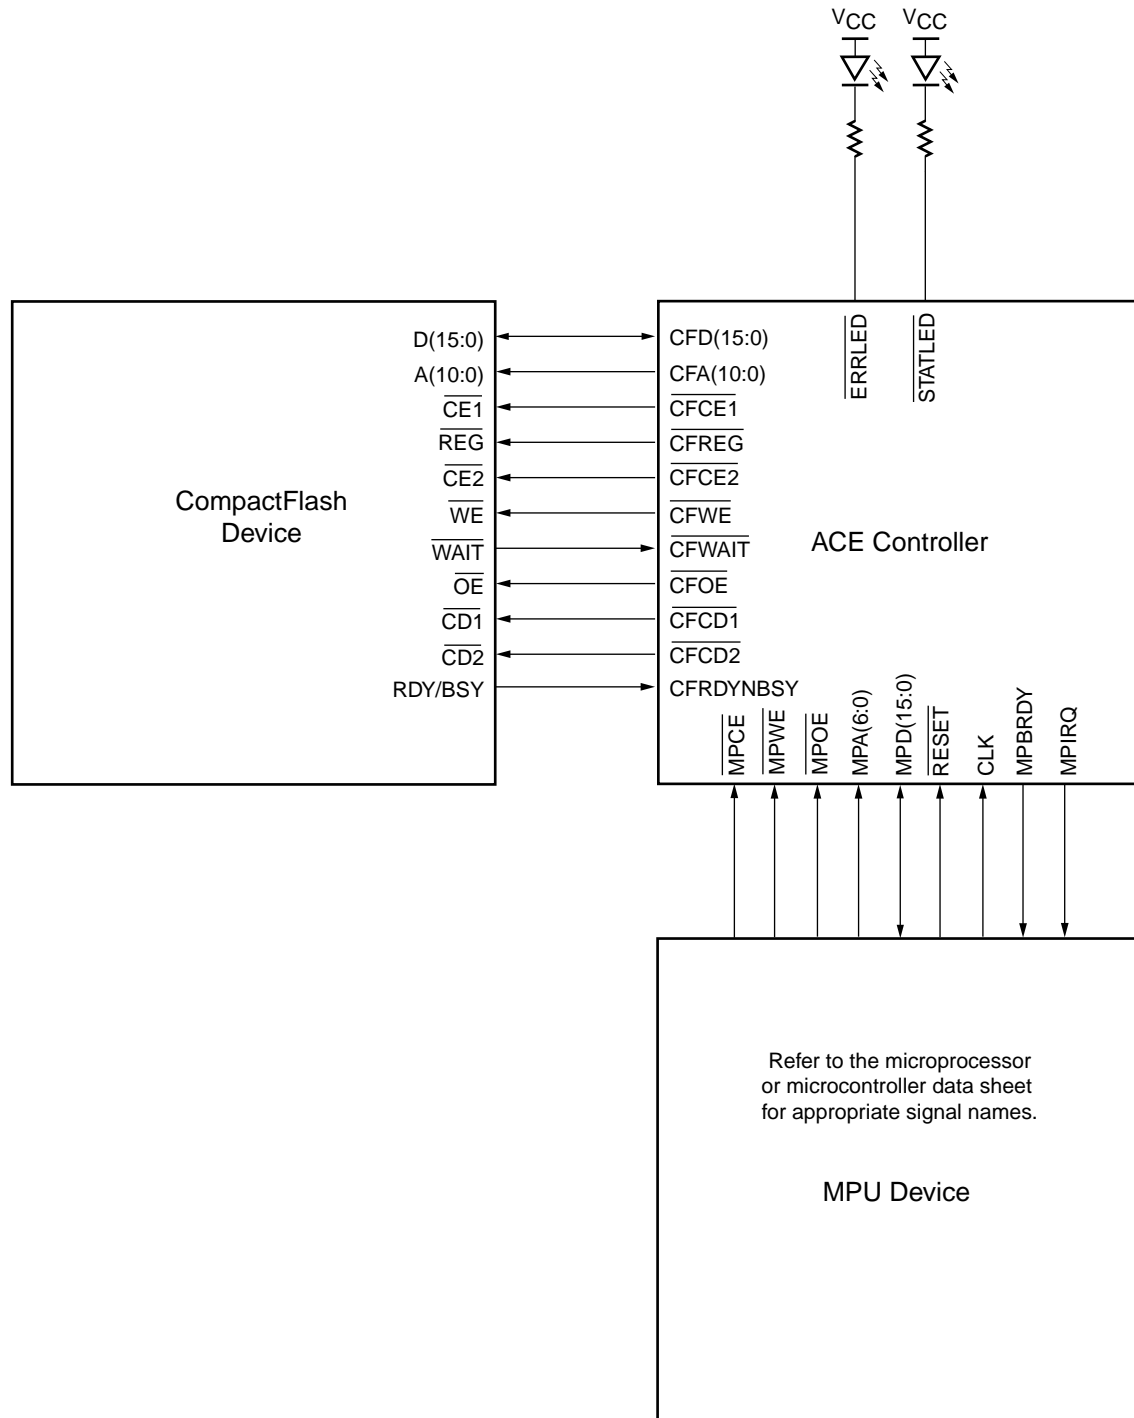

DS080\_27\_030801

Figure 21: Wiring Diagram CF to MPU

### Microprocessor (MPU) to CompactFlash (CF) Setup

This setup provides a communication path from the MPU to the CF device. The CompactFlash is the source of the configuration data, and this path enables users to read the contents of the CF device.

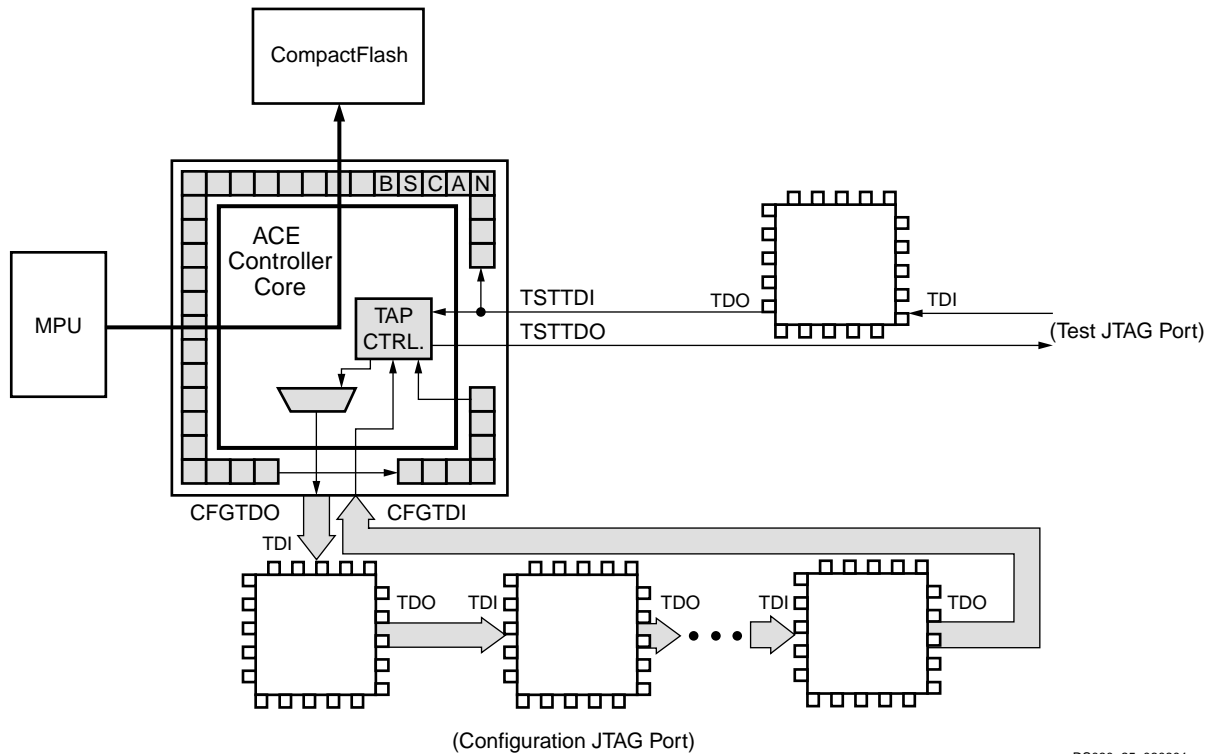



Figure 22: Data Flow Diagram of MPU to CF

DS080\_25\_030801

The ACE Controller handles all necessary steps to perform an MPU to CF operation. The necessary signals for this setup are shown in Figure 21.

## Microprocessor (MPU) to Configuration JTAG (CFGJTAG) Setup


This setup provides an MPU to CFGJTAG communication path. The data configures the FPGA system through JTAG via the Configuration JTAG Port.

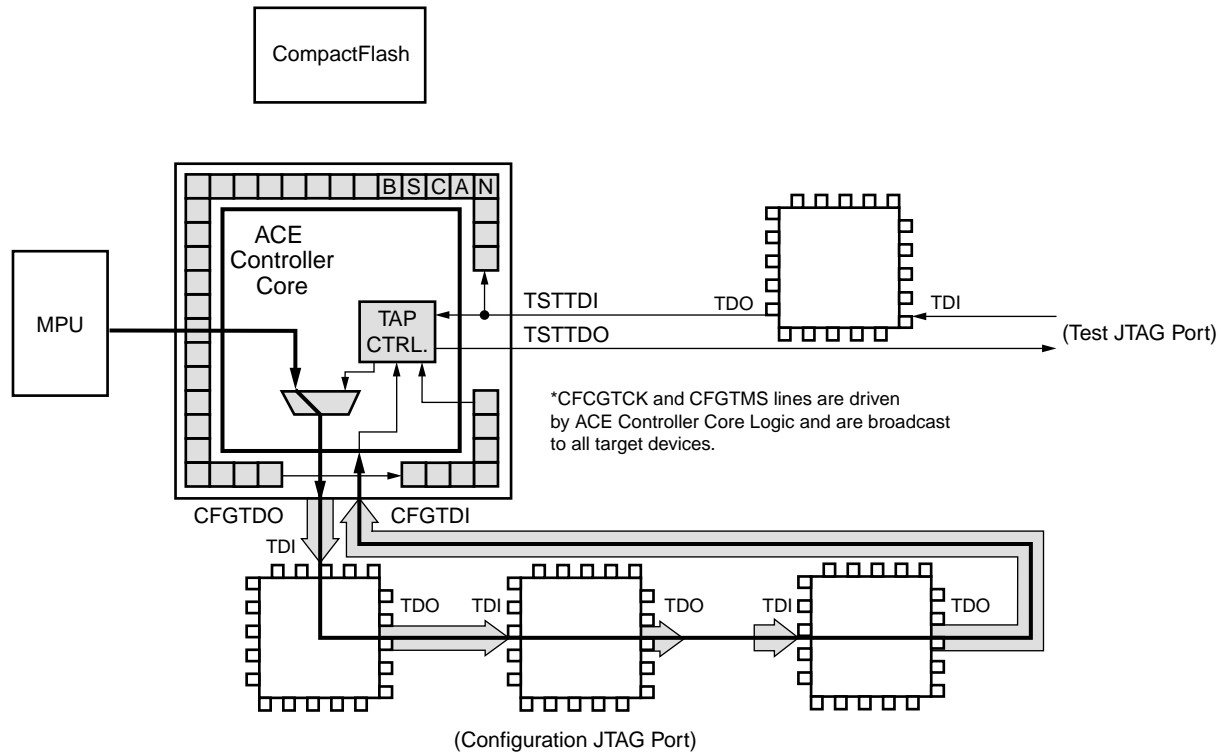

DS080\_30\_030801

Figure 23: Data Flow Diagram of MPU to CFGJTAG

The ACE Controller handles all necessary steps to perform configuration using the MPU communication path to the target system. Figure 24 shows the connections required for this setup.

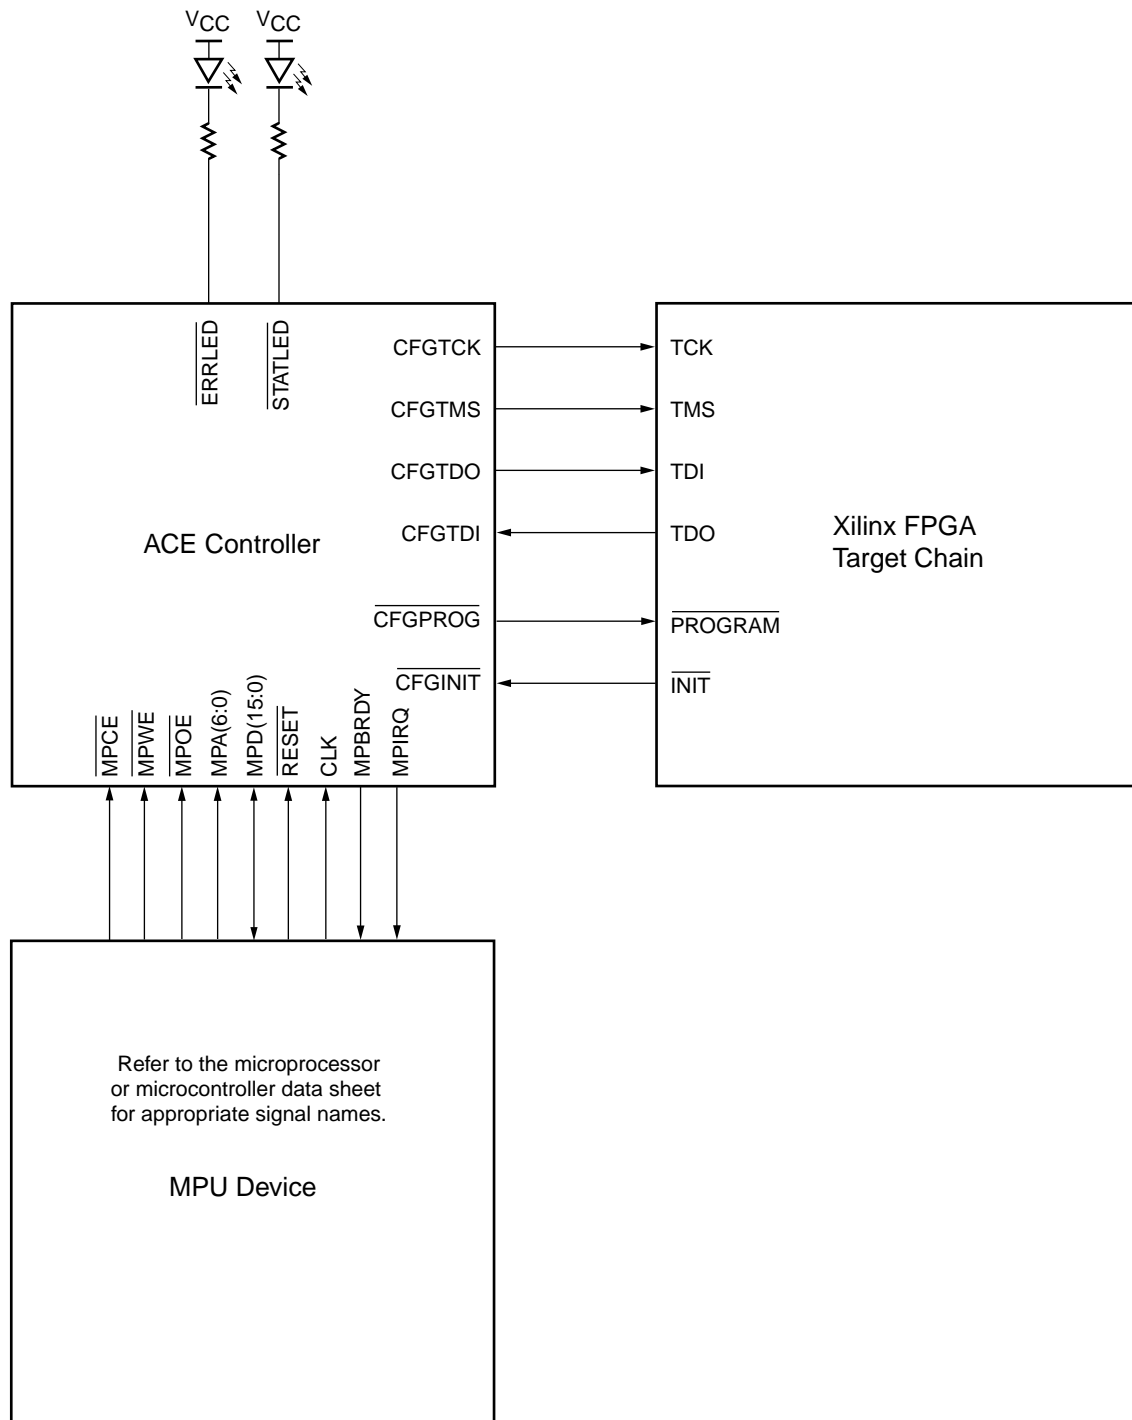


DS080\_33\_030801

Figure 24: Wiring Diagram of MPU to CFGJTAG

### Test JTAG (TSTJTAG) to Configuration JTAG (CFGJTAG) Setup


This setup provides a 1149.1 Boundary-Scan communication path to the target FPGA system. Using this setup, the target system can be configured via JTAG from a JTAG compliant tool.

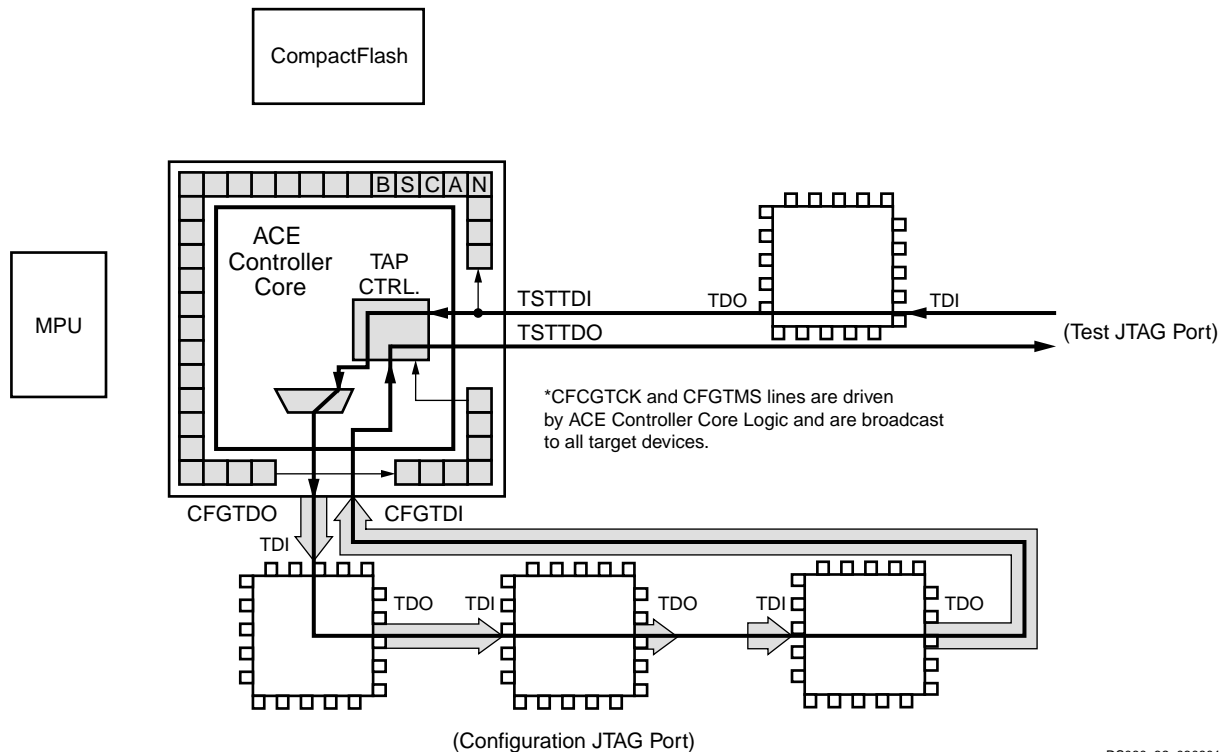

DS080\_32\_030801

Figure 25: Data Flow Diagram of TSTJTAG to CFGJTAG (Using Bypass Path)




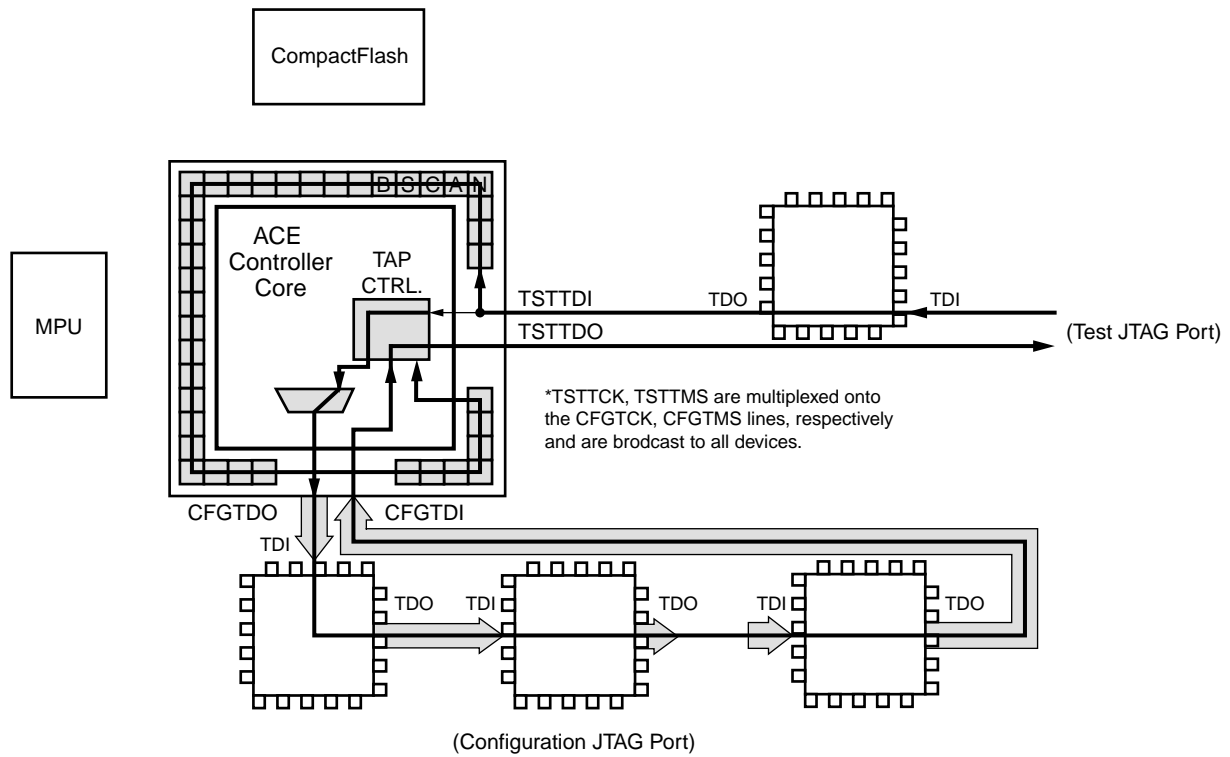

DS080\_34\_030801

Figure 26: Data Flow Diagram of TSTJTAG to CFGJTAG (Using Boundary-Scan Path)

The ACE Controller handles all necessary steps to perform a configuration from the TSTJTAG to the target system via the CFGJTAG interface. When using the TSTJTAG to CFGJTAG setup, the signals in Figure 27 should be connected.

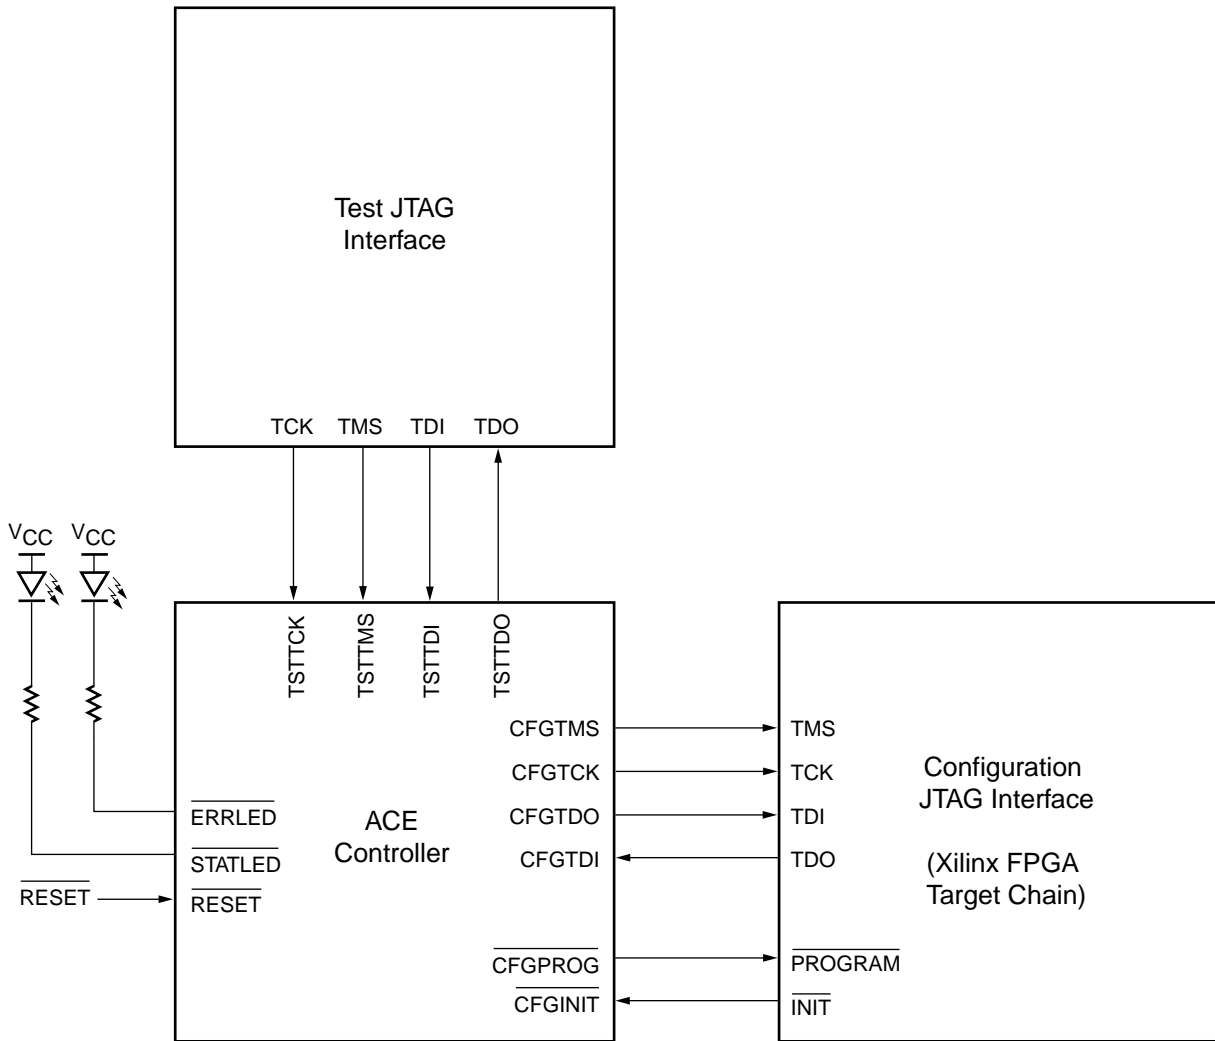

DS080\_35\_032101

Figure 27: Wiring Diagram of TSTJTAG to CFGJTAG

## General Timing Specifications

Table 27: General Timing Specifications

Symbol	Parameter	Min	Max	Units
F (CLK)	Clock frequency		33	MHz

### Setup/Hold to CLK – (Characteristics TBD)

Table 28: Setup/Hold to CLK – (Characteristics TBD)

Symbol	Hold to CLK	Setup to CLK	Units
$\overline{\text{CFCD1}}$			
$\overline{\text{CFCD2}}$			
CFD[0:15]			
CFGADDR[2:0]			
$\overline{\text{CFGINIT}}$			
CFGMODEPIN			
CFGTDI			
CFRDYNBSY			
$\overline{\text{CFWAIT}}$			
MPA[0:6]			
$\overline{\text{MPCE}}$			
MPD[0:15]			
$\overline{\text{MPOE}}$			
$\overline{\text{MPWE}}$			
$\overline{\text{RESET}}$			

### Setup/Hold to TSTTCK

Table 29: Setup/Hold to TSTTCK

Symbol	Hold to CLK	Setup to CLK	Units
$\overline{\text{CFCD1}}$			
$\overline{\text{CFCD2}}$			
CFD[0:15]			
CFGADDR[2:0]			
$\overline{\text{CFGINIT}}$			
CFGMODEPIN			
CFRDYNBSY			
$\overline{\text{CFWAIT}}$			

Table 29: Setup/Hold to TSTTCK (Continued)

Symbol	Hold to CLK	Setup to CLK	Units
MPA[0:6]			
$\overline{\text{MPCE}}$			
MPD[0:15]			
$\overline{\text{MPOE}}$			
$\overline{\text{MPWE}}$			
$\overline{\text{RESET}}$			
TSTTDI			
TSTTMS			

### CLK to Out

Table 30: CLK to Out

Symbol	Clk to Pad	Units
CFA[0:10]		
$\overline{\text{CFCE1}}$		
CFD[0:15]		
$\overline{\text{CFGPROG}}$		
CFGTCK		
CFGTDO		
CFGTMS		
$\overline{\text{CFOE}}$		
$\overline{\text{CFWE}}$		
$\overline{\text{ERRLED}}$		
MPBRDY		
MPD[0:15]		
MPIRQ		
$\overline{\text{STATLED}}$		
TSTTDO		

## TSTTCK to Out

Table 31: TSTTCK to Out

Symbol	TSTTCK to Pad	Units
CFA[0:10]		
$\overline{\text{CFCE1}}$		
$\overline{\text{CFCE2}}$		
CFD[0:15]		
$\overline{\text{CFGPROG}}$		
CFGTCK		
CFGTDO		
CFGTMS		
$\overline{\text{CFOE}}$		
$\overline{\text{CFWE}}$		
$\overline{\text{ERRLED}}$		
MPBRDY		
MPD[0:15]		
MPIRQ		
$\overline{\text{STATLED}}$		

## Clock to Setup on Destination Clock CLK

Table 32: Clock to Setup on Destination Clock CLK

Source Clock	Source/Destination Rise/Rise	Source/Destination Fall/Rise	Source/Destination Rise/Fall	Source/Destination Fall/Fall
CLK				

## Clock to Setup on Destination Clock TSTCLK

Table 33: Clock to Setup on Destination Clock TSTCLK

Source Clock	Source/Destination Rise/Rise	Source/Destination Fall/Rise	Source/Destination Rise/Fall	Source/Destination Fall/Fall
CLK				
TSTTCK				

## Pad to Pad (Propagation Delay)

Table 34: Pad to Pad (Propagation Delay)

Source Pad	Destination Pad	Delay	Units
CFGTDI	TSTTDO		
$\overline{\text{MPCE}}$	MPD[0:15]		
$\overline{\text{MPOE}}$	MPD[0:15]		
TSTTMS	CFGTMS		

## Electrical Characteristics

For more detailed ACE Flash specifications, refer to the *CompactFlash Memory Card Product Manual* from SanDisk, or visit their website at: [www.sandisk.com](http://www.sandisk.com).

Table 35: ACE Flash Card Characteristics

Type	Description	Symbol	Min	Typ	Max	Units	Conditions
	DC Input Voltage	$V_{CC}$	-0.3		7.0	V	
1	Input Voltage ( $V_{CC} = 3.3$ V)	$V_{IH}$ $V_{IL}$	2.4		0.6	V	
2	Input Voltage ( $V_{CC} = 3.3$ V)	$V_{IH}$ $V_{IL}$	1.5		0.6	V	
3	Input Voltage ( $V_{CC} = 3.3$ V)	$V_{TH}$ $V_{TL}$		1.8 1.0		V	
1	Output Voltage	$V_{OH}$  $V_{OL}$	$V_{CC}$ - 0.8		  GND + 0.4	V	$I_{OH} = -4$ mA  $I_{OL} = 4$ mA
2	Output Voltage	$V_{OH}$  $V_{OL}$	$V_{CC}$ - 0.8		  GND + 0.4	V	$I_{OH} = -8$ mA  $I_{OL} = 8$ mA
3	Output Voltage	$V_{OH}$  $V_{OL}$	$V_{CC}$ - 0.8		  GND + 0.4	V	$I_{OH} = -8$ mA  $I_{OL} = 8$ mA
X	3-State Leakage Current	$I_{OZ}$	-10		10	UA	$V_{OL} = GND$ $V_{OH} = V_{CC}$
	Ambient Temperature	$T_A$	0		60	C	
IxZ	IL	Input Leakage Current	-1		1	UA	$V_{IH} = V_{CC}/V_{IL} = GND$
IxU	RPU1	Pull-Up Resistor	50K		500K	Ohm	$V_{CC} = 5.0$ V
IxD	RPD1	Pull-Down Resistor	50K		500K	Ohm	$V_{CC} = 5.0$ V
O <sub>TX</sub>		Totempole					$I_{OH}$ & $I_{OL}$
O <sub>ZX</sub>		3-State N-P Channel					$I_{OH}$ & $I_{OL}$
O <sub>PX</sub>		P-Channel Only					$I_{OH}$ Only
O <sub>NX</sub>		N-Channel Only					$I_{OL}$ Only

### Notes:

- The minimum pull-up resistor leakage current meets the PCMCIA specification of 10k ohms but is intentionally higher in the CompactFlash Memory Card Series product to reduce power use. x refers to the Type 1, 2, or 3. For example, OT3 refers to Totempole output with a type 3 output drive characteristic.

Table 36: ACE Controller Absolute Maximum Ratings (for  $V_{CCL} = 2.5$  [V] or  $V_{CCL} = 3.3$  [V])

Description	Symbol	Limits	Units
Power Supply Voltage	$V_{CCH}^{(1)}$	GND – 0.3 to 7.0	V
	$V_{CCL}^{(1)}$	GND – 0.3 to 4.0	
Input Voltage	$V_{IH}$	GND – 0.3 to $V_{CCH} + 0.5$	V
	$V_{IL}$	GND – 0.3 to $V_{CCL} + 0.5$	
Output Voltage	$V_{OH}$	GND – 0.3 to $V_{CCH} + 0.5$	V
	$V_{OL}$	GND – 0.3 to $V_{CCL} + 0.5$	
Output Current/Pin	$I_{OUT}$	±30	mA
Storage Temperature	$T_{STG}$	–65 to 150	°C

**Notes:**

- $V_{CCH}$  is greater than or equal to  $V_{CCL}$ .

Table 37: ACE Controller Recommended Operating Conditions (for  $V_{CCL} = 2.5$  [V])

Description	Symbol	Min	Typ	Max	Units
Power Supply Voltage	$V_{CCH}$	3.0	3.3	3.6	V
	$V_{CCL}$	2.25	2.5	2.75	
Input Voltage	$V_{IH}$	GND	–	$V_{CCH}$	V
	$V_{IL}$	GND	–	$V_{CCL}$	
Ambient Temperature	$T_A$	–40	–	85 <sup>(1)</sup>	°C

**Notes:**

- The ambient temperature range is recommended for  $T_J = -40$  to 125 °C.

Table 38: ACE Controller Recommended Operating Conditions (for  $V_{CCL} = 3.3$  [V])

Description	Symbol	Min	Typ	Max	Units
Power Supply Voltage	$V_{CCH}$	3.0	3.3	3.6	V
	$V_{CCL}$	3.0	3.3	3.6	
Input Voltage	$V_{IH}$	GND	–	$V_{CCH}$	V
	$V_{IL}$	GND	–	$V_{CCL}$	
Ambient Temperature	$T_A$	–40	–	85 <sup>(1)</sup>	°C


**Notes:**

- The ambient temperature range is recommended for  $T_J = -40$  to 125 °C.

Table 39: ACE Controller Characteristics

Description	Symbol	Min	Typ	Max	Units	Conditions
Quiescent Current (between $V_{CCH}$ and GND)	$I_{CCSH}$	--	--	300	$\mu A$	$V_I = V_{CCH}$ or $V_{CCL}$ or GND, $V_{CCH} = \text{Max}$ , $V_{CCL} = \text{Max}$ , $I_{OH} = I_{OL} = 0$
Quiescent Current (between $V_{CCL}$ and GND)	$I_{CCSL}$	--	--	420	$\mu A$	$V_I = V_{CCH}$ or $V_{CCL}$ or GND, $V_{CCH} = \text{Max}$ , $V_{CCL} = \text{Max}$ , $I_{OH} = I_{OL} = 0$
Input Leakage Current	$I_{LI}$	-1	--	1	$\mu A$	$V_{CCH} = \text{Max}$ , $V_{CCL} = \text{Max}$ , $V_{IHH} = V_{CCH}$ , $V_{IHL} = V_{CCL}$ , $V_{IL} = \text{GND}$
High-Level Input Voltage	$V_{IH1H}$	2.0	--	--	V	Input Characteristics for I/O Supply Rail $V_{CCH} = \text{Max}$
Low-Level Input Voltage	$V_{IL1H}$	--	--	0.8	V	Input Characteristics for I/O Supply Rail $V_{CCH} = \text{Min}$
High-Level Input Voltage	$V_{IH1L}$	2.0	--	--	V	Input Characteristics for I/O Supply Rail $V_{CCL} = \text{Max}$
Low-Level Input Voltage	$V_{IL1L}$	--	--	0.8	V	Input Characteristics for I/O Supply Rail $V_{CCL} = \text{Min}$
Pull-Up Resistance	$R_{PU1H}$	40	100	240	Kohm	$V_I = \text{GND}$
Pull-Down Resistance	$R_{PD1H}$	40	100	240	Kohm	$V_I = V_{CCH}$
Pull-Up Resistance	$R_{PU1L}$	20	50	120	Kohm	$V_I = \text{GND}$
Pull-Down Resistance	$R_{PD1L}$	20	50	120	Kohm	$V_I = V_{CCL}$
High-Level Output Voltage	$V_{OH3H}$	$V_{CCH} - 0.4$	--	--	V	$V_{CCH} = \text{Min}$ , $I_{OH} = -12 \text{ mA}$
Low-Level Output Voltage	$V_{OL3H}$	--	--	GND + 0.4	V	$V_{CCH} = \text{Min}$ , $I_{OL} = 12 \text{ mA}$
High-Level Output Voltage	$V_{OH3L}$	$V_{CCL} - 0.4$	--	--	V	$V_{CCL} = \text{Min}$ , $I_{OH} = -12 \text{ mA}$
Low-Level Output Voltage	$V_{OL3L}$	--	--	GND + 0.4	V	$V_{CCL} = \text{Min}$ , $I_{OL} = 12 \text{ mA}$
Off-State Leakage Current	$I_{OZ}$	-1	--	1	$\mu A$	$V_{CCH} = \text{Max}$ , $V_{CCL} = \text{Max}$ , $V_{OHH} = V_{CCH}$ , $V_{OHL} = V_{CCL}$ , $V_{OL} = \text{GND}$
Input Terminal Capacitance	$C_I$	--	--	--	pF	--
Output Terminal Capacitance	$C_O$	--	--	--	pF	--
Input/Output Terminal Capacitance	$C_{IO}$	--	--	--	pF	--


Package Specifications: (Package Dimensions and Reliability Data)

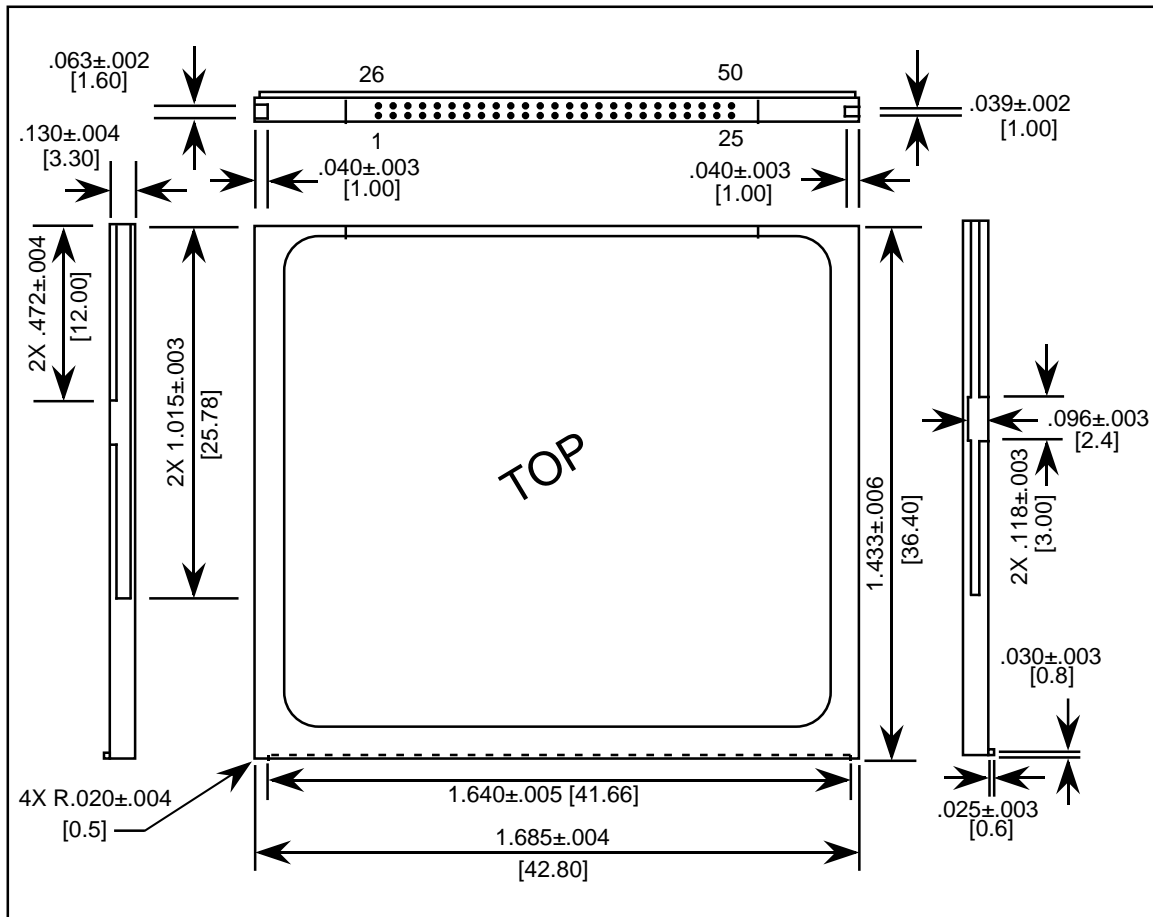

DS080\_36\_020601

Figure 28: ACE Flash Card Dimensions



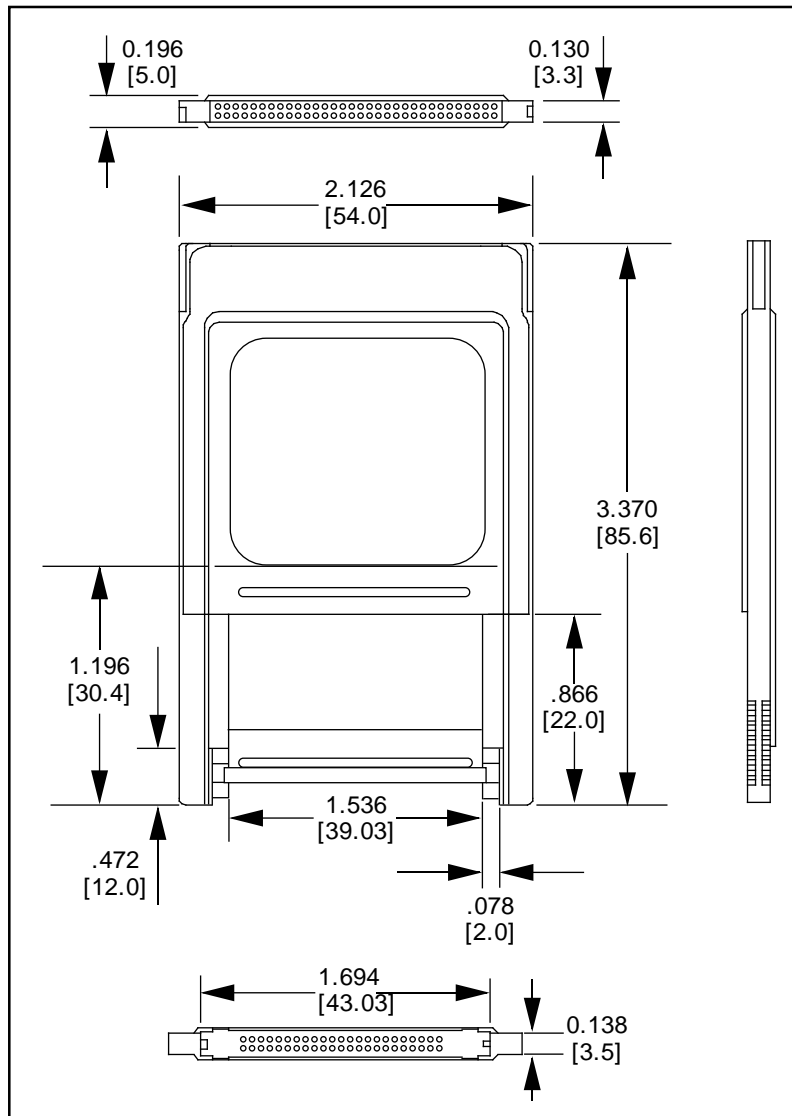


DS080\_37\_020601

Figure 29: ACE Flash Card Adapter Dimensions

Table 40 shows ACE Flash reliability considerations.

Table 40: ACE Flash Reliability

MTBF (@ 25 degrees C)	>1,000,000 hours
Preventative Maintenance	None
Data Reliability	<1 non-recoverable error in 10 <sup>14</sup> bits read
Endurance	>= 300,000 erase/program cycles per logical sector

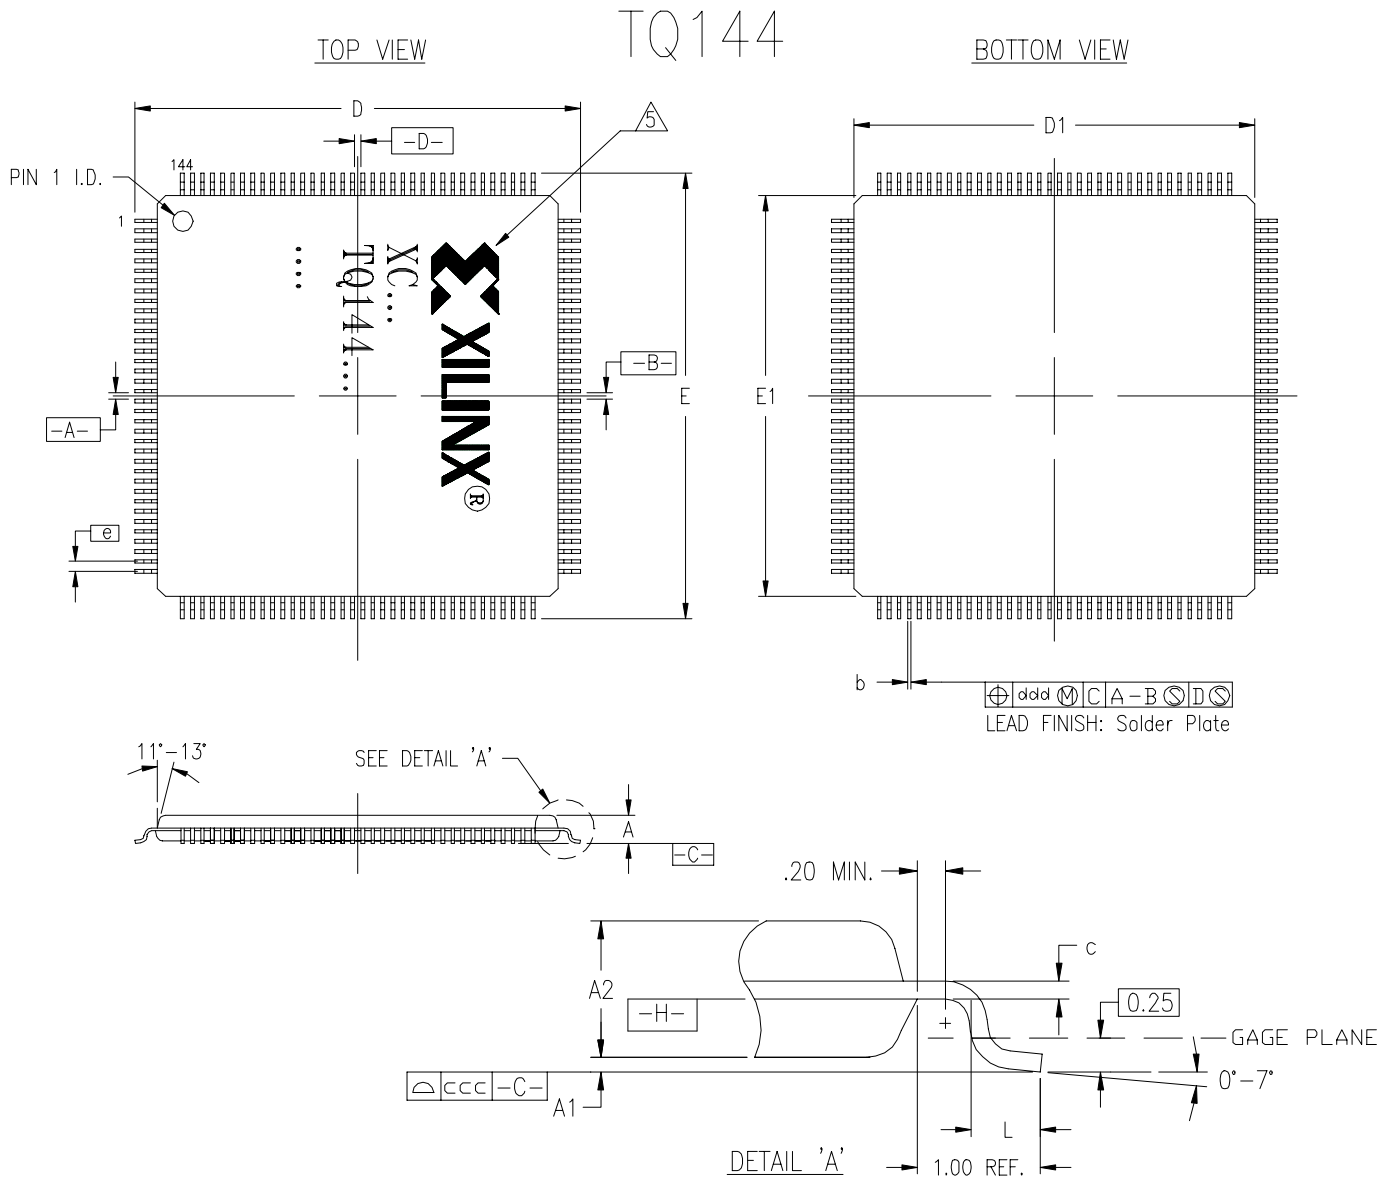

	MILLIMETERS		
	MIN.	NOM.	MAX.
A	$\approx$	$\approx$	1.60
A <sub>1</sub>	0.05	0.10	0.15
A <sub>2</sub>	1.35	1.40	1.45
D/E	22.00 BSC		
D <sub>1</sub> /E <sub>1</sub>	20.00 BSC		
b	0.17	0.22	0.27
c	0.09	$\approx$	0.20
e	0.50 BSC		
L	0.45	0.60	0.75
ccc	$\approx$	$\approx$	0.08
ddd	$\approx$	$\approx$	0.08

NOTES:

1. ALL DIMENSIONS AND TOLERANCES CONFORM TO ANSI Y14.5M-1982.
  2. DIMENSIONS "D<sub>1</sub>" AND "E<sub>1</sub>" DO NOT INCLUDE MOLD PROTRUSION. ALLOWABLE MOLD PROTRUSION SHALL NOT EXCEED 0.25mm EACH SIDE.
  3. THE TOP OF PACKAGE MAYBE SMALLER THAN THE BOTTOM OF PACKAGE BY 0.10mm.
  4. THIS OUTLINE CONFORMS TO JEDEC PUBLICATION 95 REGISTRATION MS-026-BFB
- △ MARK ORIENTATION WITH RESPECT TO PIN-1 I.D.  
IF 2 OR MORE CIRCLES EXIST ON TOP OF THE PACKAGE, USE THE SMALLEST CIRCLE AS PIN-1 I.D.

DS080\_47\_030801

Figure 30: ACE Controller TQ144 Package Drawing

## Pin Descriptions

This section provides ACE Flash and ACE Controller pinout information.

### ACE Flash Card I/O Pins

Table 41 lists ACE Flash signal/pin assignments. LOW active signals have an overline. Pin types are Input, Output, or Input/Output.

Table 41: ACE Flash Card Pin Assignments and Pin Types

PC Card Memory Mode			
Pin Number	Signal Name	Pin Type	In, Out <sup>(2)</sup> Type
1	GND		Ground
2	D03	I/O	I1Z,OZ3
3	D04	I/O	I1Z,OZ3
4	D05	I/O	I1Z,OZ3
5	D06	I/O	I1Z,OZ3
6	D07	I/O	I1Z,OZ3
7	$\overline{CE1}$	I	I3U
8	A10	I	I1Z
9	$\overline{OE}$	I	I3U
10	A09	I	I1Z
11	A08	I	I1Z
12	A07	I	I1Z
13	VCC		Power
14	A06	I	I1Z
15	A05	I	I1Z
16	A04	I	I1Z
17	A03	I	I1Z
18	A02	I	I1Z
19	A01	I	I1Z
20	A00	I	I1Z
21	D00	I/O	I1Z,OZ3
22	D01	I/O	I1Z,OZ3
23	D02	I/O	I1Z,OZ3
24	WP	O	OT3
25	$\overline{CD2}$	O	Ground
26	$\overline{CD1}$	O	Ground
27	D11 <sup>(1)</sup>	I/O	I1Z,OZ3

Table 41: ACE Flash Card Pin Assignments and Pin Types (Continued)

PC Card Memory Mode			
Pin Number	Signal Name	Pin Type	In, Out <sup>(2)</sup> Type
28	D12 <sup>(1)</sup>	I/O	I1Z,OZ3
29	D13 <sup>(1)</sup>	I/O	I1Z,OZ3
30	D14 <sup>(1)</sup>	I/O	I1Z,OZ3
31	D15 <sup>(1)</sup>	I/O	I1Z,OZ3
32	$\overline{CE2}$ <sup>(1)</sup>	I	I3U
33	$\overline{VS1}$	O	Ground
34	$\overline{IORD}$	I	I3U
35	$\overline{IOWR}$	I	I3U
36	$\overline{WE}$	I	I3U
37	RDY/BSY	O	OT1
38	VCC		Power
39	$\overline{CSEL}$	I	I2Z
40	$\overline{VS2}$	O	OPEN
41	RESET	I	I2Z
42	$\overline{WAIT}$	O	OT1
43	$\overline{INPACK}$	O	OT1
44	$\overline{REG}$	I	I3U
45	BVD2	I/O	I1U,OT1
46	BVD1	I/O	I1U,OT1
47	D08 <sup>(1)</sup>	I/O	I1Z,OZ3
48	D09 <sup>(1)</sup>	I/O	I1Z,OZ3
49	D10 <sup>(1)</sup>	I/O	I1Z,OZ3
50	GND		Ground

#### Notes:

1. These signals are required only for 16-bit access and not required when installed in 8-bit systems. For lowest power dissipation, leave these signals open.
2. For definitions of In, Out Type, refer to **Electrical Characteristics** on page 45.

Table 42 defines the DC characteristics for all ACE Flash input and output type structures.

Table 42: ACE Flash Signal Descriptions

Signal Name	Dir.	Pin	Description
A10 - A0	I	8, 10, 11, 12, 14, 15, 16, 17, 18, 19, 20	These address lines along with the $\overline{REG}$ signal are used to select the following: The I/O port address registers within the CompactFlash Card, the memory mapped port address registers within the card, a byte in the card's information structure and its configuration control and status registers.
BVD1	I/O	46	This signal is asserted HIGH as the BVD1 signal since a battery is not used with this product.
BVD2	I/O	45	This output line is always driven to a HIGH state in Memory Mode since a battery is not required for this product.
$\overline{CD1}$ , $\overline{CD2}$	O	26, 25	These Card Detect pins are connected to ground on the CompactFlash Card. They are used by the host to determine if the card is fully inserted into its socket.
$\overline{CE1}$ , $\overline{CE2}$	I	7, 32	These input signals are used both to select the card and to indicate to the card whether a byte or a word operation is being performed. $\overline{CE2}$ always accesses the odd byte of the word. $\overline{CE1}$ accesses the even byte or the Odd byte of the word depending on A0 and $\overline{CE2}$ . A multiplexing scheme based on A0, $\overline{CE1}$ , $\overline{CE2}$ allows 8 bit hosts to access all data on D0-D7. See the "Attribute Memory Function" tables in the <i>CompactFlash Memory Card Product Manual</i> .
$\overline{CSEL}$	I	39	This signal is not used for this mode.
D15 - D00	I/O	31, 30, 29, 28, 27, 49, 48, 47, 6, 5, 4, 3, 2, 23, 22, 21	These lines carry the Data, Commands and Status information between the host and the controller. D00 is the LSB of the Even Byte of the Word. D08 is the LSB of the Odd Byte of the Word.
GND	--	1, 50	Ground.
$\overline{INPACK}$	O	43	This signal is not used in this mode.
$\overline{IORD}$	I	34	This signal is not used in this mode.
$\overline{IOWR}$	I	35	This signal is not used in this mode.
$\overline{OE}$	I	9	This is an Output Enable strobe generated by the host interface. It is used to read data from the CompactFlash Card in Memory Mode and to read the CIS and configuration registers.
RDY/-BSY	O	37	In Memory Mode this signal is set HIGH when the CompactFlash Card is ready to accept a new data transfer operation and held LOW when the card is busy. The Host memory card socket must provide a pull-up resistor.  At power up and at Reset, the RDY/-BSY signal is held LOW (busy) until the CompactFlash Card has completed its power up or reset function. No access of any type should be made to the CompactFlash Card during this time. The RDY/-BSY signal is held HIGH (disabled from being busy) whenever the following condition is true: The CompactFlash Card has been powered up with RESET continuously disconnected or asserted.
$\overline{REG}$ Attribute Memory Select	I	44	This signal is used during Memory Cycles to distinguish between Common Memory and Register (Attribute) Memory accesses. HIGH for Common Memory, LOW for Attribute Memory.

Table 42: ACE Flash Signal Descriptions (Continued)

Signal Name	Dir.	Pin	Description
RESET	I	41	When the pin is HIGH, this signal resets the CompactFlash Card. The card is Reset only at power up if this pin is left HIGH or open from power-up. The card is also reset when the Soft Reset bit in the Card Configuration Option Register is set.
VCC	--	13, 38	+5 V, +3.3 V power.
$\overline{VS1}$ $\overline{VS2}$	O	33 40	Voltage Sense Signals. $\overline{VS1}$ is grounded so that the CompactFlash Card CIS can be read at 3.3 volts and $\overline{VS2}$ is open and reserved by PCMCIA for a secondary voltage.
$\overline{WAIT}$	O	42	The $\overline{WAIT}$ signal is driven LOW by the CompactFlash Card to signal the host to delay completion of a memory or I/O cycle that is in progress.
$\overline{WE}$	I	36	This is a signal driven by the host and used for strobing memory write data to the registers of the CompactFlash Card when the card is configured in the memory interface mode. It is also used for writing the configuration registers.
WP Write Protect	O	24	Memory Mode — the CompactFlash Card does not have a write protect switch. This signal is held LOW after the completion of the reset initialization sequence.

## ACE Controller I/O Pins

Table 43 lists ACE Controller active pins.

Table 43: ACE Controller Pin Table (IN = input, OUT2 = 2-State Output, OUT3 = 3-State Output)

Pin Name	Pin #	I/O Type	I/O Supply Rail	Termination	Description
CLK	93	IN (GCLK1)	V <sub>CCL</sub>	N/A	ACE Controller system clock
RESET	33	IN	V <sub>CCL</sub>	Int. Pull-up	ACE Controller system reset
STATLED	95	OUT3 (Open-drain)	V <sub>CCL</sub>	Ext. Pull-up	ACE Controller status LED
ERRLED	96	OUT3 (Open-drain)	V <sub>CCL</sub>	Ext. Pull-up	ACE Controller error LED; when LOW, this pin indicates that an error has occurred in the ACE Controller.
MPCE	42	IN	V <sub>CCL</sub>	Int. Pull-up	Chip enable (active LOW)
MPWE	76	IN	V <sub>CCL</sub>	Int. Pull-up	Write enable (active LOW)
MPOE	77	IN	V <sub>CCL</sub>	Int. Pull-up	Output enable (active LOW)
MPIRQ	41	OUT2	V <sub>CCL</sub>	N/A	Interrupt request flag
MPBRDY	39	OUT2	V <sub>CCL</sub>	N/A	Data buffer ready flag
MPA00	70	IN	V <sub>CCL</sub>	N/A	MPU address line 0
MPA01	69	IN	V <sub>CCL</sub>	N/A	MPU address line 1
MPA02	68	IN	V <sub>CCL</sub>	N/A	MPU address line 2
MPA03	67	IN	V <sub>CCL</sub>	N/A	MPU address line 3
MPA04	45	IN	V <sub>CCL</sub>	N/A	MPU address line 4
MPA05	44	IN	V <sub>CCL</sub>	N/A	MPU address line 5
MPA06	43	IN	V <sub>CCL</sub>	N/A	MPU address line 6
MPD00	66	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 0
MPD01	65	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 1
MPD02	63	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 2
MPD03	62	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 3
MPD04	61	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 4
MPD05	60	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 5
MPD06	59	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 6
MPD07	58	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 7
MPD08	56	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 8
MPD09	53	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 9
MPD10	52	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 10
MPD11	51	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 11
MPD12	50	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 12
MPD13	49	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 13
MPD14	48	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 14
MPD15	47	IN/OUT3	V <sub>CCL</sub>	N/A	MPU data line 15

Table 43: ACE Controller Pin Table (IN = input, OUT2 = 2-State Output, OUT3 = 3-State Output) (Continued)

Pin Name	Pin #	I/O Type	I/O Supply Rail	Termination	Description
CFA00	4	OUT2	V <sub>CCH</sub>	N/A	CompactFlash address line 0
CFA01	142	OUT2	V <sub>CCH</sub>	N/A	CompactFlash address line 1
CFA02	141	OUT2	V <sub>CCH</sub>	N/A	CompactFlash address line 2
CFA03	139	OUT2	V <sub>CCH</sub>	N/A	CompactFlash address line 3
CFA04	137	OUT2	V <sub>CCH</sub>	N/A	CompactFlash address line 4
CFA05	135	OUT2	V <sub>CCH</sub>	N/A	CompactFlash address line 5
CFA06	134	OUT2	V <sub>CCH</sub>	N/A	CompactFlash address line 6
CFA07	132	OUT2	V <sub>CCH</sub>	N/A	CompactFlash address line 7
CFA08	130	OUT2	V <sub>CCH</sub>	N/A	CompactFlash address line 8
CFA09	125	OUT2	V <sub>CCH</sub>	N/A	CompactFlash address line 9
CFA10	121	OUT2	V <sub>CCH</sub>	N/A	CompactFlash address line 10
CFD00	5	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 0
CFD01	6	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 1
CFD02	8	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 2
CFD03	104	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 3
CFD04	106	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 4
CFD05	113	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 5
CFD06	115	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 6
CFD07	117	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 7
CFD08	7	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 8
CFD09	11	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 9
CFD10	12	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 10
CFD11	105	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 11
CFD12	107	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 12
CFD13	114	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 13
CFD14	116	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 14
CFD15	118	IN/OUT3	V <sub>CCH</sub>	N/A	CompactFlash data line 15
$\overline{\text{CFCE1}}$	119	OUT2	V <sub>CCH</sub>	N/A	CompactFlash chip enable 1 (active LOW);
$\overline{\text{CFCE2}}$	138	OUT2	V <sub>CCH</sub>	N/A	CompactFlash chip enable 2 (active LOW);
$\overline{\text{CFREG}}$	3	OUT2	V <sub>CCH</sub>	N/A	CompactFlash register select line (active LOW); this pin is always driven to a 1 but is provided here for future compatibility.
$\overline{\text{CFWE}}$	131	OUT2	V <sub>CCH</sub>	N/A	CompactFlash write enable line (active LOW)
$\overline{\text{CFOE}}$	123	OUT2	V <sub>CCH</sub>	N/A	CompactFlash output enable line (active LOW)
$\overline{\text{CFWAIT}}$	140	IN	V <sub>CCH</sub>	N/A	CompactFlash memory cycle wait flag (active LOW)
CFRDYNBSY	133	IN	V <sub>CCH</sub>	N/A	CompactFlash read/not busy flag
$\overline{\text{CFCD1}}$	103	IN	V <sub>CCH</sub>	Int. Pull-up	CompactFlash card detect line 1 (active LOW)

Table 43: ACE Controller Pin Table (IN = input, OUT2 = 2-State Output, OUT3 = 3-State Output) (Continued)

Pin Name	Pin #	I/O Type	I/O Supply Rail	Termination	Description
$\overline{\text{CFCD2}}$	13	IN	$V_{\text{CCH}}$	Int. Pull-up	CompactFlash card detect line 2 (active LOW)
CFGADDR0	86	IN	$V_{\text{CCL}}$	Int. Pull-down	Configuration address select pin 0
CFGADDR1	87	IN	$V_{\text{CCL}}$	Int. Pull-down	Configuration address select pin 1
CFGADDR2	88	IN	$V_{\text{CCL}}$	Int. Pull-down	Configuration address select pin 2
CFGMODEPIN	89	IN	$V_{\text{CCL}}$	Int. Pull-up	Configuration mode pin: <ul style="list-style-type: none"> <li>When 0, this pin instructs the ACE Controller to start the configuration process when the CFGSTART bit is set in the CONTROLREG register in the MPU interface.</li> <li>When 1, this pin instructs the ACE Controller to start the configuration process immediately following reset.</li> </ul>
TSTTDI	102	IN	$V_{\text{CCH}}$	Int. Pull-up	Test JTAG port test data input
TSTTCK	101	IN	$V_{\text{CCH}}$	N/A	Test JTAG port test clock
TSTTMS	98	IN	$V_{\text{CCH}}$	Int. Pull-up	Test JTAG port test mode select
TSTTDO	97	OUT3	$V_{\text{CCH}}$	Ext. Pull-up <sup>(1)</sup>	Test JTAG port test data output
CFGTDO	82	OUT3	$V_{\text{CCL}}$	Ext. Pull-up <sup>(1)</sup>	Configuration JTAG test data output
CFGTDI	81	IN	$V_{\text{CCL}}$	Int. Pull-up	Configuration JTAG test data input
CFGTCK	80	OUT2	$V_{\text{CCL}}$	N/A	Configuration JTAG test clock
CFGTMS	85	OUT3	$V_{\text{CCL}}$	Ext. Pull-up <sup>(1)</sup>	Configuration JTAG test mode select
$\overline{\text{CFGPROG}}$	79	OUT3 (Open-drain)	$V_{\text{CCL}}$	Ext. Pull-up	Configuration JTAG $\overline{\text{PROGRAM}}$ pin (active LOW); this pin is driven LOW when the ACE Controller PROG instruction is executed.
$\overline{\text{CFGINIT}}$	78	IN	$V_{\text{CCL}}$	Int. Pull-up	Configuration JTAG INIT pin (active LOW); this pin is used to sense when all devices are ready to be programmed (i.e., INIT = 1 indicates target device(s) are ready to receive configuration data and INIT = 0 indicates that the target device(s) are being cleared and are not ready to be configured)
POR_BYPASS	108	IN	$V_{\text{CCH}}$	Int. Pull-down	Power-on-reset (POR) bypass input; used in conjunction with POR_RESET to bypass the internal POR circuit in favor of using an external board-level POR circuit; the internal POR circuit is bypassed when POR_BYPASS = 1; the POR_BYPASS pin should be held at a static 0 or 1 while the ACE controller is receiving power.
POR_RESET	72	IN	$V_{\text{CCH}}$	Int. Pull-down	Power-on-reset bypass input; can be used in conjunction with POR_BYPASS to bypass the internal POR circuit in favor of using an external board-level POR circuit; all internal circuitry is reset when POR_BYPASS = 1 and POR_RESET = 1; The POR_RESET pulse duration should be at least 1 microsecond long.
POR_TEST	74	OUT	$V_{\text{CCH}}$	N/A	Power-on-reset test output; this pin should be a true "no connect" on the board.

**Notes:**

- JTAG 1149.1 requires a pull-up resistor on potentially undriven TDO/TMS signals.



Table 44 lists ACE Controller voltage and ground pins.

Table 44: ACE Controller Voltage and Ground Pins

Pin Name	Pin Number	Description
VCCH	1	High-voltage (3.3V) source pins
	17	
	37	
	55	
	73	
	92	
	109	
	128	
VCCL	10	Low-voltage (2.5V or 3.3V) source pins
	15	
	25	
	57	
	84	
	94	
	99	
	126	
GND	9	Ground pins
	18	
	26	
	35	
	46	
	54	
	64	
	75	
	83	
	91	
	100	
	110	
	111	
	112	
	120	
	129	
136		
144		

Table 45 lists ACE Controller no-connect pins.

Table 45: ACE Controller No-Connect Pins

Pin Name	Pin Number	Description
NC	2	Pins that must not be connected to any board-level signals, including ground and power planes.
	14	
	16	
	19	
	20	
	21	
	22	
	23	
	24	
	27	
	28	
	29	
	30	
	31	
	32	
	34	
	36	
	38	
	40	
	71	
90		
122		
124		
127		
143		

## Ordering Information

System ACE Valid Ordering Combinations	Description	Package	Operating Range
XCCACE — TQ144I	ACE Controller Chip	TQ144	(T <sub>A</sub> = -40 to +85 °C)
XCCACE128-I	128-Mbit ACE Flash Card	CF Type I	(T <sub>A</sub> = -40 to +85 °C)
XCCACE256-I	256-Mbit ACE Flash Card	CF Type I	(T <sub>A</sub> = -40 to +85 °C)

## Revision History

Version No.	Date	Description
1.0	04/25/01	Initial Xilinx release.