

---

# ***Fusion and ProASIC3/E Macro Library Guide***

*for Software v7.1*



---

*Table of Contents*

## **Actel Corporation, Mountain View, CA 94043**

© 2006 Actel Corporation. All rights reserved.

Part Number: 5-02-00029-5

Release: April 2006

No part of this document may be copied or reproduced in any form or by any means without prior written consent of Actel.

Actel makes no warranties with respect to this documentation and disclaims any implied warranties of merchantability or fitness for a particular purpose. Information in this document is subject to change without notice. Actel assumes no responsibility for any errors that may appear in this document.

This document contains confidential proprietary information that is not to be disclosed to any unauthorized person without prior written consent of Actel Corporation.

### **Trademarks**

Actel and the Actel logo are registered trademarks of Actel Corporation.

Adobe and Acrobat Reader are registered trademarks of Adobe Systems, Inc.

All other products or brand names mentioned are trademarks or registered trademarks of their respective holders.

---

# Table of Contents

## Introduction

## Lists

<b>List of Combinational Macros</b> .....	<b>7</b>
<b>List of Sequential Macros</b> .....	<b>9</b>
<b>List of RAM Macros</b> .....	<b>11</b>
<b>List of Input/Output Macros</b> .....	<b>13</b>
<b>Alphabetical List of Macros</b> .....	<b>15</b>
<b>Combinational/Sequential Macros</b> .....	<b>19</b>
Combinational, AND .....	.20
Combinational, AND-OR .....	.25
Combinational, AND-OR-INVERT .....	.32
Combinational, AND-OR-INVERT .....	.33
Combinational, AND-XOR .....	.35
Combinational, AND-XOR-INVERT .....	.35
Combinational, 3-Input Gate .....	.37
Buffers .....	.44
Clock Interface .....	.45
Sequential, D-Type Flip-Flop .....	.47
Sequential D-Type Flip-Flop with Enable .....	.51
Sequential, D-Type Flip-Flop .....	.64
Sequential, Data Latch .....	.80
Sequential, Data Latch with Clear .....	.81
Sequential, Data Latch with Preset .....	.86
Sequential .....	.88
Combinational, Inverters .....	.93
Combinational, AND-OR .....	.94
Combinational, AND-OR-INVERT .....	.97
Combinational, Multiplexer .....	.98
Combinational, NAND .....	.100
Combinational, NOR .....	.104
Combinational, OR-AND .....	.107
Combinational, OR-AND-INVERT .....	.109
Combinational, OR .....	.111
Combinational, XOR-AND .....	.115
Combinational, XNOR-AND .....	.116
Combinational, XNOR-NAND .....	.117

---

*Table of Contents*

Combinational, XNOR .....	.118
Combinational, XOR-OR .....	.119
Combinational, XOR .....	.120
Combinational, Gate .....	.121
<b>RAM and FIFO Macros .....</b>	<b>123</b>
RAM Macros .....	.124
FIFO Macros .....	.130
<b>Flash Memory Block Macro .....</b>	<b>133</b>
PLL Macros .....	.134
<b>Analog System Builder Macro .....</b>	<b>139</b>
Analog System Builder .....	.140
<b>Voltage Regulator and Power Supply Monitor Macro .....</b>	<b>151</b>
Voltage Regulator and Power Supply Monitor .....	.152
<b>I/O Macros .....</b>	<b>155</b>
Input/Output, General Use .....	.156
Fusion, ProASIC3, and ProASIC3E Input IO Macros .....	.159
Bi-Directional IO Macros .....	.161
Clock Buffers .....	.163
Output Buffers .....	.164
Tri-State Buffer Macros .....	.166
Differential IO Macros .....	.168
DDR Macros .....	.170
<b>Clocking Resources .....</b>	<b>171</b>
PLL Macros .....	.172
Dynamic PLL .....	.176

---

# Introduction

This macro library guide supports only the Fusion, ProASIC3 (low cost) and ProASIC3E (enhanced) families. The ProASIC3/E devices offer a wide range of unique and special features and require a dedicated macro guide. For information on macros available in other families, see the *Antifuse Macro Library Guide* (for the MX, eX, SX, SX-A, and Axcelerator devices) or the *ProASIC/ProASIC<sup>PLUS</sup> MLG*, as appropriate.

The naming convention of previous antifuse families has been a source of confusion. With ProASIC3/E we are introducing a new naming convention for sequential macros that is unambiguous and extensible, making it possible to understand the function of the macros by their name alone.

The first two mandatory characters of the macro name will indicate the basic macro function:

- DF - D-type flip-flop
- TF - Toggle flip-flop
- JF - JK flip-flop
- DL - D-type latch

The next mandatory character indicates the output polarity:

- I - output inverted (QN with bubble)
- N - output non-inverted (Q without bubble)

The next mandatory number indicates the polarity of the clock or gate:

- 1 - rising edge triggered flip-flop or transparent high latch (non-bubbled)
- 0 - falling edge triggered flip-flop or transparent low latch (bubbled)

The next two optional characters indicate the polarity of the Enable pin, if present:

- E0 - active low enable (bubbled)
- E1 - active high enable (non-bubbled)

The next two optional characters indicate the polarity of the asynchronous Preset pin, if present:

- P0 - active low preset (bubbled)
- P1 - active high preset (non-bubbled)

The next two optional characters indicate the polarity of the asynchronous Clear pin, if present:

- C0 - active low preset (bubbled)

- C1 - active high preset (non-bubbled)

Combinatorial macros all use one tile in the Fusion and ProASIC3/E families.



---

# List of Combinational Macros

AND2 .....	20	AXOI1 .....	41
AND2A .....	20	AXOI2 .....	41
AND2B .....	21	AXOI3 .....	42
AND3 .....	21	AXOI4 .....	42
AND3A .....	22	AXOI5 .....	43
AND3B .....	22	AXOI7 .....	43
AND3C .....	23	BUFF .....	44
AO1 .....	23	BUFD .....	44
AO12 .....	25	CLKINT .....	45
AO13 .....	25	GND .....	93
AO14 .....	26	INV .....	93
AO15 .....	26	INVD .....	94
AO16 .....	27	MAJ3 .....	94
AO17 .....	27	MAJ3X .....	95
AO18 .....	28	MAJ3XI .....	95
AO1A .....	28	MIN3 .....	96
AO1B .....	29	MIN3X .....	96
AO1C .....	29	MIN3XI .....	97
AO1D .....	30	MX2 .....	98
AO1E .....	30	MX2A .....	98
AOI1 .....	31	MX2B .....	99
AOI1A .....	32	MX2C .....	99
AOI1B .....	32	NAND2 .....	100
AOI1C .....	33	NAND2A .....	101
AOI1D .....	33	NAND2B .....	101
AOI5 .....	34	NAND3 .....	102
AX1 .....	35	NAND3A .....	102
AX1A .....	35	NAND3B .....	103
AX1B .....	36	NAND3C .....	103
AX1C .....	36	NOR2 .....	104
AX1D .....	37	NOR2A .....	104
AX1E .....	37	NOR2B .....	105
AXO1 .....	38	NOR3 .....	105
AXO2 .....	38	NOR3A .....	106
AXO3 .....	39	NOR3B .....	106
AXO5 .....	39	NOR3C .....	107
AXO6 .....	40	OA1 .....	107
AXO7 .....	40	OA1A .....	108

OA1B . . . . .	108
OA1C . . . . .	109
OAI1 . . . . .	109
OR2 . . . . .	111
OR2A . . . . .	111
OR2B . . . . .	112
OR3 . . . . .	112
OR3A . . . . .	113
OR3B . . . . .	113
OR3C . . . . .	114
VCC . . . . .	114
XA1 . . . . .	115
XA1A . . . . .	115
XA1B . . . . .	116
XA1C . . . . .	116
XAI1 . . . . .	117
XAI1A . . . . .	117
XNOR2 . . . . .	118
XNOR3 . . . . .	118
XO1 . . . . .	119
XO1A . . . . .	119
XOR2 . . . . .	120
XOR3 . . . . .	120
ZOR3 . . . . .	121
ZOR3I . . . . .	121

---

# List of Sequential Macros

DFN1 .....	47	DFI1E1C1 .....	66
DFI1 .....	47	DFI0E1C1 .....	67
DFN0 .....	48	DFI1E0C1 .....	67
DFI0 .....	48	DFI0E0C1 .....	68
DFN1C1 .....	49	DFI1E1C0 .....	68
DFN0C1 .....	49	DFI0E1C0 .....	69
DFN1C0 .....	50	DFI1E0C0 .....	69
.....	50	DFI0E0C0 .....	70
DFI1C1 .....	50	DFI1E1P1 .....	70
DFN0C0 .....	51	DFI0E1P1 .....	71
DFI1C0 .....	52	DFI1E0P1 .....	71
DFI0C1 .....	52	DFI0E0P1 .....	72
DFI0C0 .....	53	DFI1E1P0 .....	72
DFN1E1 .....	53	DFI0E1P0 .....	73
DFN1E0 .....	54	DFI1E0P0 .....	73
DFN0E0 .....	54	DFI0E0P0 .....	74
DFN1E1C0 .....	55	DFN0P1 .....	74
DFN0E1C0 .....	55	DFN1P0 .....	75
DFN1E0C0 .....	56	DFI1P1 .....	75
DFN0E0C0 .....	56	DFN0P0 .....	76
DFN1E1C1 .....	57	DFI1P0 .....	76
DFN0E1C1 .....	57	DFI0P1 .....	77
DFN1E0C1 .....	58	DFI0P0 .....	77
DFN0E0C1 .....	59	DFN1P1C1 .....	78
DFN1E1P1 .....	59	DFI1P1C1 .....	78
DFN0E1P1 .....	60	DFN0P1C1 .....	79
DFN1E0P1 .....	60	DFI0P1C1 .....	79
DFN0E0P1 .....	61	DLN1 .....	80
DFN1E1P0 .....	61	DLI1 .....	80
DFN0E1P0 .....	62	DLN0 .....	81
DFN1E0P0 .....	62	DLI0 .....	81
DFN0E0P0 .....	63	DLN1C0 .....	82
DFN0E1 .....	63	DLN1C1 .....	82
DFN1P1 .....	64	DLN0C1 .....	83
DFI1E1 .....	64	DLI1C1 .....	83
DFI0E1 .....	65	DLI0C1 .....	84
DFI1E0 .....	65	DLN0C0 .....	84
DFI0E0 .....	66	DLI1C0 .....	85

DLI0C0 . . . . .	85
DLN1P1 . . . . .	86
DLN0P1 . . . . .	86
DLN1P0 . . . . .	87
DLN0P0 . . . . .	87
DLI1P0 . . . . .	88
DLI0P0 . . . . .	88
DLI1P1 . . . . .	89
DLI0P1 . . . . .	89
DLN1P1C1 . . . . .	90
DLI1P1C1 . . . . .	90
DLN0P1C1 . . . . .	91
DLI0P1C1 . . . . .	91

---

## List of RAM Macros

RAM4K9 and RAM512X18 .....	124
FLEXRAM4K9 and FLEXRAM512X18 ..	127
FIFO4K18 .....	130



---

# List of Input/Output Macros

Flash Memory Block . . . . .	134
Analog System Builder . . . . .	140
Voltage Regulator and Power Supply	
Monitor (VRPSM) . . . . .	152
BIBUF . . . . .	156
CLKBIBUF . . . . .	156
CLKBUF . . . . .	157
INBUF . . . . .	157
OUTBUF	
F . . . . .	158
TRIBUFF . . . . .	158
INBUF_X . . . . .	160
BIBUF_X . . . . .	161
CLKBUF_X . . . . .	163
OUTBUF_X . . . . .	165
TRIBUFF_X . . . . .	167
INBUF_LVDS; INBUF_LVPECL . . . . .	168
CLKBUF_LVDS; CLKBUF_LVPECL . . . . .	168
OUTBUF_LVDS; OUTBUF_LVPECL . . . . .	169
DDR_REG . . . . .	170
DDR_OUT . . . . .	170
PLL for ProASIC3/E . . . . .	172
PLL for Fusion . . . . .	174
DYNCCC . . . . .	176
PLLINT . . . . .	177
UJTAG . . . . .	177
UFROM . . . . .	178
RCOSC . . . . .	178
XTLOSC . . . . .	179
CLKSRC . . . . .	179
CLKDLY . . . . .	180
CLKDIVDLY . . . . .	180
CLKDIVDLY1 . . . . .	181
NGMUX . . . . .	181



---

# Alphabetical List of Macros

.....	50	AXO6 .....	40
Analog System Builder .....	140	AXO7 .....	40
AND2 .....	20	AXOI1 .....	41
AND2A .....	20	AXOI2 .....	41
AND2B .....	21	AXOI3 .....	42
AND3 .....	21	AXOI4 .....	42
AND3A .....	22	AXOI5 .....	43
AND3B .....	22	AXOI7 .....	43
AND3C .....	23	BIBUF .....	156
AO1 .....	23	BIBUF_X .....	161
AO12 .....	25	BUFD .....	44
AO13 .....	25	BUFF .....	44
AO14 .....	26	CLKBIBUF .....	156
AO15 .....	26	CLKBUF .....	157
AO16 .....	27	CLKBUF_LVDS; CLKBUF_LVPECL .....	168
AO17 .....	27	CLKBUF_X .....	163
AO18 .....	28	CLKDIVDLY .....	180
AO1A .....	28	CLKDIVDLY1 .....	181
AO1B .....	29	CLKDLY .....	180
AO1C .....	29	CLKINT .....	45
AO1D .....	30	CLKSRC .....	179
AO1E .....	30	DDR_OUT .....	170
AOI1 .....	31	DDR_REG .....	170
AOI1A .....	32	DFI0 .....	48
AOI1B .....	32	DFI0C0 .....	53
AOI1C .....	33	DFI0C1 .....	52
AOI1D .....	33	DFI0E0 .....	66
AOI5 .....	34	DFI0EOC0 .....	70
AX1 .....	35	DFI0EOC1 .....	68
AX1A .....	35	DFI0EOP0 .....	74
AX1B .....	36	DFI0EOP1 .....	72
AX1C .....	36	DFI0E1 .....	65
AX1D .....	37	DFI0E1C0 .....	69
AX1E .....	37	DFI0E1C1 .....	67
AXO1 .....	38	DFI0E1P0 .....	73
AXO2 .....	38	DFI0E1P1 .....	71
AXO3 .....	39	DFIOP0 .....	77
AXO5 .....	39	DFIOP1 .....	77

DFI0P1C1	79	DFN1P0	75
DFI1	47	DFN1P1	64
DFI1C0	52	DFN1P1C1	78
DFI1C1	50	DLI0	81
DFI1E0	65	DLI0C0	85
DFI1E0C0	69	DLI0C1	84
DFI1E0C1	67	DLI0P0	88
DFI1E0P0	73	DLI0P1	89
DFI1E0P1	71	DLI0P1C1	91
DFI1E1	64	DLI1	80
DFI1E1C0	68	DLI1C0	85
DFI1E1C1	66	DLI1C1	83
DFI1E1P0	72	DLI1P0	88
DFI1E1P1	70	DLI1P1	89
DFI1P0	76	DLI1P1C1	90
DFI1P1	75	DLN0	81
DFI1P1C1	78	DLN0C0	84
DFNO	48	DLN0C1	83
DFN0C0	51	DLN0P0	87
DFN0C1	49	DLN0P1	86
DFN0E0	54	DLN0P1C1	91
DFN0E0C0	56	DLN1	80
DFN0E0C1	59	DLN1C0	82
DFN0E0P0	63	DLN1C1	82
DFN0E0P1	61	DLN1P0	87
DFN0E1	63	DLN1P1	86
DFN0E1C0	55	DLN1P1C1	90
DFN0E1C1	57	DYNCCC	176
DFN0E1P0	62	FIFO4K18	130
DFN0E1P1	60	Flash Memory Block	134
DFN0P0	76	FLEXRAM4K9 and FLEXRAM512X18	127
DFN0P1	74	GND	93
DFN0P1C1	79	INBUF	157
DFN1	47	INBUF_LVDS; INBUF_LVPECL	168
DFN1C0	50	INBUF_X	160
DFN1C1	49	INV	93
DFN1E0	54	INVD	94
DFN1E0C0	56	MAJ3	94
DFN1E0C1	58	MAJ3X	95
DFN1E0P0	62	MAJ3XI	95
DFN1E0P1	60	MIN3	96
DFN1E1	53	MIN3X	96
DFN1E1C0	55	MIN3XI	97
DFN1E1C1	57	MX2	98
DFN1E1P0	61	MX2A	98
DFN1E1P1	59	MX2B	99

MX2C	99	Monitor (VRPSM)	152
NAND2	100	XA1	115
NAND2A	101	XA1A	115
NAND2B	101	XA1B	116
NAND3	102	XA1C	116
NAND3A	102	XAI1	117
NAND3B	103	XAI1A	117
NAND3C	103	XNOR2	118
NGMUX	181	XNOR3	118
NOR2	104	XO1	119
NOR2A	104	XO1A	119
NOR2B	105	XOR2	120
NOR3	105	XOR3	120
NOR3A	106	XTLOSC	179
NOR3B	106	ZOR3	121
NOR3C	107	ZOR3I	121
OA1	107		
OA1A	108		
OA1B	108		
OA1C	109		
OAI1	109		
OR2	111		
OR2A	111		
OR2B	112		
OR3	112		
OR3A	113		
OR3B	113		
OR3C	114		
OUTBUF_LVDS; OUTBUF_LVPECL	169		
OUTBUF_X	165		
OUTBUF			
F	158		
PLL for Fusion	174		
PLL for ProASIC3/E	172		
PLLINT	177		
RAM4K9 and RAM512X18	124		
RCOSC	178		
TRIBUFF	158		
TRIBUFF_X	167		
UFROM	178		
UJTAG	177		
VCC	114		
Voltage Regulator and Power Supply			




---

## **Combinational/Sequential Macros**

## AND2

Fusion, ProASIC3, ProASIC3E



### Function

2-Input AND

### Truth Table


A	B	Y
X	0	0
0	X	0
1	1	1

Input	Output
A, B	Y

Family	Tiles
All	1

## AND2A

Fusion, ProASIC3, ProASIC3E



### Function

2-Input AND with active low A Input

### Truth Table


A	B	Y
X	0	0
0	1	1
1	X	0

Input	Output
A, B	Y

Family	Tiles
All	1

## AND2B

Fusion, ProASIC3, ProASIC3E

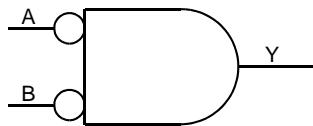

### Function

2-Input AND with active low Inputs

### Truth Table

A	B	Y
0	0	1
X	1	0
1	X	0

Input  
A, B

Output  
Y

### Family


### Tiles

All

1

## AND3

Fusion, ProASIC3, ProASIC3E

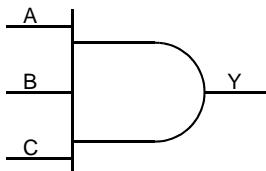

### Function

3-Input AND

### Truth Table

A	B	C	Y
X	X	0	0
X	0	X	0
0	X	X	0
1	1	1	1

Input  
A, B,C

Output  
Y

### Family


### Tiles

All

1

## AND3A

Fusion, ProASIC3, ProASIC3E

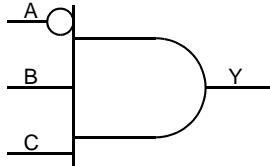

### Function

3-Input AND with active low A-Input

### Truth Table

A	B	C	Y
X	X	0	0
X	0	X	0
0	1	1	1
1	X	X	0


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## AND3B

Fusion, ProASIC3, ProASIC3E

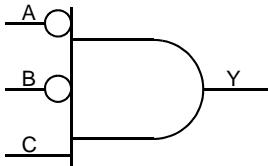

### Function

3-Input AND with active low A- and B-Inputs

### Truth Table

A	B	C	Y
X	X	0	0
0	0	1	1
X	1	X	0
1	X	X	0


Input  
A, B,C

Output  
Y

Family	Tiles
All	1

## AND3C

Fusion, ProASIC3, ProASIC3E

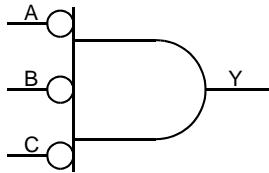

### Function

3-Input AND with active low Inputs

### Truth Table

A	B	C	Y
0	0	0	1
X	X	1	0
X	1	X	0
1	X	X	0


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## AO1

Fusion, ProASIC3, ProASIC3E

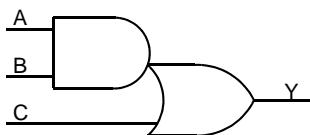

### Function

3-Input AND-OR

### Truth Table

A	B	C	Y
X	0	0	0
X	X	1	1
0	X	0	0
1	1	X	1

Input  
A, B, C


Output  
Y

Family	Tiles
All	1



## AO12

Fusion, ProASIC3, ProASIC3E

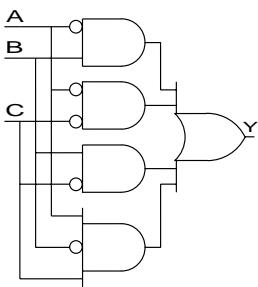

Input  
A, B, C

Output  
Y

### Function

3-Input AND-OR

### Truth Table

A	B	C	Y
0	0	0	1
1	0	0	0
0	1	0	1
1	1	0	1
0	0	1	0
1	0	1	1
0	1	1	1
1	1	1	0

Family


Tiles

All

1

## AO13

Fusion, ProASIC3, ProASIC3E

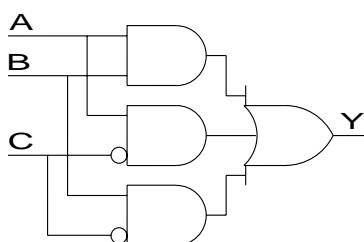

Input  
A, B, C

Output  
Y

### Function

3-Input AND-OR

### Truth Table

A	B	C	Y
0	0	0	0
1	0	0	1
0	1	0	1
1	1	0	1
0	0	1	0
1	0	1	0
0	1	1	0
1	1	1	1

Family


Tiles

All

1

## AO14

Fusion, ProASIC3, ProASIC3E

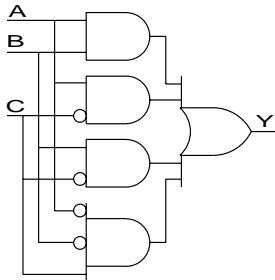

Input	Output
A, B, C	Y

### Function

3-Input AND-OR


### Truth Table

A	B	C	Y
0	0	0	0
1	0	0	1
0	1	0	1
1	1	0	1
0	0	1	1
1	0	1	0
0	1	1	0
1	1	1	1

Family	Tiles
All	1

## AO15

Fusion, ProASIC3, ProASIC3E

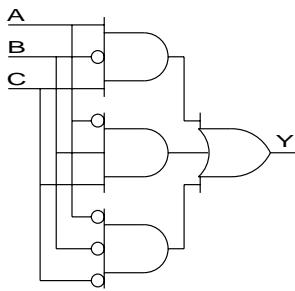

Input	Output
A, B, C	Y

### Function

3-Input AND-OR


### Truth Table

A	B	C	Y
0	0	0	1
1	0	0	0
0	1	0	0
1	1	0	0
0	0	1	0
1	0	1	1
0	1	1	1
1	1	1	0

Family	Tiles
All	1

## AO16

Fusion, ProASIC3, ProASIC3E

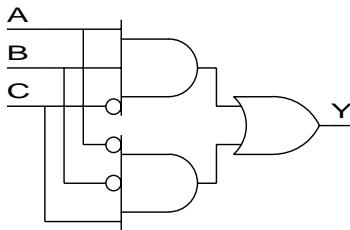

Input  
A, B, C

Output  
Y

### Function

3-Input AND-OR


### Truth Table

A	B	C	Y
0	0	0	0
1	0	0	0
0	1	0	0
1	1	0	1
0	0	1	1
1	0	1	0
0	1	1	0
1	1	1	0

Family	Tiles
All	1

## AO17

Fusion, ProASIC3, ProASIC3E

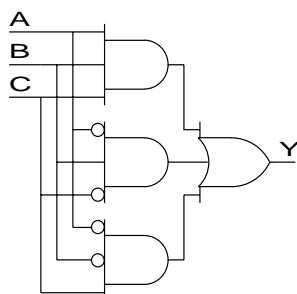

Input  
A, B, C

Output  
Y

### Function

3-Input AND-OR


### Truth Table

A	B	C	Y
0	0	0	0
1	0	0	0
0	1	0	1
1	1	0	0
0	0	1	1
1	0	1	0
0	1	1	0
1	1	1	1

Family	Tiles
All	1

## AO18

Fusion, ProASIC3, ProASIC3E

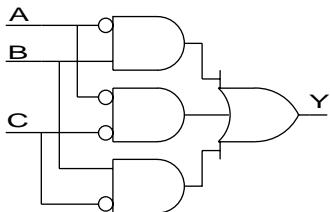

Input	Output
A, B, C	Y

### Function

3-Input AND-OR


### Truth Table

A	B	C	Y
0	0	0	1
1	0	0	0
0	1	0	1
1	1	0	1
0	0	1	0
1	0	1	0
0	1	1	1
1	1	1	0

Family	Tiles
All	1

## AO1A

Fusion, ProASIC3, ProASIC3E

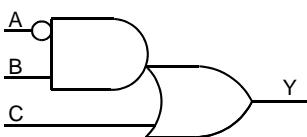

Input	Output
A, B, C	Y

### Function

3-Input AND-OR with active low A-Input


### Truth Table

A	B	C	Y
X	0	0	0
X	X	1	1
0	1	X	1
1	X	0	0

Family	Tiles
All	1

## AO1B

Fusion, ProASIC3, ProASIC3E

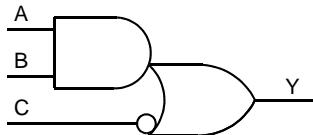

### Function

3-Input AND-OR with active low C-Input

### Truth Table

A	B	C	Y
X	X	0	1
X	0	1	0
0	X	1	0
1	1	X	1


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## AO1C

Fusion, ProASIC3, ProASIC3E

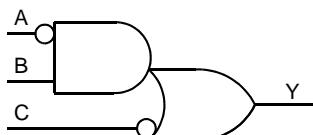

### Function

3-Input AND-OR with active low A- and C-Inputs

### Truth Table

A	B	C	Y
X	X	0	1
X	0	1	0
0	1	X	1
1	X	1	0


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## AO1D

Fusion, ProASIC3, ProASIC3E

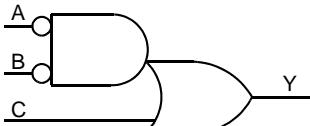

### Function

3-Input AND-OR with active low A- and B-Inputs

### Truth Table


A	B	C	Y
0	0	X	1
X	1	0	0
X	X	1	1
1	X	0	0

Input	Output
A, B, C	Y

Family	Tiles
All	1

## AO1E

Fusion, ProASIC3, ProASIC3E

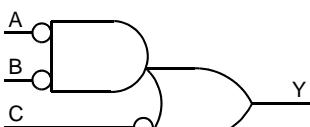

### Function

3-Input AND-OR with active high A- and B-Inputs

### Truth Table


A	B	C	Y
X	X	0	1
0	0	X	1
X	1	1	0
1	X	1	0

Input	Output
A, B, C	Y

Family	Tiles
All	1

# AOI1

Fusion, ProASIC3, ProASIC3E

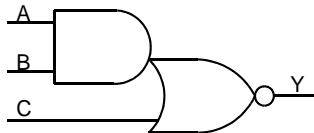

## Function

3-Input AND-OR-INVERT

## Truth Table

A	B	C	Y
X	0	0	1
X	X	1	0
0	X	0	1
1	1	X	0


**Input**  
A, B, C

**Output**  
Y

Family	Tiles
All	1

## AOI1A

Fusion, ProASIC3, ProASIC3E

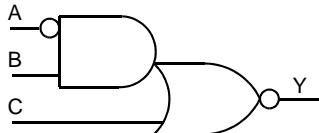

### Function

3-Input AND-OR-INVERT with active low A-Input

### Truth Table

A	B	C	Y
X	0	0	1
X	X	1	0
0	1	X	0
1	X	0	1


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## AOI1B

Fusion, ProASIC3, ProASIC3E

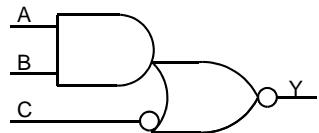

### Function

3-Input AND-OR-INVERT with active low C-Input

### Truth Table

A	B	C	Y
X	X	0	0
X	0	1	1
0	X	1	1
1	1	X	0


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## AOI1C

Fusion, ProASIC3, ProASIC3E

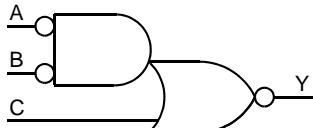

### Function

3 Input AND-OR-INVERT with active low A- and B-Inputs

### Truth Table

A	B	C	Y
0	0	X	0
X	1	0	1
X	X	1	0
1	X	0	1


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## AOI1D

Fusion, ProASIC3, ProASIC3E

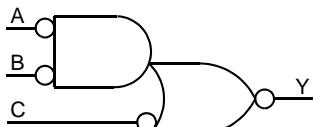

### Function

3-Input AND-OR-INVERT with active low Inputs


### Truth Table

A	B	C	Y
X	X	0	0
0	0	X	0
X	1	1	1
1	X	1	1

Input  
A, B, C

Output  
Y

Family	Tiles
All	1

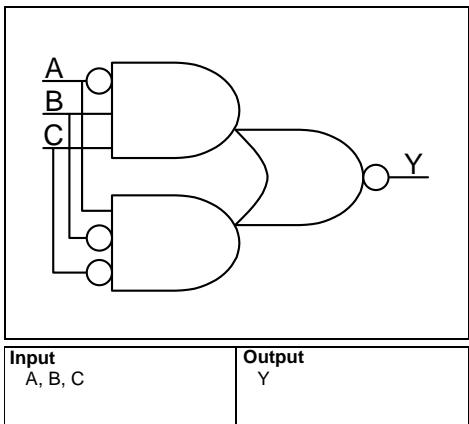**Function**

3-Input AND-OR-INVERT


**Truth Table**

A	B	C	Y
0	0	0	1
1	0	0	0
0	1	0	1
1	1	0	1
0	0	1	1
1	0	1	1
0	1	1	0

Family	Tiles
All	1

## AX1

Fusion, ProASIC3, ProASIC3E

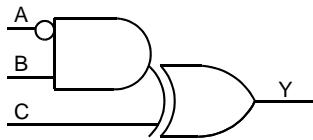

### Input

A, B, C

### Output

Y

### Function

3-Input AND-XOR with active low A-Input

### Truth Table

A	B	C	Y
X	0	0	0
X	0	1	1
0	1	0	1
0	1	1	0
1	X	0	0
1	X	1	1


### Family

Tiles

All 1

## AX1A

Fusion, ProASIC3, ProASIC3E

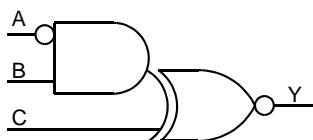

### Input

A, B, C

### Output

Y

### Function

3-Input AND-XOR-INVERT with active low A-Input

### Truth Table

A	B	C	Y
X	0	0	1
X	0	1	0
0	1	0	0
0	1	1	1
1	X	0	1
1	X	1	0


### Family

Tiles

All 1

## AX1B

Fusion, ProASIC3, ProASIC3E

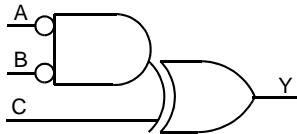

Input  
A, B, C

Output  
Y

### Function

3-Input AND-XOR with active low A- and B-Inputs


### Truth Table

A	B	C	Y
0	0	0	1
0	0	1	0
X	1	0	0
X	1	1	1
1	X	0	0
1	X	1	1

Family	Tiles
All	1

## AX1C

Fusion, ProASIC3, ProASIC3E

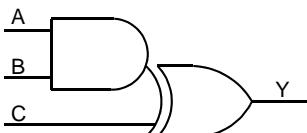

Input  
A, B, C

Output  
Y

### Function

3-Input AND-XOR


### Truth Table

A	B	C	Y
X	0	0	0
X	0	1	1
0	X	0	0
0	X	1	1
1	1	0	1
1	1	1	0

Family	Tiles
All	1

## AX1D

Fusion, ProASIC3, ProASIC3E

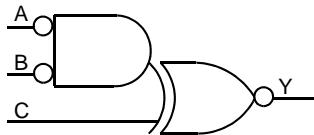

**Input**  
A, B, C

**Output**  
Y

### Function

3-Input AND-XNOR


### Truth Table

A	B	C	Y
0	0	0	0
1	0	0	1
0	1	0	1
1	1	0	1
0	0	1	1
1	0	1	0
0	1	1	0
1	1	1	0

Family	Tiles
All	1

## AX1E

Fusion, ProASIC3, ProASIC3E

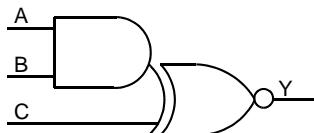

**Input**  
A, B, C

**Output**  
Y

### Function

3-Input AND-XNOR


### Truth Table

A	B	C	Y
0	0	0	1
1	0	0	1
0	1	0	1
1	1	0	0
0	0	1	0
1	0	1	0
0	1	1	0
1	1	1	1

Family	Tiles
All	1

## AXO1

Fusion, ProASIC3, ProASIC3E

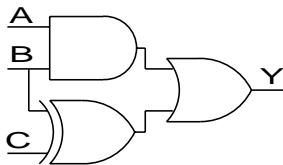

**Input**  
A, B, C

**Output**  
Y

### Function

3-Input Combinatorial Gate


### Truth Table

A	B	C	Y
0	0	0	0
1	0	0	0
0	1	0	1
1	1	0	1
0	0	1	1
1	0	1	1
0	1	1	0
1	1	1	1

Family	Tiles
All	1

## AXO2

Fusion, ProASIC3, ProASIC3E

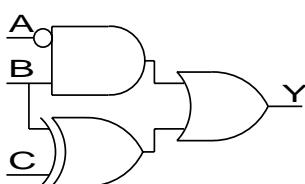

**Input**  
A, B, C

**Output**  
Y

### Function

3-Input Combinatorial Gate


### Truth Table

A	B	C	Y
0	0	0	0
1	0	0	0
0	1	0	1
1	1	0	1
0	0	1	1
1	0	1	1
0	1	1	1
1	1	1	0

Family	Tiles
All	1

## AXO3

Fusion, ProASIC3, ProASIC3E

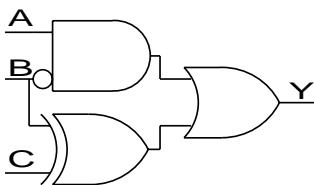

Input	Output
A, B, C	Y

### Function

3-Input Combinatorial Gate


### Truth Table

A	B	C	Y
0	0	0	0
1	0	0	1
0	1	0	1
1	1	0	1
0	0	1	1
1	0	1	1
0	1	1	0
1	1	1	0

Family	Tiles
All	1

## AXO5

Fusion, ProASIC3, ProASIC3E

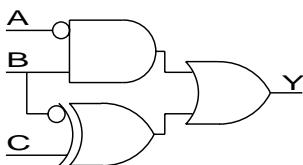

Input	Output
A, B, C	Y

### Function

3-Input Combinatorial Gate


### Truth Table

A	B	C	Y
0	0	0	1
1	0	0	1
0	1	0	1
1	1	0	0
0	0	1	0
1	0	1	0
0	1	1	1
1	1	1	1

Family	Tiles
All	1

## AXO6

Fusion, ProASIC3, ProASIC3E

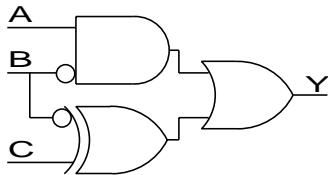

Input  
A, B, C

Output  
Y

### Function

3-Input Combinatorial Gate


### Truth Table

A	B	C	Y
0	0	0	1
1	0	0	1
0	1	0	0
1	1	0	0
0	0	1	0
1	0	1	1
0	1	1	1
1	1	1	1

Family	Tiles
All	1

## AXO7

Fusion, ProASIC3, ProASIC3E

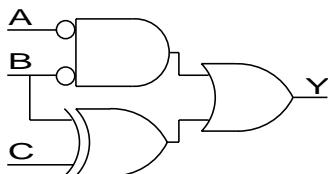

Input  
A, B, C

Output  
Y

### Function

3-Input Combinatorial Gate


### Truth Table

A	B	C	Y
0	0	0	1
1	0	0	0
0	1	0	1
1	1	0	1
0	0	1	1
1	0	1	1
0	1	1	0
1	1	1	0

Family	Tiles
All	1

## AXO1

Fusion, ProASIC3, ProASIC3E

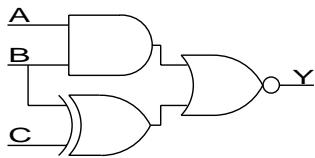

<b>Input</b>	A, B, C
<b>Output</b>	Y

### Function

3-Input Combinatorial Gate


### Truth Table

A	B	C	Y
0	0	0	1
1	0	0	1
0	1	0	0
1	1	0	0
0	0	1	0
1	0	1	0
0	1	1	1
1	1	1	0

Family	Tiles
All	1

## AXO2

Fusion, ProASIC3, ProASIC3E

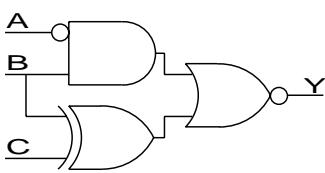

<b>Input</b>	A, B, C
<b>Output</b>	Y

### Function

3-Input Combinatorial Gate


### Truth Table

A	B	C	Y
0	0	0	1
1	0	0	1
0	1	0	0
1	1	0	0
0	0	1	0
1	0	1	0
0	1	1	0
1	1	1	1

Family	Tiles
All	1

## AXO13

Fusion, ProASIC3, ProASIC3E

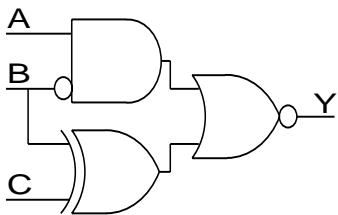

Input  
A, B, C

Output  
Y

### Function

3-Input Combinatorial Gate


### Truth Table

A	B	C	Y
0	0	0	1
1	0	0	0
0	1	0	0
1	1	0	0
0	0	1	0
1	0	1	0
0	1	1	1
1	1	1	1

Family	Tiles
All	1

## AXO14

Fusion, ProASIC3, ProASIC3E

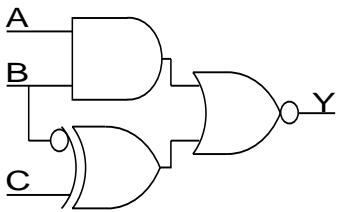

Input  
A, B, C

Output  
Y

### Function

3-Input Combinatorial Gate


### Truth Table

A	B	C	Y
0	0	0	0
1	0	0	0
0	1	0	1
1	1	0	0
0	0	1	1
1	0	1	1
0	1	1	0
1	1	1	0

Family	Tiles
All	1

## AXO15

Fusion, ProASIC3, ProASIC3E

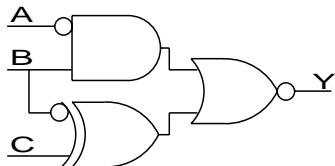

Input	Output
A, B, C	Y

### Function

3-Input Combinatorial Gate


### Truth Table

A	B	C	Y
0	0	0	0
1	0	0	0
0	1	0	0
1	1	0	1
0	0	1	1
1	0	1	1
0	1	1	0
1	1	1	0

Family	Tiles
All	1

## AXO17

Fusion, ProASIC3, ProASIC3E

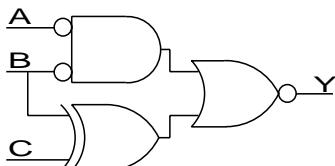

Input	Output
A, B, C	Y

### Function

3-Input Combinatorial Gate


### Truth Table

A	B	C	Y
0	0	0	0
1	0	0	1
0	1	0	0
1	1	0	0
0	0	1	0
1	0	1	0
0	1	1	1
1	1	1	1

Family	Tiles
All	1

## BUFF

Fusion, ProASIC3, ProASIC3E



### Function

Buffer

### Truth Table

A	Y
0	0
1	1


Input  
A

Output  
Y

Family	Tiles
All	1

## BUFD

Fusion, ProASIC3, ProASIC3E



### Function

Buffer

NOTE: The Combiner will not remove this macro

### Truth Table

A	Y
0	0
1	1


Input  
A

Output  
Y

Family	Tiles
All	1

# CLKINT

Fusion, ProASIC3, ProASIC3E

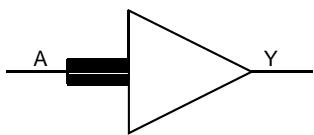

## Function

Internal Clock Interface

## Truth Table

A	Y
0	0
1	1

**Input**  
A

**Output**  
Y


NOTE: CLKINT does not use any tiles..

For more information on the Global Clock Network, refer to the latest Actel datasheet.



## DFN1

Fusion, ProASIC3, ProASIC3E

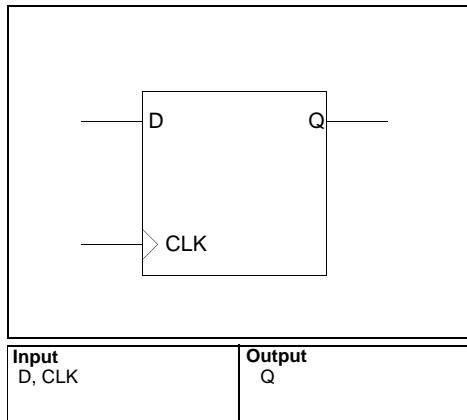

### Function

D-Type Flip-Flop


### Truth Table

CLK	$Q_{n+1}$
↑	D

Family	Tiles
All	1

## DFI1

Fusion, ProASIC3, ProASIC3E

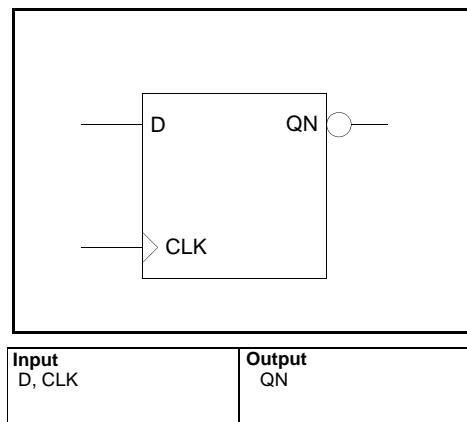

### Function

D-Type Flip-Flop with inverted Output


### Truth Table

CLK	$QN_{n+1}$
↑	!D

Family	Tiles
All	1

## DFN0

Fusion, ProASIC3, ProASIC3E

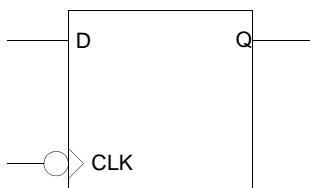

### Function

D-Type Flip-Flop with active low Clock

### Truth Table

CLK	$Q_{n+1}$
↓	D

**Input**  
D, CLK

**Output**  
Q


### Family

### Tiles

All	1
-----	---

## DFI0

Fusion, ProASIC3, ProASIC3E

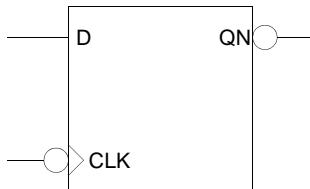

### Function

D-Type Flip-Flop with active low Clock and inverted Output

### Truth Table

CLK	$QN_{n+1}$
↓	!D

**Input**  
D, CLK

**Output**  
QN


### Family

### Tiles

All	1
-----	---

## DFN1C1

Fusion, ProASIC3, ProASIC3E

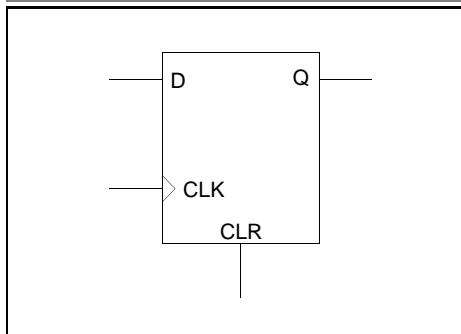

### Function

D-Type Flip-Flop with active high Clear

### Truth Table


CLR	CLK	$Q_{n+1}$
1	X	0
0	↑	D

Input	Output
CLR, D, CLK	Q

Family	Tiles
All	1

## DFN0C1

Fusion, ProASIC3, ProASIC3E

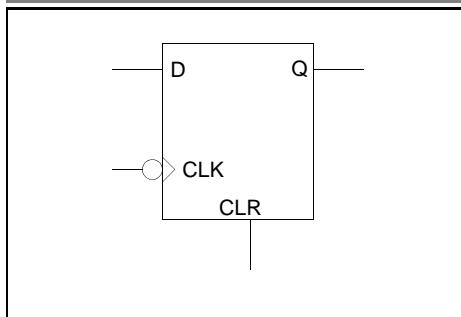

### Function

D-Type Flip-Flop with active high Clear and active low Clock

### Truth Table


CLR	CLK	$Q_{n+1}$
1	X	0
0	↓	D

Input	Output
CLR, D, CLK	Q

Family	Tiles
All	1

## DFN1C0

Fusion, ProASIC3, ProASIC3E

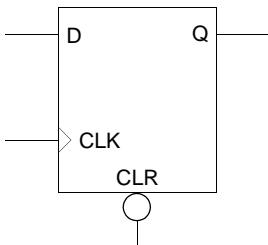

### Function

D-Type Flip-Flop with active low Clear

### Truth Table

CLR	CLK	$Q_{n+1}$
0	X	0
1	↑	D


Input  
CLR, D, CLK

Output  
Q

Family	Tiles
All	1

## DFI1C1

Fusion, ProASIC3, ProASIC3E

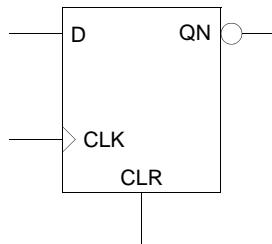

### Function

D-Type Flip-Flop with active high Clear and Clock

### Truth Table

CLR	CLK	$QN_{n+1}$
1	X	1
0	↑	!D


Input  
CLR, D, CLK

Output  
QN

Family	Tiles
All	1

## DFN0C0

Fusion, ProASIC3, ProASIC3E

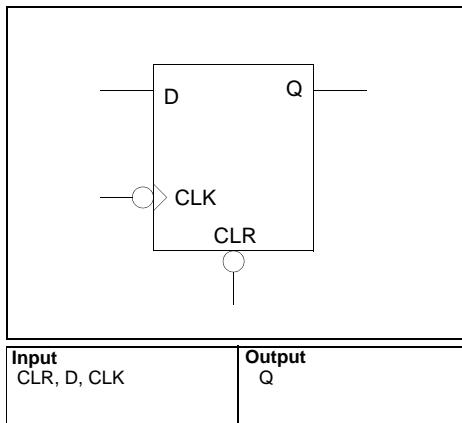

**Function**  
D-Type Flip-Flop with active low Clear and Clock


**Truth Table**

CLR	CLK	$Q_{n+1}$
0	X	0
1	↓	D

Family	Tiles
All	1

## DFI1C0

Fusion, ProASIC3, ProASIC3E

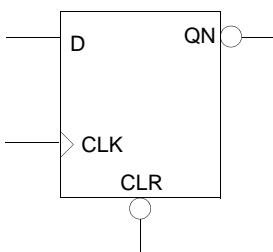

### Function

D-Type Flip-Flop with active low Clear and inverted Output

### Truth Table


CLR	CLK	QN <sub>n+1</sub>
0	X	1
1	↑	!D

Input	Output
CLR, D, CLK	QN

Family	Tiles
All	1

## DFI0C1

Fusion, ProASIC3, ProASIC3E

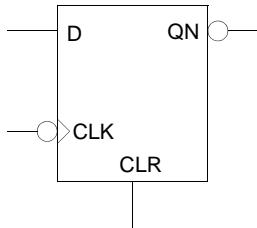

### Function

D-Type Flip-Flop with active high Clear, active low Clock and inverted Output

### Truth Table


CLR	CLK	QN <sub>n+1</sub>
1	X	1
0	↓	!D

Input	Output
CLR, D, CLK	QN

Family	Tiles
All	1

## DFI0C0

Fusion, ProASIC3, ProASIC3E

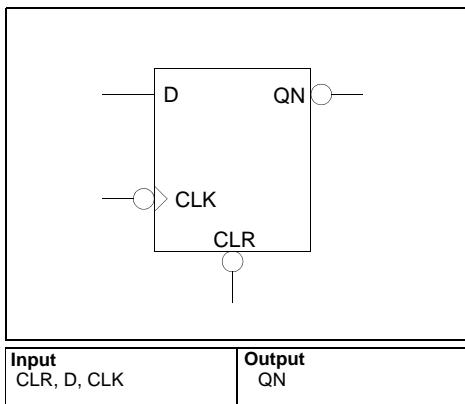

### Function

D-Type Flip-Flop with active low Clear, Clock and inverted Output


### Truth Table

CLR	CLK	QN
0	X	1
1	↓	!D

Family	Tiles
All	1

## DFN1E1

Fusion, ProASIC3, ProASIC3E

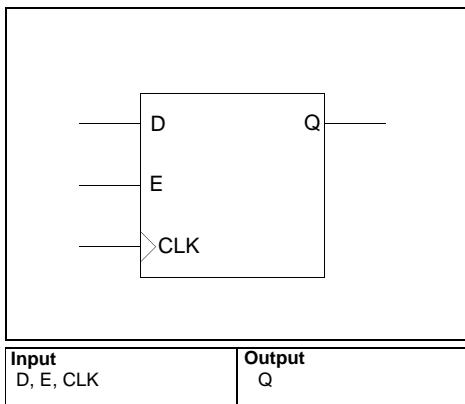

### Function

D-Type Flip-Flop with active high Enable


### Truth Table

E	CLK	$Q_{n+1}$
0	X	Q
1	↑	D

Family	Tiles
All	1

## DFN1E0

Fusion, ProASIC3, ProASIC3E

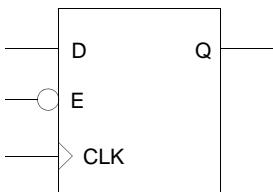

### Function

D-Type Flip-Flop with active low Enable

### Truth Table

E	CLK	$Q_{n+1}$
1	X	Q
0	↑	D

Input  
D, E, CLK

Output  
Q

### Family


### Tiles

All

1

## DFN0E0

Fusion, ProASIC3, ProASIC3E

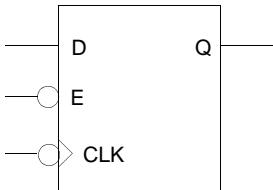

### Function

D-Type Flip-Flop with active low Enable and Clock

### Truth Table

E	CLK	$Q_{n+1}$
1	X	Q
0	↓	D

Input  
D, E, CLK

Output  
Q

### Family


### Tiles

All

1

## DFN1E1C0

Fusion, ProASIC3, ProASIC3E

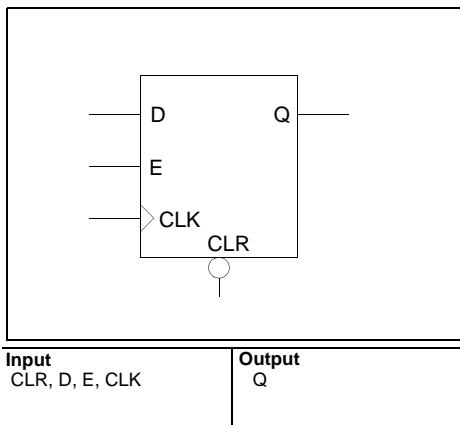

### Function

D-Type Flip-Flop, with Enable and active low Clear


### Truth Table

CLR	E	CLK	$Q_{n+1}$
0	X	X	0
1	0	X	Q
1	1	↑	D

Family	Tiles
All	1

## DFN0E1C0

Fusion, ProASIC3, ProASIC3E

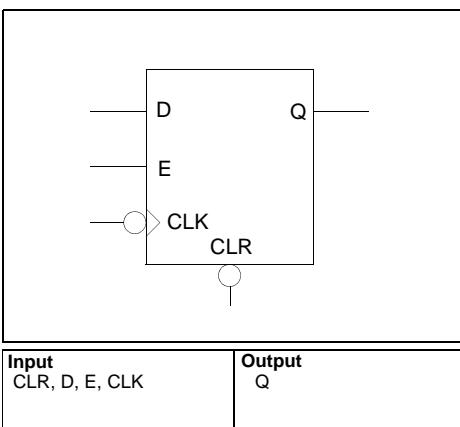

### Function

D-Type Flip-Flop with Enable and active low Clear and Clock


### Truth Table

CLR	E	CLK	$Q_{n+1}$
0	X	X	0
1	0	X	Q
1	1	↓	D

Family	Tiles
All	1

## DFN1E0C0

Fusion, ProASIC3, ProASIC3E

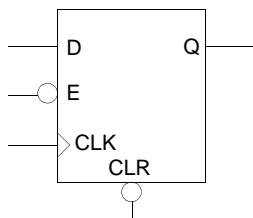

### Function

D-Type Flip-Flop with Active Low Enable and Clear

### Truth Table


CLR	E	CLK	$Q_{n+1}$
0	X	X	0
1	1	X	Q
1	0	↑	D

Input	Output
CLR, D, E, CLK	Q

Family	Tiles
All	1

## DFN0E0C0

Fusion, ProASIC3, ProASIC3E

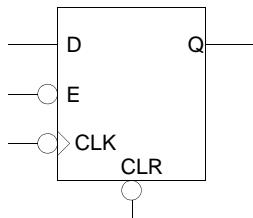

### Function

D-Type Flip-Flop with active low Enable, Clear and Clock

### Truth Table


CLR	E	CLK	$Q_{n+1}$
0	X	X	0
1	1	X	Q
1	0	↓	D

Input	Output
CLR, D, E, CLK	Q

Family	Tiles
All	1

## DFN1E1C1

Fusion, ProASIC3, ProASIC3E

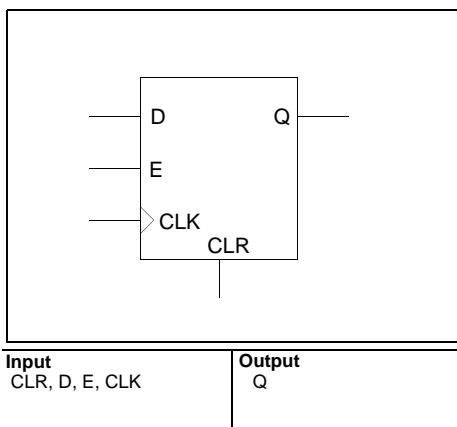

### Function

D-Type Flip-Flop, with Enable and active high Clear


### Truth Table

CLR	E	CLK	$Q_{n+1}$
1	X	X	0
0	0	X	Q
0	1	↑	D

Family	Tiles
All	1

## DFN0E1C1

Fusion, ProASIC3, ProASIC3E

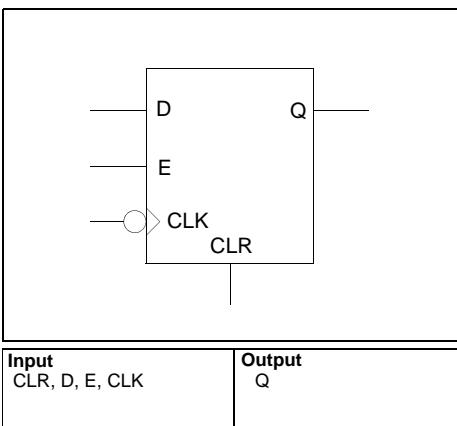


### Function

D-Type Flip-Flop with Enable and active high Clear and active low Clock

### Truth Table

CLR	E	CLK	$Q_{n+1}$
1	X	X	0
0	0	X	Q
0	1	↓	D

Family	Tiles
All	1

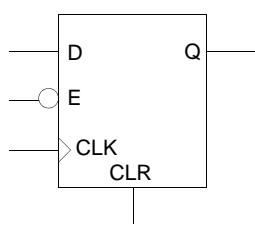**Function**

D-Type Flip-Flop with Active Low Enable and active high Clear

**Truth Table**


CLR	E	CLK	$Q_{n+1}$
1	X	X	0
0	1	X	Q
0	0	↑	D

Input	Output
CLR, D, E, CLK	Q

Family	Tiles
All	1

## DFN0E0C1

Fusion, ProASIC3, ProASIC3E

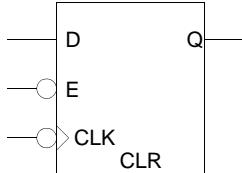	<b>Input</b> CLR, D, E, CLK  <b>Output</b> Q
---	--

### Function

D-Type Flip-Flop with active low Enable, Clock and active high Clear


### Truth Table

CLR	E	CLK	$Q_{n+1}$
1	X	X	0
0	1	X	Q
0	0	↓	D

Family	Tiles
All	1

## DFN1E1P1

Fusion, ProASIC3, ProASIC3E

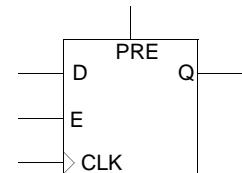	<b>Input</b> D, E, PRE, CLK  <b>Output</b> Q
---	--

### Function

D-Type Flip-Flop with active high Enable and Preset


### Truth Table

PRE	E	CLK	$Q_{n+1}$
1	X	X	1
0	0	X	Q
0	1	↑	D

Family	Tiles
All	1

## DFN0E1P1

Fusion, ProASIC3, ProASIC3E

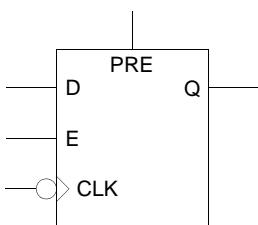

### Function

D-Type Flip-Flop with active high Enable and Preset, and active low Clock

### Truth Table


PRE	E	CLK	$Q_{n+1}$
1	X	X	1
0	0	X	Q
0	1	↓	D

Input	Output
D, E, PRE, CLK	Q

Family	Tiles
All	1

## DFN1E0P1

Fusion, ProASIC3, ProASIC3E

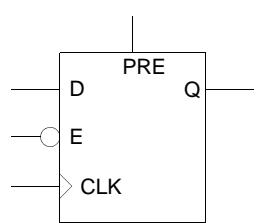

### Function

D-Type Flip-Flop with active low Enable, and active high Preset

### Truth Table


PRE	E	CLK	$Q_{n+1}$
1	X	X	1
0	1	X	Q
0	0	↑	D

Input	Output
D, E, PRE, CLK	Q

Family	Tiles
All	1

## DFN0E0P1

Fusion, ProASIC3, ProASIC3E

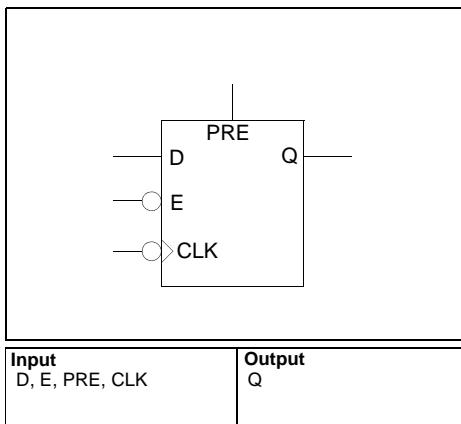

### Function

D-Type Flip-Flop with active low Enable and Clock, and active high Preset


### Truth Table

PRE	E	CLK	$Q_{n+1}$
1	X	X	1
0	1	X	Q
0	0	↓	D

Family	Tiles
All	1

## DFN1E1P0

Fusion, ProASIC3, ProASIC3E

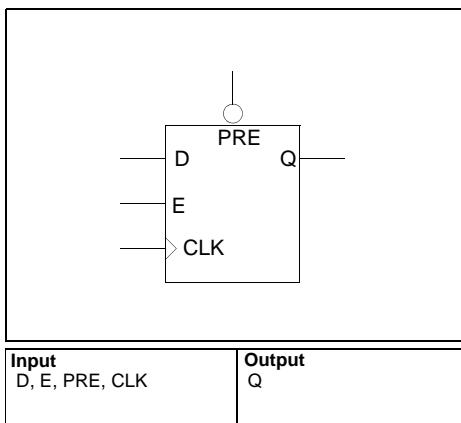

### Function

D-Type Flip-Flop with active high Enable and active low Preset


### Truth Table

PRE	E	CLK	$Q_{n+1}$
0	X	X	1
1	0	X	Q
1	1	↑	D

Family	Tiles
All	1

## DFN0E1P0

Fusion, ProASIC3, ProASIC3E

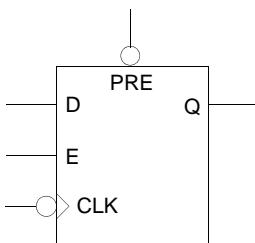

### Function

D-Type Flip-Flop with active high Enable and active low Preset and Clock

### Truth Table

PRE	E	CLK	$Q_{n+1}$
0	X	X	1
1	0	X	Q
1	1	↓	D


**Input**  
D, E, PRE, CLK

**Output**  
Q

Family	Tiles
All	1

## DFN1E0P0

Fusion, ProASIC3, ProASIC3E

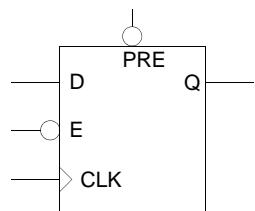

### Function

D-Type Flip-Flop with active low Enable and Preset

### Truth Table

PRE	E	CLK	$Q_{n+1}$
0	X	X	1
1	1	X	Q
1	0	↑	D


**Input**  
D, E, PRE, CLK

**Output**  
Q

Family	Tiles
All	1

## DFN0E0PO

Fusion, ProASIC3, ProASIC3E

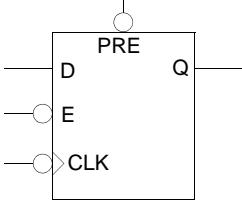
<b>Input</b> D, E, PRE, CLK <b>Output</b> Q

### Function

D-Type Flip-Flop with active low Enable, Clock, and Preset


### Truth Table

PRE	E	CLK	$Q_{n+1}$
0	X	X	1
1	1	X	Q
1	0	↓	D

Family	Tiles
All	1

## DFN0E1

Fusion, ProASIC3, ProASIC3E

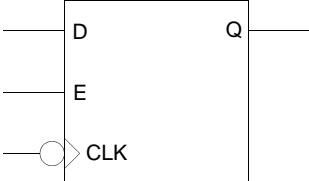
<b>Input</b> D, E, CLK <b>Output</b> Q

### Function

D-Type Flip-Flop, with Enable, and active low Clock


### Truth Table

E	CLK	$Q_{n+1}$
0	X	Q
1	↓	D

Family	Tiles
All	1

## DF1P1

Fusion, ProASIC3, ProASIC3E

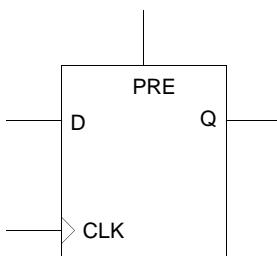

### Function

D-Type Flip-Flop with active high Preset

### Truth Table

PRE	CLK	$Q_{n+1}$
1	X	1
0	↑	D


**Input**  
D, PRE, CLK

**Output**  
Q

Family	Tiles
All	1

## DF1E1

Fusion, ProASIC3, ProASIC3E

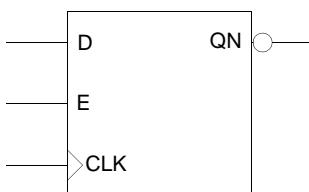

### Function

D-Type Flip-Flop with active high Enable and inverted output

### Truth Table

E	CLK	$QN_{n+1}$
0	X	QN
1	↑	!D


**Input**  
D, E, CLK

**Output**  
QN

Family	Tiles
All	1

## DF10E1

Fusion, ProASIC3, ProASIC3E

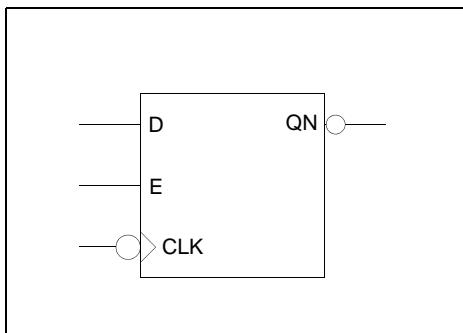

### Function

D-Type Flip-Flop, with Enable, and active low Clock and inverted output

### Truth Table


E	CLK	$QN_{n+1}$
0	X	QN
1	↓	!D

Input	Output
D, E, CLK	QN

Family	Tiles
All	1

## DF11E0

Fusion, ProASIC3, ProASIC3E

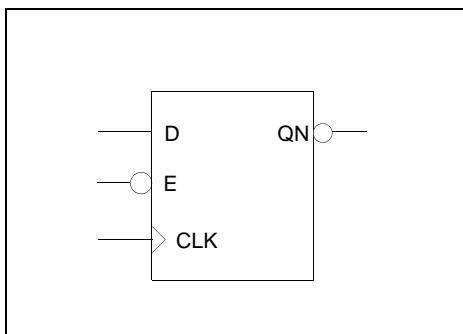

### Function

D-Type Flip-Flop with active low Enable and inverted output

### Truth Table


E	CLK	$QN_{n+1}$
1	X	QN
0	↑	!D

Input	Output
D, E, CLK	QN

Family	Tiles
All	1

## DFI0E0

Fusion, ProASIC3, ProASIC3E

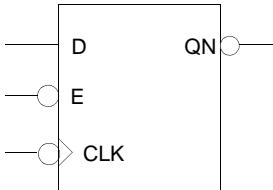

### Function

D-Type Flip-Flop with active low Enable and Clock and inverted output

### Truth Table

E	CLK	$QN_{n+1}$
1	X	QN
0	↓	!D


Input  
D, E, CLK

Output  
QN

Family	Tiles
All	1

## DFI1E1C1

Fusion, ProASIC3, ProASIC3E

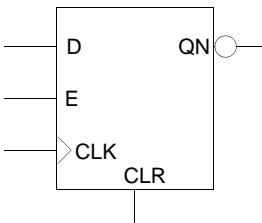

### Function

D-Type Flip-Flop, with Enable and active high Clear and inverted output

### Truth Table

CLR	E	CLK	$QN_{n+1}$
1	X	X	1
0	0	X	QN
0	1	↑	!D


Input  
CLR, D, E, CLK

Output  
QN

Family	Tiles
All	1

## DFI0E1C1

Fusion, ProASIC3, ProASIC3E

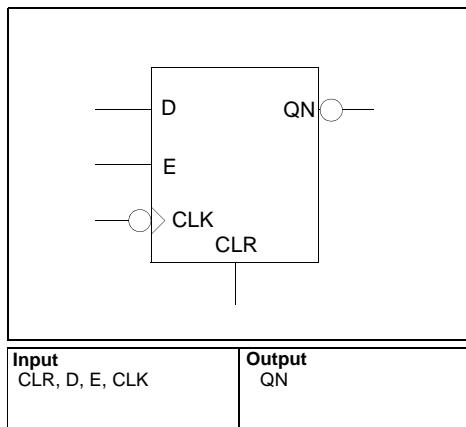

### Function

D-Type Flip-Flop with Enable and active high Clear and active low Clock and inverted output


### Truth Table

CLR	E	CLK	QN <sub>n+1</sub>
1	X	X	1
0	0	X	QN
0	1	↓	!D

Family	Tiles
All	1

## DFI1E0C1

Fusion, ProASIC3, ProASIC3E

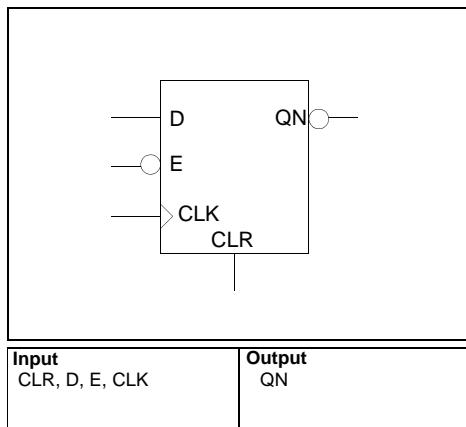

### Function

D-Type Flip-Flop with Active Low Enable and active high Clear and inverted output


### Truth Table

CLR	E	CLK	QN <sub>n+1</sub>
1	X	X	1
0	1	X	QN
0	0	↑	!D

Family	Tiles
All	1

## DFI0E0C1

Fusion, ProASIC3, ProASIC3E

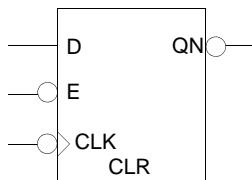

### Function

D-Type Flip-Flop with active low Enable, Clock, active high Clear, and inverted output

### Truth Table


CLR	E	CLK	$QN_{n+1}$
1	X	X	1
0	1	X	QN
0	0	↓	!D

Input	Output
CLR, D, E, CLK	QN

Family	Tiles
All	1

## DFI1E1C0

Fusion, ProASIC3, ProASIC3E

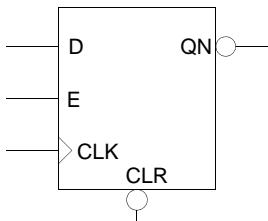

### Function

D-Type Flip-Flop, with Enable and active low Clear and inverted output

### Truth Table


CLR	E	CLK	$QN_{n+1}$
0	X	X	1
1	0	X	QN
1	1	↑	!D

Input	Output
CLR, D, E, CLK	QN

Family	Tiles
All	1

## DFI0E1C0

Fusion, ProASIC3, ProASIC3E

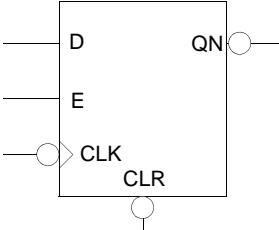 A block diagram of a D-Type Flip-Flop. It has four inputs: D, E, CLK, and CLR. The output is labeled QN. The CLK and CLR inputs have small circles indicating they are active-low.	<b>Input</b> CLR, D, E, CLK  <b>Output</b> QN
--	---

### Function

D-Type Flip-Flop with Enable and active low Clear and Clock and inverted output


### Truth Table

CLR	E	CLK	QN <sub>n+1</sub>
0	X	X	1
1	0	X	QN
1	1	↓	!D

Family	Tiles
All	1

## DFI1E0C0

Fusion, ProASIC3, ProASIC3E

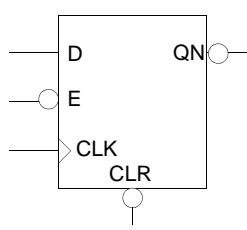 A block diagram of a D-Type Flip-Flop. It has four inputs: D, E, CLK, and CLR. The output is labeled QN. The E and CLK inputs have small circles indicating they are active-low.	<b>Input</b> CLR, D, E, CLK  <b>Output</b> QN
--	---

### Function

D-Type Flip-Flop with Active Low Enable and Clear and inverted output


### Truth Table

CLR	E	CLK	QN <sub>n+1</sub>
0	X	X	1
1	1	X	QN
1	0	↑	!D

Family	Tiles
All	1

## DFI0E0C0

Fusion, ProASIC3, ProASIC3E

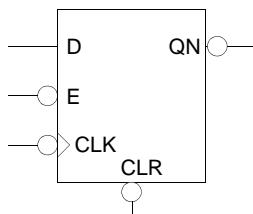

### Function

D-Type Flip-Flop with active low Enable, Clear, Clock and inverted output

### Truth Table

CLR	E	CLK	QN <sub>n+1</sub>
0	X	X	1
1	1	X	QN
1	0	↓	!D


**Input**  
CLR, D, E, CLK

**Output**  
QN

Family	Tiles
All	1

## DFI1E1P1

Fusion, ProASIC3, ProASIC3E

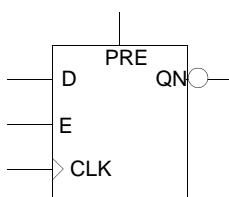

### Function

D-Type Flip-Flop with active high Enable and Preset and inverted output

### Truth Table

PRE	E	CLK	QN <sub>n+1</sub>
1	X	X	0
0	0	X	QN
0	1	↑	!D


**Input**  
D, E, PRE, CLK

**Output**  
QN

Family	Tiles
All	1

## DFI0E1P1

Fusion, ProASIC3, ProASIC3E

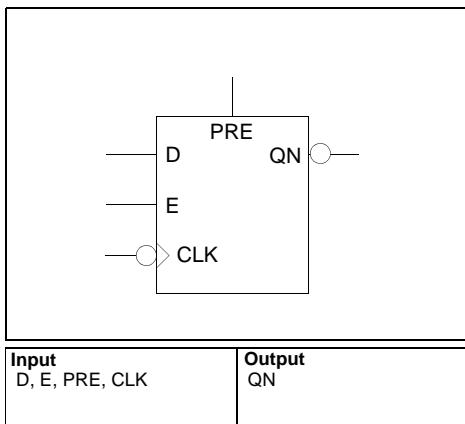

### Function

D-Type Flip-Flop with active high Enable and Preset, active low Clock and inverted output


### Truth Table

PRE	E	CLK	QN <sub>n+1</sub>
1	X	X	0
0	0	X	QN
0	1	↓	!D

Family	Tiles
All	1

## DFI1E0P1

Fusion, ProASIC3, ProASIC3E

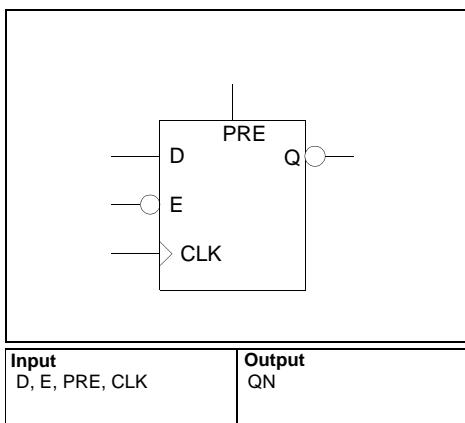

### Function

D-Type Flip-Flop with active low Enable, active high Preset and inverted output


### Truth Table

PRE	E	CLK	QN <sub>n+1</sub>
1	X	X	0
0	1	X	QN
0	0	↑	!D

Family	Tiles
All	1

## DFI0E0P1

Fusion, ProASIC3, ProASIC3E

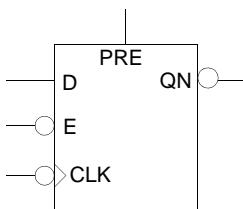

### Function

D-Type Flip-Flop with active low Enable and Clock, active high Preset and inverted output

### Truth Table


PRE	E	CLK	$QN_{n+1}$
1	X	X	0
0	1	X	$QN$
0	0	↓	$!D$

Input	Output
D, E, PRE, CLK	QN

Family	Tiles
All	1

## DFI1E1P0

Fusion, ProASIC3, ProASIC3E

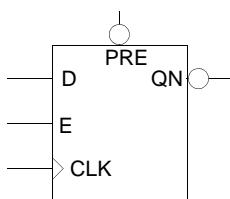

### Function

D-Type Flip-Flop with active high Enable, active low Preset, and inverted output

### Truth Table


PRE	E	CLK	$QN_{n+1}$
0	X	X	0
1	0	X	$QN$
1	1	↑	$!D$

Input	Output
D, E, PRE, CLK	QN

Family	Tiles
All	1

## DFI0E1PO

Fusion, ProASIC3, ProASIC3E

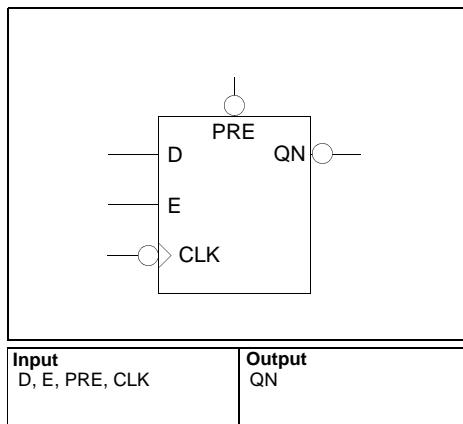

### Function

D-Type Flip-Flop with active high Enable, active low Preset and Clock, and inverted output


### Truth Table

PRE	E	CLK	QN <sub>n+1</sub>
0	X	X	0
1	0	X	QN
1	1	↓	!D

Family	Tiles
All	1

## DFI1E0PO

Fusion, ProASIC3, ProASIC3E

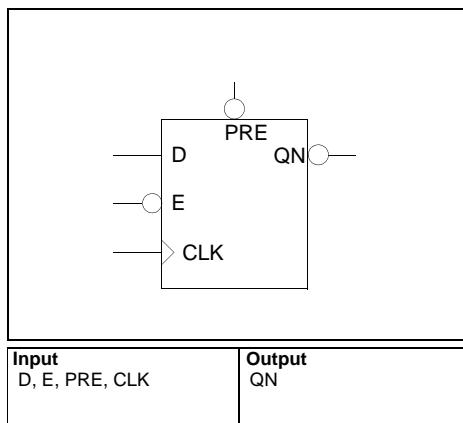

### Function

D-Type Flip-Flop with active low Enable and Preset, and inverted output


### Truth Table

PRE	E	CLK	QN <sub>n+1</sub>
0	X	X	0
1	1	X	QN
1	0	↑	!D

Family	Tiles
All	1

## DF10E0PO

Fusion, ProASIC3, ProASIC3E

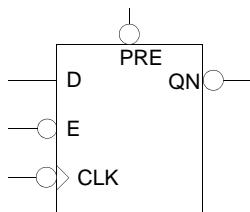

### Function

D-Type Flip-Flop with active low Enable, Clock, and Preset, and inverted output

### Truth Table


PRE	E	CLK	$QN_{n+1}$
0	X	X	0
1	1	X	QN
1	0	↓	!D

Input	Output
D, E, PRE, CLK	QN

Family	Tiles
All	1

## DFN0P1

Fusion, ProASIC3, ProASIC3E

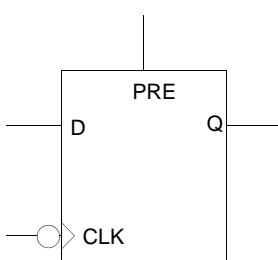

### Function

D-Type Flip-Flop with active high Preset, and active low Clock

### Truth Table


PRE	CLK	$Q_{n+1}$
1	X	1
0	↓	D

Input	Output
D, PRE, CLK	Q

Family	Tiles
All	1

## DFN1P0

Fusion, ProASIC3, ProASIC3E

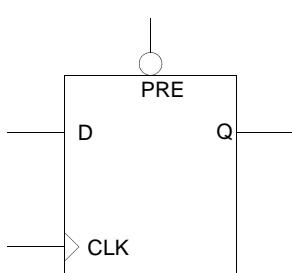

### Function

D-Type Flip-Flop with active low Preset

### Truth Table

PRE	CLK	$Q_{n+1}$
0	X	1
1	↑	D


**Input**  
D, PRE, CLK

**Output**  
Q

Family	Tiles
All	1

## DFI1P1

Fusion, ProASIC3, ProASIC3E

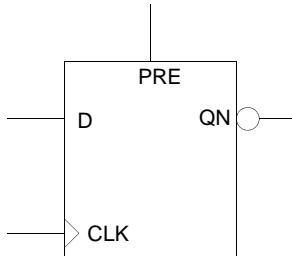

### Function

D-Type Flip-Flop with active high Preset, and inverted Output

### Truth Table

PRE	CLK	$QN_{n+1}$
1	X	0
0	↑	!D


**Input**  
D, PRE, CLK

**Output**  
QN

Family	Tiles
All	1

## DFN0P0

Fusion, ProASIC3, ProASIC3E

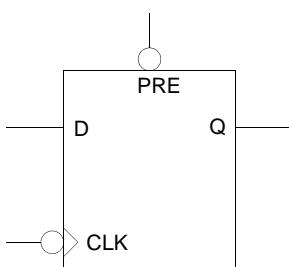

### Function

D-Type Flip-Flop with active low Preset and Clock

### Truth Table

PRE	CLK	$Q_{n+1}$
0	X	1
1	↓	D


**Input**  
D, PRE, CLK

**Output**  
Q

Family	Tiles
All	1

## DFI1P0

Fusion, ProASIC3, ProASIC3E

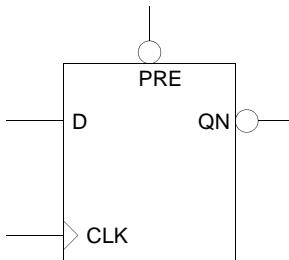

### Function

D-Type Flip-Flop with active low Preset and inverted Output

### Truth Table

PRE	CLK	$QN_{n+1}$
0	X	0
1	↑	!D


**Input**  
D, PRE, CLK

**Output**  
QN

Family	Tiles
All	1

## DFIOP1

Fusion, ProASIC3, ProASIC3E

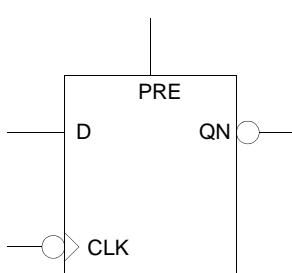

### Function

D-Type Flip-Flop with active high Preset, and active low Clock and inverted Output

### Truth Table

PRE	CLK	QN <sub>n+1</sub>
1	X	0
0	↓	!D


**Input**  
D, PRE, CLK

**Output**  
QN

Family	Tiles
All	1

## DFIOP0

Fusion, ProASIC3, ProASIC3E

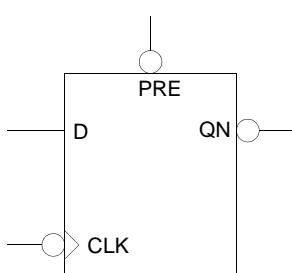

### Function

D-Type Flip-Flop with active low Preset, Clock and inverted Output

### Truth Table

PRE	CLK	QN <sub>n+1</sub>
0	X	0
1	↓	!D


**Input**  
D, PRE, CLK

**Output**  
QN

Family	Tiles
All	1

## DFN1P1C1

Fusion, ProASIC3, ProASIC3E

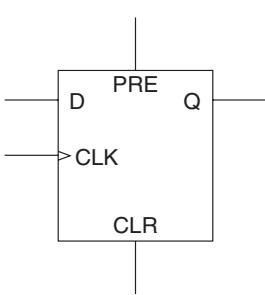

### Function

Rising Edge Triggered D-Type Flip-Flop with Active High Preset and Clear

### Truth Table


CLK	PRE	CLR	$Q_{n+1}$
X	1	0	1
X	X	1	0
↑	0	0	D

Input	Output
CLR, PRE, CLK, D	Q

Family	Tiles
All	1

## DFI1P1C1

Fusion, ProASIC3, ProASIC3E

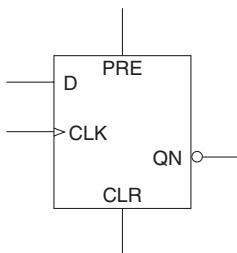

### Function

Rising Edge Triggered D-Type Flip-Flop with Active High Preset and Clear and inverted Output

### Truth Table


CLK	PRE	CLR	$QN_{n+1}$
X	1	0	0
X	X	1	1
↑	0	0	!D

Input	Output
CLR, PRE, CLK, D	QN

Family	Tiles
All	1

## DFN0P1C1

Fusion, ProASIC3, ProASIC3E

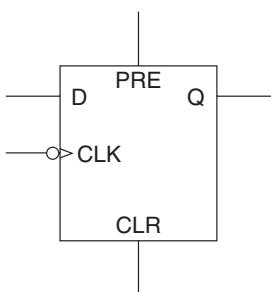

### Function

Falling Edge Triggered D-Type Flip-Flop with Active High Preset and Clear

### Truth Table


CLK	PRE	CLR	$Q_{n+1}$
X	1	0	1
X	X	1	0
↓	0	0	D

Input	Output
CLR, PRE, CLK, D	Q

Family	Tiles
All	1

## DFI0P1C1

Fusion, ProASIC3, ProASIC3E

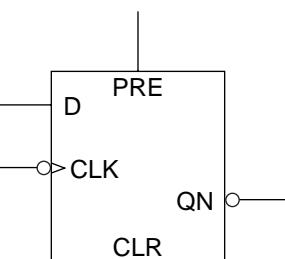

### Function

Falling Edge Triggered D-Type Flip-Flop with Active High Preset and Clear and inverted Output

### Truth Table


CLK	PRE	CLR	$QN_{n+1}$
X	1	0	0
X	X	1	1
↓	0	0	!D

Input	Output
CLR, PRE, CLK, D	QN

Family	Tiles
All	1

## DLN1

Fusion, ProASIC3, ProASIC3E

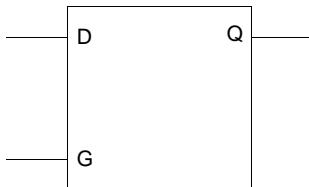

### Function

Data Latch

### Truth Table

G	$Q_{n+1}$
0	Q
1	D


**Input**  
D, G

**Output**  
Q

Family	Tiles
All	1

## DLI1

Fusion, ProASIC3, ProASIC3E

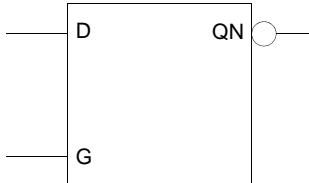

### Function

Data Latch with inverted Output

### Truth Table

G	$QN_{n+1}$
0	QN
1	!D


**Input**  
D, G

**Output**  
QN

Family	Tiles
All	1

## DLNO

Fusion, ProASIC3, ProASIC3E

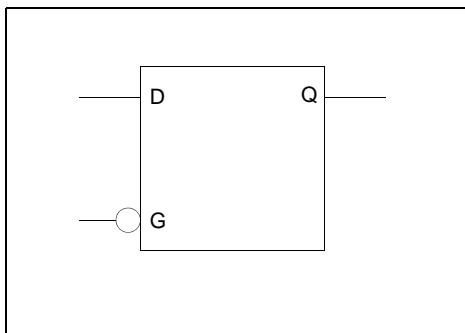

### Function

Data Latch with active low Clock

### Truth Table


G	$Q_{n+1}$
1	Q
0	D

Input	Output
D, G	Q

Family	Tiles
All	1

## DLIO

Fusion, ProASIC3, ProASIC3E

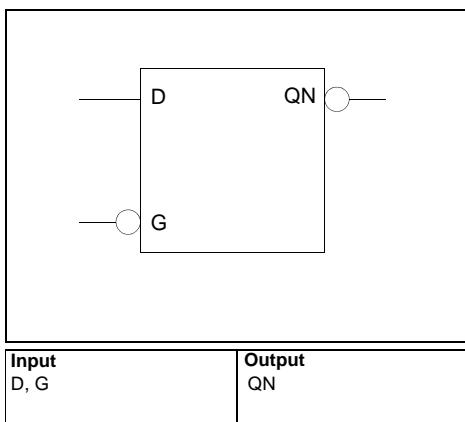

### Function

Data Latch, with active low Clock and inverted Output

### Truth Table


G	$QN_{n+1}$
1	QN
0	!D

Input	Output
D, G	QN

Family	Tiles
All	1

## DLN1C0

Fusion, ProASIC3, ProASIC3E

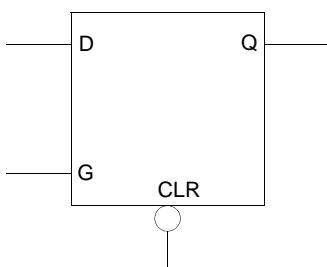

### Function

Data Latch with active low Clear

### Truth Table


CLR	G	$Q_{n+1}$
0	X	0
1	0	Q
1	1	D

Input	Output
CLR, D, G	Q

Family	Tiles
All	1

## DLN1C1

Fusion, ProASIC3, ProASIC3E

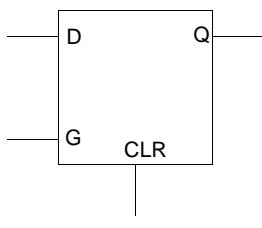

### Function

Data Latch with active high Clear

### Truth Table


CLR	G	$Q_{n+1}$
1	X	0
0	0	Q
0	1	D

Input	Output
CLR, D, G	Q

Family	Tiles
All	1

## DLN0C1

Fusion, ProASIC3, ProASIC3E

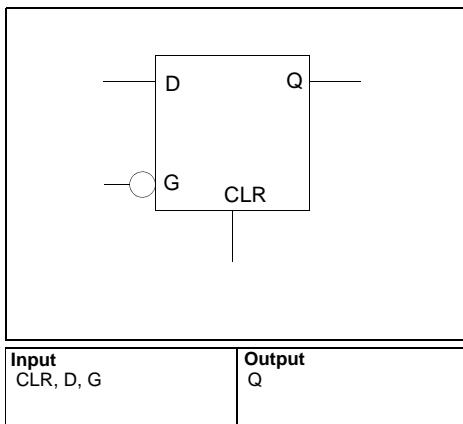

### Function

Data Latch with active high Clear and active low Clock


### Truth Table

CLR	G	$Q_{n+1}$
1	X	0
0	1	Q
0	0	D

Family	Tiles
All	1

## DLI1C1

Fusion, ProASIC3, ProASIC3E

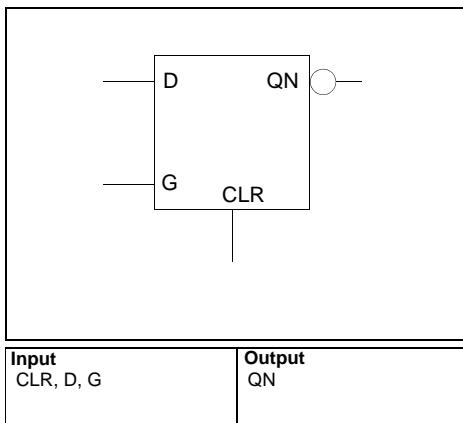

### Function

Data Latch with active high Clear and inverted Output


### Truth Table

CLR	G	$QN_{n+1}$
1	X	1
0	0	QN
0	1	!D

Family	Tiles
All	1

## DLI0C1

Fusion, ProASIC3, ProASIC3E

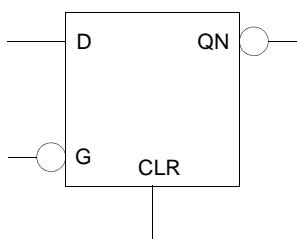

### Function

Data Latch with active high Clear and active low Clock and inverted Output

### Truth Table

CLR	G	$QN_{n+1}$
1	X	1
0	1	$QN$
0	0	$!D$


**Input**  
CLR, D, G

**Output**  
QN

Family	Tiles
All	1

## DLN0C0

Fusion, ProASIC3, ProASIC3E

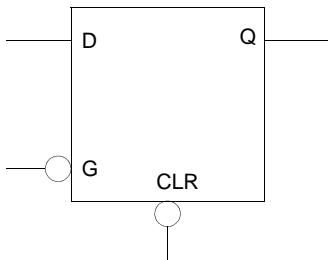

### Function

Data Latch with active low Clear and Clock

### Truth Table

CLR	G	$Q_{n+1}$
0	X	0
1	1	$Q$
1	0	D


**Input**  
CLR, D, G

**Output**  
Q

Family	Tiles
All	1

## DLI1C0

Fusion, ProASIC3, ProASIC3E

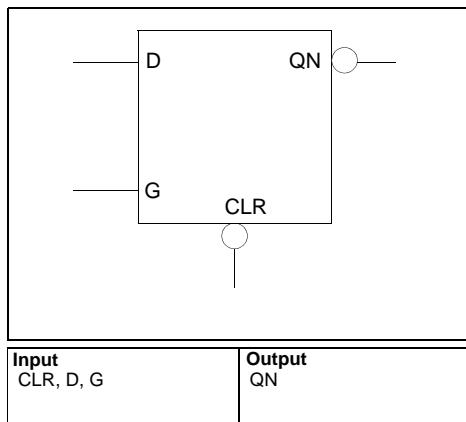

### Function

Data Latch with active low Clear and inverted output


### Truth Table

CLR	G	QN <sub>n+1</sub>
0	X	1
1	0	QN
1	1	!D

Family	Tiles
All	1

## DLI0C0

Fusion, ProASIC3, ProASIC3E

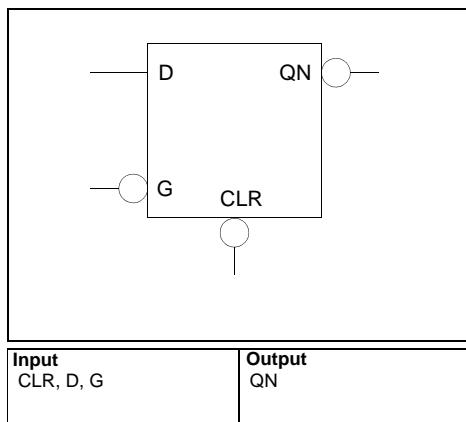

### Function

Data Latch with active low Clear, Clock, and inverted Output


### Truth Table

CLR	G	QN <sub>n+1</sub>
0	X	1
1	1	QN
1	0	!D

Family	Tiles
All	1

## DLN1P1

Fusion, ProASIC3, ProASIC3E

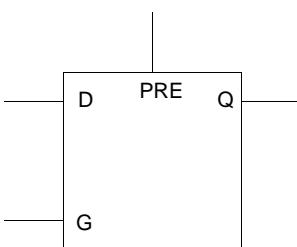

### Function

Data Latch with active high Preset and Clock

### Truth Table


PRE	G	$Q_{n+1}$
1	X	1
0	0	Q
0	1	D

Input	Output
D, G, PRE	Q

Family	Tiles
All	1

## DLN0P1

Fusion, ProASIC3, ProASIC3E

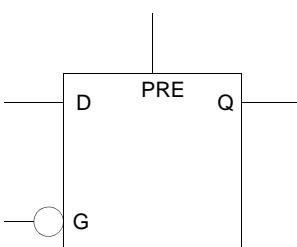

### Function

Data Latch with active high Preset and active low Clock

### Truth Table


PRE	G	$Q_{n+1}$
1	X	1
0	1	Q
0	0	D

Input	Output
D, G, PRE	Q

Family	Tiles
All	1

## DLN1P0

Fusion, ProASIC3, ProASIC3E

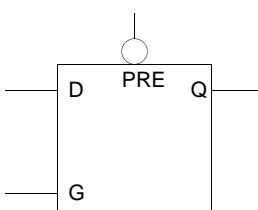

### Function

Data Latch with active low Preset and active high Clock

### Truth Table


PRE	G	$Q_{n+1}$
0	X	1
1	0	Q
1	1	D

Input	Output
D, G, PRE	Q

Family	Tiles
All	1

## DLN0P0

Fusion, ProASIC3, ProASIC3E

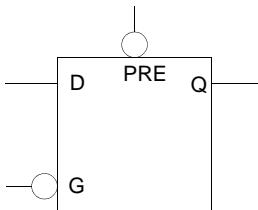

### Function

Data Latch with active low Preset and Clock

### Truth Table


PRE	G	$Q_{n+1}$
0	X	1
1	1	Q
1	0	D

Input	Output
D, G, PRE	Q

Family	Tiles
All	1

## DLI1P0

Fusion, ProASIC3, ProASIC3E

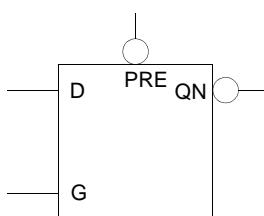

### Function

Data Latch with active low Preset and Output, and active high Clock

### Truth Table

PRE	G	QN <sub>n+1</sub>
0	X	0
1	0	QN
1	1	!D


**Input**  
D, G, PRE

**Output**  
QN

Family	Tiles
All	1

## DLI0P0

Fusion, ProASIC3, ProASIC3E

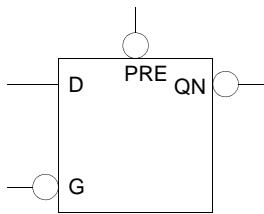

### Function

Data Latch with active low Preset, Clock, and inverted Output

### Truth Table

PRE	G	QN <sub>n+1</sub>
0	X	0
1	0	!D
1	1	QN


**Input**  
D, G, PRE

**Output**  
QN

Family	Tiles
All	1

## DLI1P1

Fusion, ProASIC3, ProASIC3E

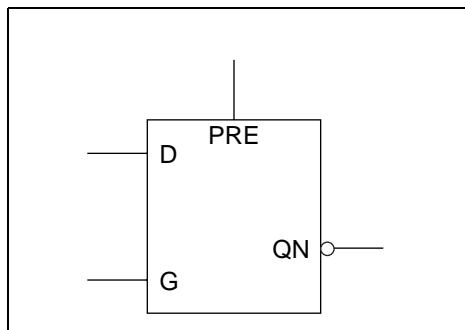

### Function

Active High Latch with Active High Preset and inverted Output

### Truth Table


G	PRE	QN <sub>n+1</sub>
X	1	0
0	0	QN
1	0	!D

Input	Output
PRE, G, D	QN

Family	Tiles
All	1

## DLI0P1

Fusion, ProASIC3, ProASIC3E

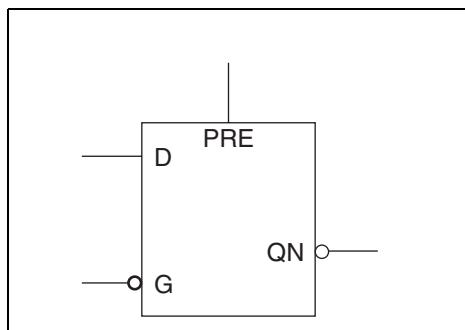

### Function

Active Low Latch with Active High Preset and inverted Output

### Truth Table


G	PRE	QN <sub>n+1</sub>
X	1	0
0	0	!D
1	0	QN

Input	Output
PRE, G, D	QN

Family	Tiles
All	1

## DLN1P1C1

Fusion, ProASIC3, ProASIC3E

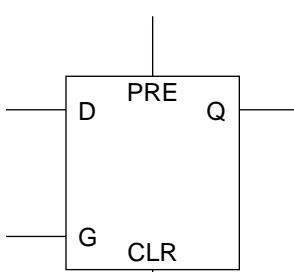

Input	Output
CLR, PRE, G, D	Q

### Function

Active High Latch with Active High Preset and Clear


### Truth Table

G	PRE	CLR	Q <sub>n+1</sub>
X	1	0	1
X	X	1	0
1	0	0	D
0	0	0	Q

Family	Tiles
All	1

## DLI1P1C1

Fusion, ProASIC3, ProASIC3E

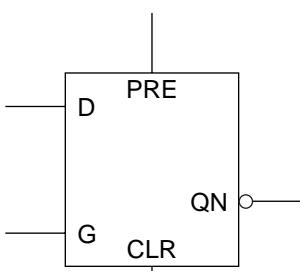

Input	Output
CLR, PRE, G, D	QN

### Function

Active High Latch with Active High Preset and Clear and inverted Output


### Truth Table

G	PRE	CLR	QN <sub>n+1</sub>
X	1	0	0
X	X	1	1
1	0	0	!D
0	0	0	QN

Family	Tiles
All	1

## DLN0P1C1

Fusion, ProASIC3, ProASIC3E

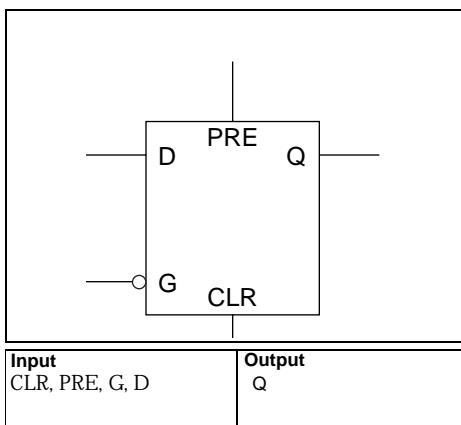

### Function

Active Low Latch with Active High Preset and Clear


### Truth Table

G	PRE	CLR	$Q_{n+1}$
X	1	0	1
X	X	1	0
0	0	0	D
1	0	0	Q

Family	Tiles
All	1

## DLI0P1C1

Fusion, ProASIC3, ProASIC3E

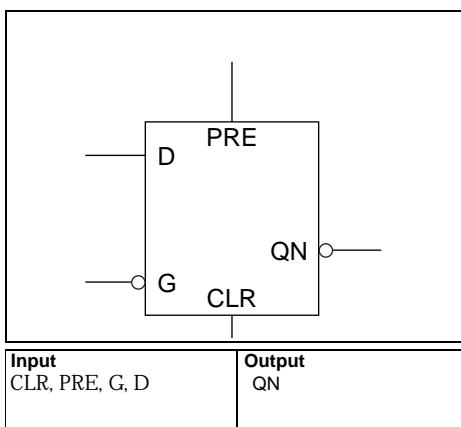

### Function

Active Low Latch with Active High Preset and Clear and inverted Output

### Truth Table


G	PRE	CLR	$QN_{n+1}$
X	1	0	0
X	X	1	1
0	0	0	!D
1	0	0	QN

Family	Tiles
All	1



## GND

Fusion, ProASIC3, ProASIC3E



### Function

Ground

### Input


### Output

Y

NOTE: Ground does not use any tiles.

## INV

Fusion, ProASIC3, ProASIC3E



### Function

Inverter with active low Output

### Truth Table

A	Y
0	1
1	0

### Input

A


### Output

Y

Family	Tiles
All	1

## INVD

Fusion, ProASIC3, ProASIC3E



### Function

Inverter with active low Output

NOTE: The Combiner will not remove this macro

### Truth Table

A	Y
0	1
1	0


Input  
A

Output  
Y

Family	Tiles
All	1

## MAJ3

Fusion, ProASIC3, ProASIC3E

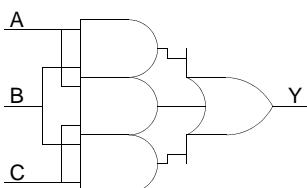

### Function

3-Input majority function

### Truth Table

A	B	C	Y
X	0	0	0
0	0	X	0
0	X	0	0
X	1	1	1
1	X	1	1
1	1	X	1


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## MAJ3X

Fusion, ProASIC3, ProASIC3E

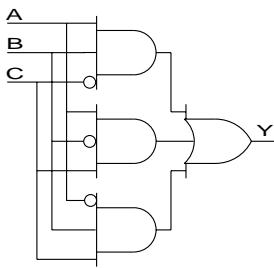

**Input**  
A, B, C

**Output**  
Y

### Function

2 of 3 function


### Truth Table

A	B	C	Y
0	0	0	0
1	0	0	0
0	1	0	0
1	1	0	1
0	0	1	0
1	0	1	1
0	1	1	1
1	1	1	0

Family	Tiles
All	1

## MAJ3XI

Fusion, ProASIC3, ProASIC3E

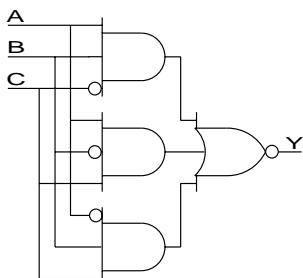

**Input**  
A, B, C

**Output**  
Y

### Function

2 of 3 function with active low output


### Truth Table

A	B	C	Y
0	0	0	1
1	0	0	1
0	1	0	1
1	1	0	0
0	0	1	1
1	0	1	0
0	1	1	0
1	1	1	1

Family	Tiles
All	1

## MIN3

Fusion, ProASIC3, ProASIC3E

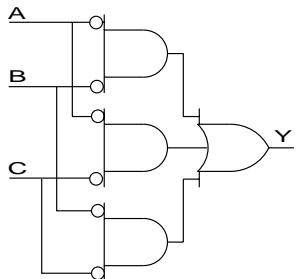

Input  
A, B, C

Output  
Y

### Function

3-Input minority function


### Truth Table

A	B	C	Y
X	0	0	1
0	0	X	1
0	X	0	1
X	1	1	0
1	X	1	0
1	1	X	0

Family	Tiles
All	1

## MIN3X

Fusion, ProASIC3, ProASIC3E

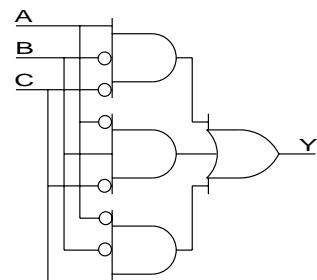

Input  
A, B, C

Output  
Y


### Function

1 of 3 function

### Truth Table

A	B	C	Y
0	0	0	0
1	0	0	1
0	1	0	1
1	1	0	0
0	0	1	1
1	0	1	0
0	1	1	0
1	1	1	0

Family	Modules	
	Seq	Comb
54SX, 54SX-A, 54SX-S, eX		1

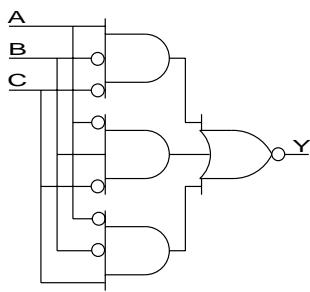

**Input**  
A, B, C

**Output**  
Y

**Function**

1 of 3 function with active low output


**Truth Table**

A	B	C	Y
0	0	0	1
1	0	0	0
0	1	0	0
1	1	0	1
0	0	1	0
1	0	1	1
0	1	1	1
1	1	1	1

Family	Tiles
All	1

## MX2

Fusion, ProASIC3, ProASIC3E

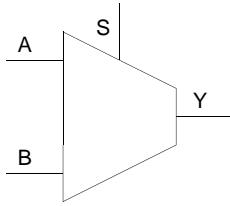

### Function

2 to 1 Multiplexer

### Truth Table

S	Y
0	A
1	B


**Input**  
A, B, S

**Output**  
Y

Family	Tiles
All	1

## MX2A

Fusion, ProASIC3, ProASIC3E

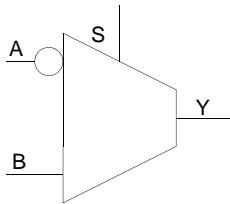

### Function

2 to 1 Multiplexer with active low A-Input

### Truth Table

S	Y
0	!A
1	B


**Input**  
A, B, S

**Output**  
Y

Family	Tiles
All	1

## MX2B

Fusion, ProASIC3, ProASIC3E

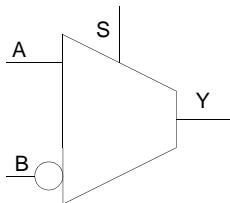

### Function

2 to 1 Multiplexer with active low B-Input

### Truth Table

S	Y
0	A
1	!B


**Input**  
A, B, S

**Output**  
Y

Family	Tiles
All	1

## MX2C

Fusion, ProASIC3, ProASIC3E

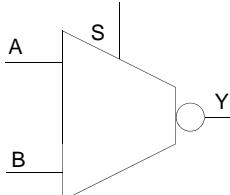

### Function

2 to 1 Multiplexer with active low Output

### Truth Table

S	Y
0	!A
1	!B


**Input**  
A, B, S

**Output**  
Y

Family	Tiles
All	1

# NAND2

Fusion, ProASIC3, ProASIC3E



## Function

2-Input NAND

## Truth Table

A	B	Y
X	0	1
0	X	1
1	1	0


**Input**  
A, B

**Output**  
Y

Family	Tiles
All	1

## NAND2A

Fusion, ProASIC3, ProASIC3E

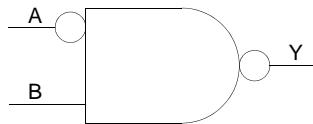

### Function

2-Input NAND with active low A-Input

### Truth Table


A	B	Y
X	0	1
0	1	0
1	X	1

Input	Output
A, B	Y

Family	Tiles
All	1

## NAND2B

Fusion, ProASIC3, ProASIC3E

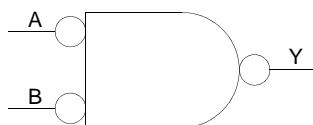

### Function

2-Input NAND with active low B-Input

### Truth Table


A	B	Y
0	0	0
X	1	1
1	X	1

Input	Output
A, B	Y

Family	Tiles
All	1

## NAND

Fusion, ProASIC3, ProASIC3E

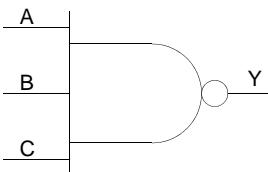

### Function

3-Input NAND

### Truth Table

A	B	C	Y
X	X	0	1
X	0	X	1
0	X	X	1
1	1	1	0


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## NAND3A

Fusion, ProASIC3, ProASIC3E

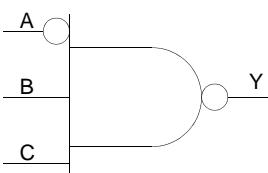

### Function

3-Input NAND with active low A-Input

### Truth Table

A	B	C	Y
X	X	0	1
X	0	X	1
0	1	1	0
1	X	X	1


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## NAND3B

Fusion, ProASIC3, ProASIC3E

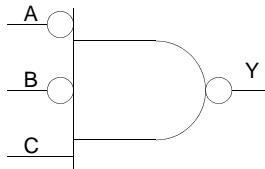

### Function

3-Input NAND with active low A- and B-Inputs

### Truth Table

A	B	C	Y
X	X	0	1
0	0	1	0
X	1	X	1
1	X	X	1

Input  
A, B, C


Output  
Y

Family	Tiles
--------	-------

All 1

## NAND3C

Fusion, ProASIC3, ProASIC3E

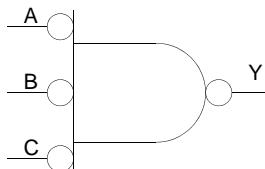

### Function

3-Input NAND with active low Inputs

### Truth Table

A	B	C	Y
0	0	0	0
X	X	1	1
X	1	X	1
1	X	X	1

Input  
A, B, C


Output  
Y

Family	Tiles
--------	-------

All 1

## NOR2

Fusion, ProASIC3, ProASIC3E

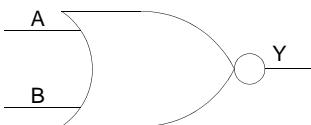

### Function

2-Input NOR

### Truth Table

A	B	Y
0	0	1
X	1	0
1	X	0


Input  
A, B

Output  
Y

Family	Tiles
All	1

## NOR2A

Fusion, ProASIC3, ProASIC3E

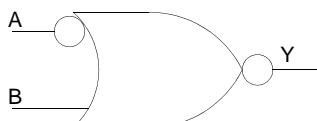

### Function

2-Input NOR with active low A-Input

### Truth Table

A	B	Y
0	X	0
1	0	1
X	1	0


Input  
A, B

Output  
Y

Family	Tiles
All	1

## NOR2B

Fusion, ProASIC3, ProASIC3E

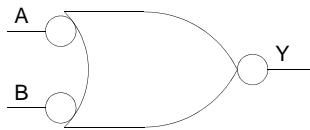

### Function

2-Input NOR with active low Inputs

### Truth Table

A	B	Y
X	0	0
0	X	0
1	1	1

Input  
A, B

Output  
Y


### Family

### Tiles

All

## NOR3

Fusion, ProASIC3, ProASIC3E

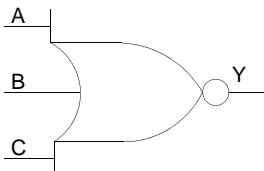

### Function

3-Input NOR

### Truth Table

A	B	C	Y
0	0	0	1
X	X	1	0
X	1	X	0
1	X	X	0

Input  
A, B, C

Output  
Y


### Family

### Tiles

All

## NOR3A

Fusion, ProASIC3, ProASIC3E

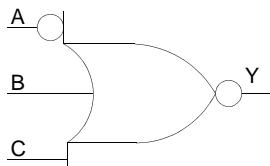

### Function

3-Input NOR with active low A-Input

### Truth Table

A	B	C	Y
0	X	X	0
1	0	0	1
X	X	1	0
X	1	X	0


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## NOR3B

Fusion, ProASIC3, ProASIC3E

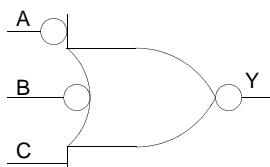

### Function

3-Input NOR with active low A- and B-Inputs

### Truth Table

A	B	C	Y
X	0	X	0
0	X	X	0
1	1	0	1
X	X	1	0


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## NOR3C

Fusion, ProASIC3, ProASIC3E

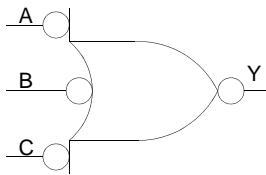

### Function

3-Input NOR with active low Inputs

### Truth Table

A	B	C	Y
X	X	0	0
X	0	X	0
0	X	X	0
1	1	1	1


**Input**  
A, B, C

**Output**  
Y

Family	Tiles
All	1

## OA1

Fusion, ProASIC3, ProASIC3E

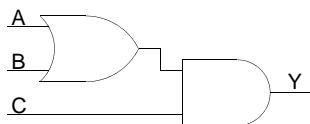

### Function

3 Input OR-AND

### Truth Table

A	B	C	Y
X	X	0	0
0	0	X	0
X	1	1	1
1	X	1	1


**Input**  
A, B, C

**Output**  
Y

Family	Tiles
All	1

## OA1A

Fusion, ProASIC3, ProASIC3E

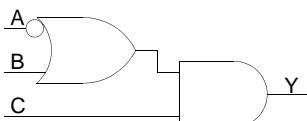

### Function

3 Input OR-AND with active low A-Input

### Truth Table

A	B	C	Y
X	X	0	0
0	X	1	1
1	0	X	0
X	1	1	1

Input  
A, B, C


Output  
Y

Fusion, ProASIC3, ProASIC3E

Family	Tiles
All	1

## OA1B

Fusion, ProASIC3, ProASIC3E

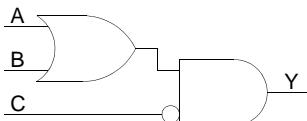

### Function

3 Input OR-AND with active low C-Input

### Truth Table

A	B	C	Y
0	0	X	0
X	1	0	1
X	X	1	0
1	X	0	1

Input  
A, B, C


Output  
Y

Fusion, ProASIC3, ProASIC3E

Family	Tiles
All	1

## OA1C

Fusion, ProASIC3, ProASIC3E

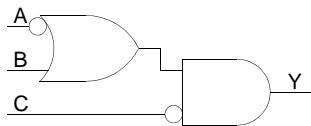

### Function

3 Input OR-AND with active low A- and C-Inputs

### Truth Table

A	B	C	Y
0	X	0	1
X	X	1	0
1	0	X	0
X	1	0	1

**Input**  
A, B, C


**Output**  
Y

Family	Tiles
--------	-------

All 1

## OAI1

Fusion, ProASIC3, ProASIC3E

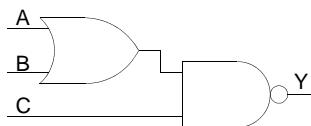

### Function

3-Input OR-AND-INVERT

### Truth Table

A	B	C	Y
X	X	0	1
0	0	X	1
X	1	1	0
1	X	1	0

**Input**  
A, B, C

**Output**  
Y


Family	Tiles
--------	-------

All 1



## OR2

Fusion, ProASIC3, ProASIC3E

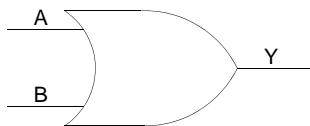

### Function

2-Input OR

### Truth Table

A	B	Y
0	0	0
X	1	1
1	X	1


Input  
A, B

Output  
Y

Family	Tiles
All	1

## OR2A

Fusion, ProASIC3, ProASIC3E

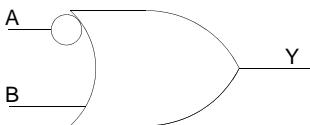

### Function

2-Input OR with active low A-Input

### Truth Table

A	B	Y
0	X	1
1	0	0
X	1	1


Input  
A, B

Output  
Y

Family	Tiles
All	1

## OR2B

Fusion, ProASIC3, ProASIC3E

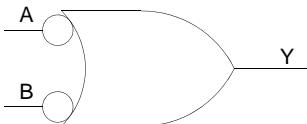

### Function

2-Input OR with active low Inputs

### Truth Table

A	B	Y
X	0	1
0	X	1
1	1	0


Input  
A, B

Output  
Y

Family	Tiles
All	1

## OR3

Fusion, ProASIC3, ProASIC3E

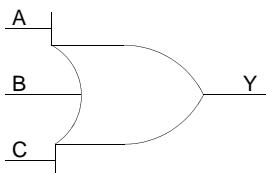

### Function

3-Input OR

### Truth Table

A	B	C	Y
0	0	0	0
X	X	1	1
X	1	X	1
1	X	X	1


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## OR3A

Fusion, ProASIC3, ProASIC3E

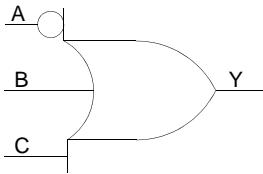

### Function

3-Input OR with active low A-Input

### Truth Table

A	B	C	Y
0	X	X	1
1	0	0	0
X	X	1	1
X	1	X	1


**Input**  
A, B, C

**Output**  
Y

Family	Tiles
All	1

## OR3B

Fusion, ProASIC3, ProASIC3E

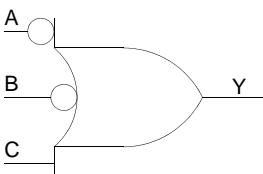

### Function

3-Input OR with active low A- and B-Inputs

### Truth Table

A	B	C	Y
X	0	X	1
0	X	X	1
1	1	0	0
X	X	1	1


**Input**  
A, B, C

**Output**  
Y

Family	Tiles
All	1

## OR3C

Fusion, ProASIC3, ProASIC3E

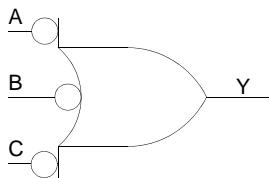

### Function

3-Input OR with active low Inputs

### Truth Table

A	B	C	Y
X	X	0	1
X	0	X	1
0	X	X	1
1	1	1	0

Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## VCC

Fusion, ProASIC3, ProASIC3E



### Function

Power


Input

Output  
Y

NOTE: VCC does not use any modules.

## XA1

Fusion, ProASIC3, ProASIC3E

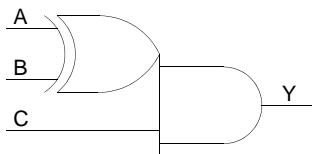

### Function

3-Input XOR-AND

### Truth Table

A	B	C	Y
X	X	0	0
0	0	X	0
0	1	1	1
1	0	1	1
1	1	X	0


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## XA1A

Fusion, ProASIC3, ProASIC3E

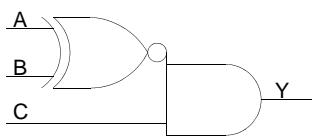

### Function

3-Input XNOR-AND

### Truth Table

A	B	C	Y
X	X	0	0
0	0	1	1
0	1	X	0
1	0	X	0
1	1	1	1


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## XA1B

Fusion, ProASIC3, ProASIC3E

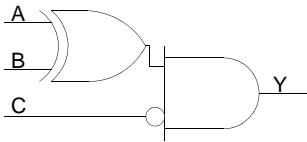

### Function

3-Input XNOR-AND with active low C-input

### Truth Table


A	B	C	Y
X	X	1	0
0	0	X	0
1	0	0	1
0	1	0	1
1	1	X	0

Input	Output
A, B, C	Y

Family	Tiles
All	1

## XA1C

Fusion, ProASIC3, ProASIC3E

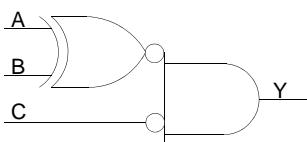

### Function

3-Input XNOR-AND with active low C-input

### Truth Table


A	B	C	Y
X	X	1	0
0	0	0	1
1	0	X	0
0	1	X	0
1	1	0	1

Input	Output
A, B, C	Y

Family	Tiles
All	1

## XAI1

Fusion, ProASIC3, ProASIC3E

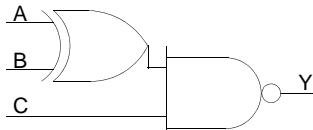

### Function

3-Input XNOR-NAND

### Truth Table

A	B	C	Y
X	X	0	1
0	0	X	1
1	0	1	0
0	1	1	0
1	1	X	1


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## XAI1A

Fusion, ProASIC3, ProASIC3E

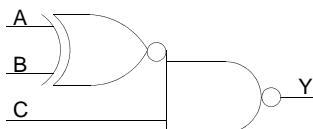

### Function

3-Input XNOR-NAND

### Truth Table

A	B	C	Y
X	X	0	1
0	0	1	0
1	0	X	1
0	1	X	1
1	1	1	0


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## XNOR2

Fusion, ProASIC3, ProASIC3E



### Function

2- Input XNOR

### Truth Table


A	B	Y
0	0	1
0	1	0
1	0	0
1	1	1

Input	Output
A, B	Y

Family	Tiles
All	1

## XNOR3

Fusion, ProASIC3, ProASIC3E



### Function

3-Input XNOR

### Truth Table


A	B	C	Y
0	0	0	1
1	0	0	0
0	1	0	0
1	1	0	1
0	0	1	0
1	0	1	1
0	1	1	1
1	1	1	0

Input	Output
A, B, C	Y

Family	Tiles
All	1

## XO1

Fusion, ProASIC3, ProASIC3E

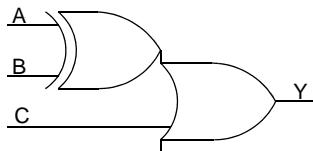

### Function

3-Input XOR-OR

### Truth Table

A	B	C	Y
0	0	0	0
X	X	1	1
0	1	X	1
1	0	X	1
1	1	0	0


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## XO1A

Fusion, ProASIC3, ProASIC3E

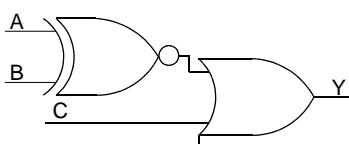

### Function

3-Input XNOR-OR

### Truth Table

A	B	C	Y
0	0	0	1
X	X	1	1
0	1	0	0
1	0	0	0
1	1	0	1


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## XOR2

Fusion, ProASIC3, ProASIC3E

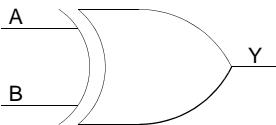

### Function

2-Input XOR

### Truth Table


A	B	Y
0	0	0
0	1	1
1	0	1
1	1	0

Input  
A, B

Output  
Y

Family	Tiles
All	1

Fusion, ProASIC3, ProASIC3E

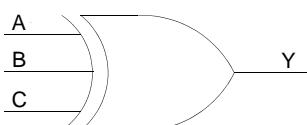

### Function

3-Input XOR

### Truth Table

A	B	C	Y
0	0	0	0
1	0	0	1
0	1	0	1
1	1	0	0
0	0	1	1
1	0	1	0
0	1	1	0
1	1	1	1


Input  
A, B, C

Output  
Y

Family	Tiles
All	1

## ZOR3

Fusion, ProASIC3, ProASIC3E

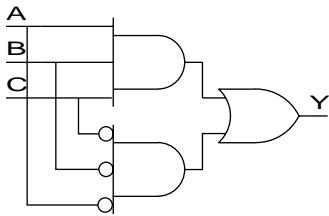

Input	Output
A, B, C	Y

### Function

3-Input function


### Truth Table

A	B	C	Y
0	0	0	1
1	0	0	0
0	1	0	0
1	1	0	0
0	0	1	0
1	0	1	0
0	1	1	0
1	1	1	1

Family	Tiles
All	1

## ZOR3I

Fusion, ProASIC3, ProASIC3E

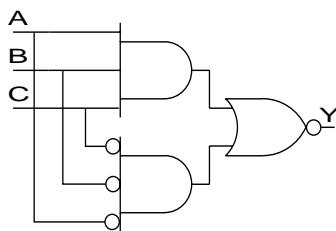

Input	Output
A, B, C	Y

### Function

3-Input function

### Truth Table


A	B	C	Y
0	0	0	0
1	0	0	1
0	1	0	1
1	1	0	1
0	0	1	1
1	0	1	1
0	1	1	1
1	1	1	0

Family	Tiles
All	1



---

## *RAM and FIFO Macros*

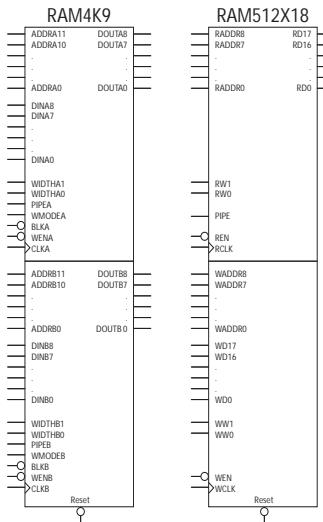**Function**

RAM4K9 is a fully synchronous, true dual-port RAM with an optional pipeline stage; RAM512X18 is a fully synchronous, two-port RAM with an optional pipeline stage

Truth tables are listed below.

**Input**

Inputs are shown on the left of the diagrams. For example, ADDRA11, ADDRA10, ..., ADDRA0.

**Output**

Outputs are shown at the right on the diagrams. For example, DOUTA8, DOUT7, ..., DOUT0.

There are two RAM macros in the ProASIC3/ProASIC3E library: RAM4K9 and RAM512X18. The RAM4K9 is a fully synchronous, true dual-port RAM with an optional pipeline stage. It can be used for word widths up to 9 bits. Both ports are capable of reading and writing, making it possible to write with both ports or read with both ports simultaneously. You can also read from one port while writing to the other. Each port also has an optional pipeline stage that can be controlled separately via the PIPE pins. The RAM512X18 is a fully synchronous, two-port RAM with an optional pipeline stage. You can use it for word widths of 9 or 18 bits. It has one dedicated read port and one dedicated write port (you can read from one port while writing to the other). The read port also has an optional pipeline stage that you can control separately via the PIPE pin.

During the write operation of the RAM4K9, the WMODE pins control the data that appears on the read pins of the same port. When WMODE is high, the same data appears on the read and write ports at the rising CLK edge. When WMODE is low, the old data stored in the current memory location being addressed appears on the read port. There are no WMODE pins on the RAM512X18.

The aspect ratio of each port can be specified independently via the WIDTHA and WIDTHB pins. For the RAM512X18, the allowable values are 18 x 256 and 9 x 512. For the RAM4K9, the allowable values are 9 x 512, 4 x 1K, 2 x 2K, and 1 x 4K. Although it is possible to dynamically reconfigure the aspect ratios, the RAM was designed with only static configuration in mind, so the timing is unknown and you are discouraged from performing such operations. The same is true for the WMODE and PIPE configuration pins.

The RAM4K9 only needs 2 bits to configure the WIDTH. The allowable RAM4K9 WIDTHA and WIDTHB values are shown in the table below.

*RAM4K9 WIDTHA and WIDTHB Values*

WIDTHA1, WIDTHA0	WIDTHB1, WIDTHB0	W x D
00	00	1 x 4K
01	01	2 x 2K
10	10	4 x 1K
11	11	9 x 512

The RAM512X18 also needs 2 bits to configure the read and write widths. The allowable RAM512X18 WW and RW values are shown in the table below.

*RAM512x18 WW and RW Values*

WW1, WW0	RW1, RW0	W x D
01	01	9 x 512
10	10	18 x 256
00, 11	00, 11	Illegal

When specifying a width that is less than the maximum (e.g. 1), the upper unused data input pins (e.g. DINA8 - DINA1) must be connected to GND. When specifying a depth that is less than the maximum (e.g. 512), the upper unused address pins (e.g. ADDRA11 - ADDRA9) must also be connected to GND.

When widths of 1, 2, and 4 are used, the ninth bit is skipped. This can cause counter-intuitive effects when these widths are used for read operations and larger widths are used for write operations (or vice versa). For example, if a width of 9 is used for writing and a width of 1 for reading, every 9th bit will be dropped. This effect may be desirable for removing parity bits. If a write width of 4 and read width of 9 is used, the 9th bit may either contain garbage or remnants of previous write operations when a write width of 9 or higher was being used. For this reason, SmartGen only supports the following aspect ratio combinations when one of the ports is configured with a 1-, 2-, or 4-bit width using the RAM4K9.

*SmartGen Supported Aspect Ratio Combinations for the RAM4K9*

READ	WRITE
1 x 4K	1 x 4K
1 x 4K	2 x 2K
1 x 4K	4 x 1K
2 x 2K	1 x 4K
2 x 2K	2 x 2K
2 x 2K	4 x 1K
4 x 1K	1 x 4K
4 x 1K	2 x 2K
4 x 1K	4 x 1K

The RAM4K9 can still be used for 9-bit width applications, but no other bit-width can be used with it other than 9-bits.

*SmartGen Supported Aspect Ratios for 9-bit Width Applications*

READ	WRITE
9 x 512	9 x 512

There are several restrictions that apply when you use an 18 x 256 aspect ratio. For this reason, SmartGen uses the RAM512X18 whenever 18-bit widths are specified. The only allowable combinations of read and write configurations for the RAM512X18 are as follows:

*RAM512X18 Read and Write Combinations*

READ	WRITE
18 x 256	18 x 256
18 x 256	9 x 512
9 x 512	18 x 256

The RADDR pins are always used for the read address in the above configurations and the WADDR pins are used for the write address. The RW pin is used to specify the read width and the WW pin for the write width. The WD pins are used for writing data and the RD pins for reading data.

*RAM4K9 Truth Table*

Operation	Address	CLK	BLK	WMODE	WEN	RESET	DI	DO
Deselect	X	X	H	X	X	H	X	Data-Last
Reset	X	X	X	X	X	L	X	L
Read	ADDR	Rising Edge	L	L	H	H	X	Data
Write (0)	ADDR	Rising Edge	L	L	L	H	WData	Data-Last
Write (1)	ADDR	Rising Edge	L	H	L	H	WData	WData

When asserted, the BLK pins will cause the DO outputs to hold their last value. When asserted, the WEN pins can be used to switch each port between write and read mode. The RESET pin sets all outputs low but does not reset the memory. The WMODE pins are used to either allow the write data to appear immediately on the output pins or to hold the last value.


*RAM512x18 Truth Table*

Operation	Address	WCLK	REN	WEN	RESET	WD	RD
Reset	X	X	X	X	L	X	L
Read	RADDR	Rising Edge	L	X	H	X	Stored Data
Write	WADDR	Rising Edge	X	L	H	WData	Data-Last

Use SmartGen to configure the RAM for typical use. SmartGen will not support dynamic reconfiguration or cascading width-wise. Customers wishing to avail themselves of such features must instantiate and configure the RAM macro manually. You can configure your RAM dynamically if you use the FlexRAM macros in the next section.

## Warnings

- Simultaneous write to the same address from both ports is possible, but the results are undefined. Avoid writing to the same address simultaneously from both ports.
- Dynamic reconfiguration of any pins possible but not supported by SmartGen.
- Cascading is possible and limited only by the number of available RAM blocks in a row, which is device dependent. SmartGen prompts you for device type information in order to correctly calculate the maximum.
- RESET has priority over BLKA and BLKB.
- In read mode (i.e. when WEN high) WMODE is ignored.
- Dual-port operation not possible unless both ports have the same aspect ratio.

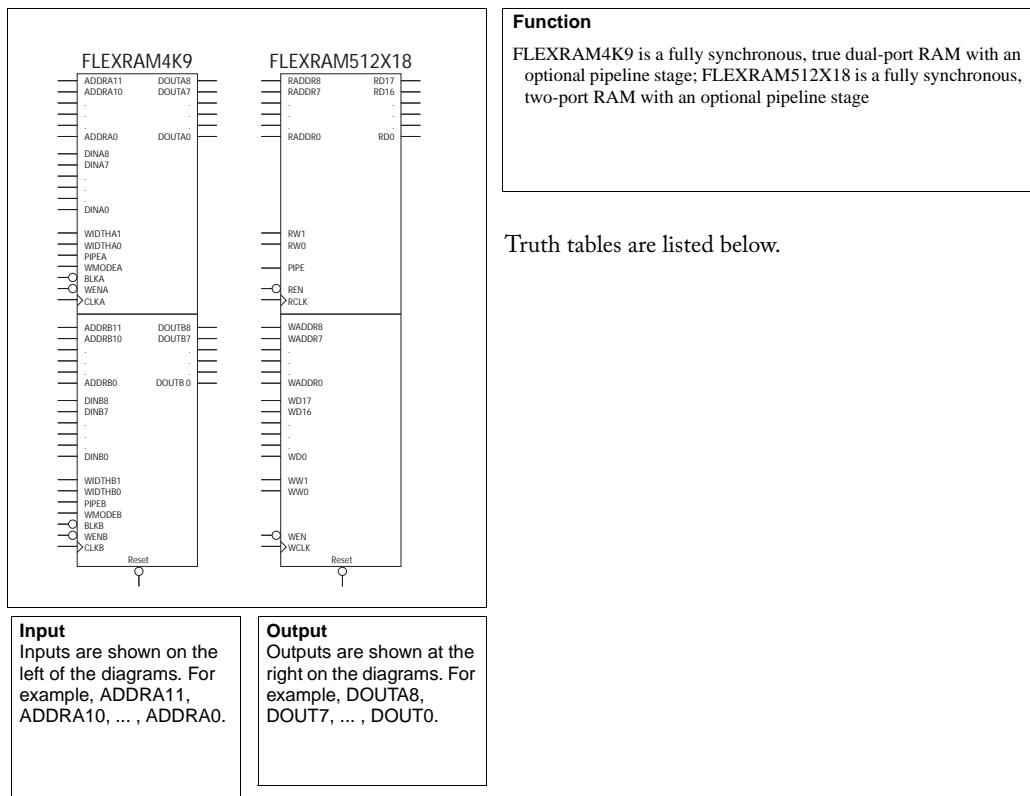

There are two dynamically reconfigurable RAM macros in the Fusion library: FLEXRAM4K9 and FLEXRAM512X18. The FLEXRAM4K9 is a fully synchronous, true dual-port RAM with an optional pipeline stage. It can be used for word widths up to 9 bits. Both ports are capable of reading and writing, making it possible to write with both ports or read with both ports simultaneously. You can also read from one port while writing to the other. Each port also has an optional pipeline stage that can be controlled separately via the PIPE pins. The FLEXRAM512X18 is a fully synchronous, two-port RAM with an optional pipeline stage. You can use it for word widths of 9 or 18 bits. It has one dedicated read port and one dedicated write port (you can read from one port while writing to the other). The read port also has an optional pipeline stage that you can control separately via the PIPE pin.

During the write operation of the FLEXRAM4K9, the WMODE pins control the data that appears on the read pins of the same port. When WMODE is high, the same data appears on the read and write ports at the rising CLK edge. When WMODE is low, the old data stored in the current memory location being addressed appears on the read port. There are no WMODE pins on the FLEXRAM512X18.

The aspect ratio of each port can be specified independently via the WIDTHA and WIDTHB pins. For the FLEXRAM512X18, the allowable values are 18 x 256 and 9 x 512. For the FLEXRAM4K9, the allowable values are 9 x 512, 4 x 1K, 2 x 2K, and 1 x 4K. Actel recommends that you do not change the WMODE and pipe configuration pins dynamically because the timing is unknown.

The FLEXRAM4K9 only needs 2 bits to configure the WIDTH. The allowable FLEXRAM4K9 WIDTHA and WIDTHB values are shown in the table below.

*FLEXRAM4K9 WIDTHA and WIDTHB Values*

WIDTHA1, WIDTHA0	WIDTHB1, WIDTHB0	W x D
00	00	1 x 4K
01	01	2 x 2K
10	10	4 x 1K
11	11	9 x 512

The FLEXRAM512X18 also needs 2 bits to configure the read and write widths. The allowable FLEXRAM512X18 WW and RW values are shown in the table below.

*FLEXRAM512x18 WW and RW Values*

WW1, WW0	RW1, RW0	W x D
01	01	9 x 512
10	10	18 x 256
00, 11	00, 11	Illegal

When specifying a width that is less than the maximum (e.g. 1), the upper unused data input pins (e.g. DIN18 - DIN1) must be connected to GND. When specifying a depth that is less than the maximum (e.g. 512), the lower unused address pins (e.g. ADDRA2 - ADDRA0) must also be connected to GND.

When widths of 1, 2, and 4 are used, the ninth bit is skipped. This can cause counter-intuitive effects when these widths are used for read operations and larger widths are used for write operations (or vice versa). For example, if a width of 9 is used for writing and a width of 1 for reading, every 9th bit will be dropped. This effect may be desirable for removing parity bits. If a write width of 4 and read width of 9 is used, the 9th bit may either contain garbage or remnants of previous write operations when a write width of 9 or higher was being used. For this reason, Actel recommends that you use only the following aspect ratio combinations when one of the ports is configured with a 1-, 2-, or 4-bit width using the FLEXRAM4K9.

*Recommended Aspect Ratio Combinations for the FLEXRAM4K9*

READ	WRITE
1 x 4K	1 x 4K
1 x 4K	2 x 2K
1 x 4K	4 x 1K
2 x 2K	1 x 4K
2 x 2K	2 x 2K
2 x 2K	4 x 1K
4 x 1K	1 x 4K
4 x 1K	2 x 2K
4 x 1K	4 x 1K

The FLEXRAM4K9 can still be used for 9-bit width applications, but no other bit-width can be reliably used with it other than 9-bits.

*Recommended Aspect Ratios for 9-bit Width Applications*

READ	WRITE
9 x 512	9 x 512

There are several restrictions that apply when you use an 18 x 256 aspect ratio. For this reason, Actel recommends that you use the FLEXRAM512X18 whenever 18-bit widths are specified. The only allowable combinations of read and write configurations for the FLEXRAM512X18 are as follows:

*FLEXRAM512X18 Read and Write Combinations*

READ	WRITE
18 x 256	18 x 256
18 x 256	9 x 512
9 x 512	18 x 256

The RADDR pins are always used for the read address in the above configurations and the WADDR pins are used for the write address. The RW pin is used to specify the read width and the WW pin for the write width. The WD pins are used for writing data and the RD pins for reading data.

*FLEXRAM4K9 Truth Table*

Operation	Address	CLK	BLK	WMODE	WEN	RESET	DI	DO
Deselect	X	X	H	X	X	H	X	Data-Last
Reset	X	X	X	X	X	L	X	L
Read	ADDR	Rising Edge	L	L	H	H	X	Data
Write (0)	ADDR	Rising Edge	L	L	L	H	WData	Data-Last
Write (1)	ADDR	Rising Edge	L	H	L	H	WData	WData

When deserted, the BLK pins will cause the DO outputs to hold their last value. When asserted, the WEN pins can be used to switch each port between write and read mode. The RESET pin sets all outputs low but does not reset the memory. The WMODE pins are used to either allow the write data to appear immediately on the output pins or to hold the last value.


*FLEXRAM512x18 Truth Table*

Operation	Address	WCLK	REN	WEN	RESET	WD	RD
Reset	X	X	X	X	L	X	L
Read	RADDR	Rising Edge	L	X	H	X	Stored Data
Write	WADDR	Rising Edge	X	L	H	WData	Data-Last

SmartGen does not support FlexRAM macros; you must instantiate and configure the FlexRAM macros manually.

## Warnings

- Simultaneous write to the same address from both ports is possible, but the results are undefined. Avoid writing to the same address simultaneously from both ports.
- RESET has priority over BLKA and BLKB.
- In read mode (i.e. when WEN high) WMODE is ignored.
- Dual-port operation not possible unless both ports have the same aspect ratio.

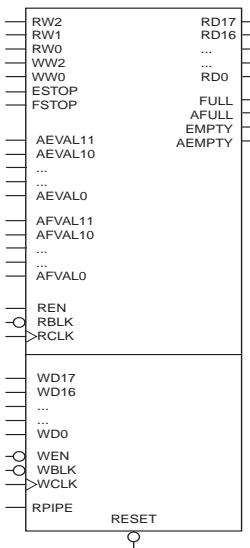**Function**

FIFO4K18 is fully synchronous and has its own built-in controller, capable of variable aspect ratios.

Truth tables are listed below.

**Input**

Inputs are shown on the left of the diagram. For example, AEVAL11, AEVAL10, ..., AEVAL0.

**Output**

Outputs are shown at the right on the diagram. For example, RD17, RD16, ..., RD0.

FIFO4K18 is fully synchronous and has its own built-in controller. Like the RAM, the FIFO can have different write and read aspect ratios that can be configured dynamically. The WW and RW pins are used to specify one of five allowable aspect ratios, as shown below.

*FIFO4K18 Aspect Ratios*

WW2, WW1, WW0 and RW2, RW1, RW0	W x H
000	1 x 4K
001	2 x 2K
010	4 x 1K
011	9 x 512
100	18 x 256
101, 110, 111	Illegal

The AEVAL and AFVAL pins are used to specify the almost empty and almost full threshold values, respectively. In order to handle different read and write aspect ratios, the values specified by the AEVAL and AFVAL pins are to be interpreted as the address of the last word stored in the FIFO. The FIFO actually contains separate write address (WADDR) and read address (RADDR) counters. These counters calculate the 12-bit memory address that is a function of WW and RW, respectively. WADDR is incremented every time a write operation is performed and RADDR is incremented every time a read operation is performed. Whenever the difference between WADDR and RADDR is greater than or equal to AFVAL, the AFULL output is raised. Likewise, whenever the difference

---

between WADDR and RADDR is less than or equal to AEVAL, the AEMPTY output is raised. Therefore AEVAL and AFVAL must be left-justified for widths greater than one (i.e. unused lsb's must be grounded).

#### *Aspect Ratio and Related Bits to Ground*

Aspect ratio	AEVAL/AFVAL bits to ground
1 x 4K	none
2 x 2K	0
4 x 1K	1:0
9 x 512	2:0
18 x 256	3:0

When the number of words stored in the FIFO reaches the amount specified by AEVAL while reading, the AEMPTY output will go high. Likewise when the number of words stored in the FIFO reaches the amount specified by AFVAL while writing, the AFULL output will go high. The FULL and EMPTY outputs will go high when the FIFO is completely full or empty, respectively.

It should be noted that the internal memory size is 512 X 9. When widths of 1, 2, and 4 are specified, the 9th bit is skipped.

The ESTOP pin is used to stop the read counter from counting any further once the FIFO is empty (i.e. the EMPTY flag goes high). Likewise, the FSTOP pin is used to stop the write counter from counting any further once the FIFO is full (i.e. the FULL flag goes high). These are configuration pins that should not be dynamically reconfigured. SmartGen treats them as static configuration pins and always ties them high.

Independent read and write operations are allowed, however only the read port can be pipelined. Data on the appropriate WD pins are written to the FIFO every rising WCLK edge as long as WEN and WBLK are low. Data is read from the FIFO and output on the appropriate RD pins every rising RCLK edge as long as REN is high and RBLK is low.

The active low RESET pin is used to asynchronously clear the outputs of the FIFO and reset the internal read and write address counters. It sets all the RD pins low, the FULL and AFULL pins low, and the EMPTY and AEMPTY pins high, however the contents of the memory remain unchanged. RESET has priority over RBLK and WBLK.

When instantiating the FIFO4K18, all unused input pins must be connected to GND.


## Warnings

- The WW, RW, AEVAL, and AFVAL pins can be dynamically configured, but only static configuration will be supported by SmartGen.
- The RPIPE signal can be dynamically configured, but only static configuration will be supported by SmartGen.
- No pipeline on the write port.
- Cascading allowed and supported in the width direction only by SmartGen. Cascading in the depth direction requires the use of a soft controller (i.e. implemented with core logic).
- ESTOP and FSTOP applications not clear. The effect of activating ESTOP is to allow the read pointer to wrap around, allowing the memory contents to be read over and over again with rewriting after EMPTY. The effect of activating FSTOP is not clear, however, since the write pointer could wrap around allowing overwriting of data which is never read. Therefore SmartGen will always tie these pins off high.



---

## *Flash Memory Block Macro*

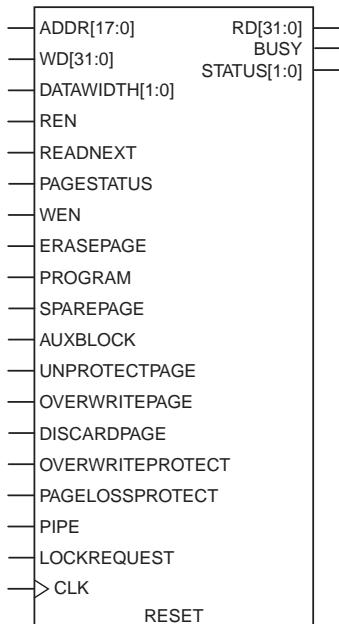

## Function

Flash memory block builder for use with SmartGen and Fusion

Actel

## Inputs / Outputs

See the description below for an explanation of the inputs and outputs available on the Flash memory block macro.

Each Flash Memory block holds 256 kb of data. Although it is functionally similar to a large single-port synchronous RAM, it has several significant differences, including:

1. Address bits are MSB justified, unlike RAM4K9 and RAM512X18 in which the address bits are LSB justified.
2. Write operation updates write data into the block buffer ONLY. To store data permanently into the Flash Memory Block array writes to a page must be followed by a program operation of the same page.
3. The simulation models always execute copy page from Flash memory block array (internal operation) in 65 clock cycles; in silicon the behavior is non-deterministic (63–67 clock cycles). This mismatch is reflected in the number of cycles BUSY is asserted.

Operations on Flash memory block are synchronous to rising-edge of CLK.

## Flash Memory Block Pin Description

All Flash memory block signals are active high, except for RESET which is active low. The Flash memory block is a completely synchronous model sensitive to rising edge of CLK input.

NAME	FUNCTION
ADDR[17:0]	Byte-offset into the Flash memory block array or block buffer of page buffer
WD[31:0]	Write data
DATAWIDTH[31:0]	00 = 1-byte in data_in/out[7:0] 01 = 2-bytes in data_in/out[15:0] 10/11 = 4-bytes in data_in/out[31:0]
REN	When asserted, initiates a read operation
READNEXT	When asserted with REN, initiates a read from next address after read to current address is complete.
PAGESTATUS	When asserted with read, initiates a read page status operation
WEN	When asserted, interface data is stored into the assembly buffer.
ERASEPAGE	When asserted, erase addressed page (program all zeroes).
PROGRAM	When asserted, write the contents of the assembly buffer into the cell array page addressed.
SPAREPAGE	When asserted, the sector addressed is used to access the spare page within that sector.
AUXBLOCK	When asserted, the page addressed is used to access the auxiliary block within that page.
UNPROTECTPAGE	When asserted, the page addressed is copied into the AB and the AB made writeable.
OVERWRITEPAGE	When asserted, the page addressed is overwritten with the contents of the AB if the page is writeable.
DISCARDPAGE	When asserted, the contents of the AB are discarded so that a new page write can be started.
OVERWRITEPROTECT	When asserted, all program operations will set the overwrite protect bit in the auxiliary block of the page being programmed.
PAGELOSSPROTECT	When asserted, a modified assembly buffer must be programmed or discarded before accessing a new page.
PIPE	When asserted with REN, read operation completes in 6 cycles. Required to be asserted for CLK speeds above 50MHz.
LOCKREQUEST	Request to lock user access to Flash memory block array.
CLK	Input clock. All operations and status are synchronous to rising-edge of this clock.
RESET	When asserted resets the state of the Flash memory block.
RD[31:0]	Read data to be sampled when BUSY=0.
STATUS[1:0]	Status of the last operation completed: 00 = successful completion 01 = Read: single error detected and corrected Write: operation addressed a write-protected page Erase-Page/Program: AB is unmodified 10 = Read: two or more errors detected Erase-Page/Program: Compare operation failed 11 = Write: attempt to write to another page before Programming current page.


## Functional Description

The Fusion datasheet, available here, <http://www.actel.com/techdocs/ds/default.aspx>, contains a detailed functional description of the entire Flash Memory Block.

## Simulation Details for Flash Memory Block

The Flash memory block array can be pre-loaded with user-defined data. For simulation purposes, you can specify a memory initialization file by over-riding the parameter "MEMORYFILE" in the Verilog netlist and the generic "MEMORYFILE" in Vital netlist.

The memory array declared in simulation models stores data that is one block wide. It is 64k x 140 bits. The addressing scheme for accessing this array consists of 16 bits, as shown in the figure below.

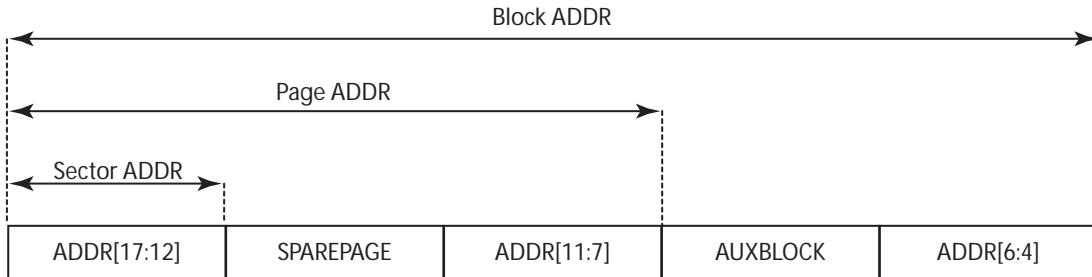

*Addressing Scheme for Accessing the Flash Memory Block Memory Array*

ADDR[17:0] is the Flash memory block interface address, SPAREPAGE and AUXBLOCK are input signals.

The memory file for pre-loading an Flash memory block array consists of "*strings of address and data in hexadecimal notation with address delimiters (@)*" and MUST conform to the rules shown below:

1. Each line MUST contain a string of fixed length (=35 characters) and start with an "@" if it corresponds to an address.
2. Each line following the address line corresponds to a block of data starting at the block address specified in the address line. This applies until the next line with an address specifier (@) is encountered.
3. Each data block consists of 35 hex chars. Hex[31:0] are the data characters corresponding to 16 bytes of user data with Hex[1:0] corresponding to Byte0 and Hex[31:30] corresponding to Byte15. Hex[34:32] are ECC related bits and must be addressed manually.

Based on these rules, the format looks like:

```
@Block_Address_0
Block_Data_0 ( required )
Block_Data_1 ( optional )
Block_Data_2 ( optional )
...
...
Block_Data_8 ( Aux block data for this page, optional )
@Block_Address_n
Block_Data_n      ( required )
Block_Data_n+1 ( optional )
Block_Data_n+2 ( optional )
...
...
...
Block_Data_n+8 ( Aux block data for this page, optional )
```

A typical memory file looks like:

```
@000...0000 // beginning with @, start address in hex. format. 0s to be padded
// between @ and hex address, to get a string of length 35.
ab101fd01... // 35 hexadecimal characters corresponding to each block of Flash memory
block cell
eab9c4.....
@000...4030 // start address for next data stream
```

---

```
c805489e... // 35 hexadecimal characters corresponding to each block of Flash memory  
block cell  
96986391...
```

## User Controlled Generics

**FAST\_SIM** - The generic/parameter FAST\_SIM is included in pre-synthesis and pre-layout simulation models to reduce cycles wasted in executing the PROGRAM operation. The default is '1', which means the PROGRAM operation is executed with a 4  $\mu$ s simulated delay. You can choose to deactivate the operation by overriding FAST\_SIM to 0, in which case PROGRAM is executed with a delay close to real time of 8.4 ms. You can also choose this mode for post-layout simulations.


**WR\_THR** - When the number of writes to a page in the Flash memory block array (program operation) exceeds the write threshold specified in the data sheet, the status returned is non-zero. Since the threshold is a huge value, WR\_THR is provided to simulate this failure at a reduced number of writes. You can override the generic with any non-zero count (such as 10 or 12). The write threshold exceeded condition is produced on the 10th write to the same page in the Flash memory block array.

**Note:** The string assigned to the generic/parameter MEMORYFILE is preserved through synthesis and place-and-route. But for FAST\_SIM and WR\_THR generics/parameters, you must reassign the desired value each time after synthesis and place-and-route.



---

## *Analog System Builder Macro*

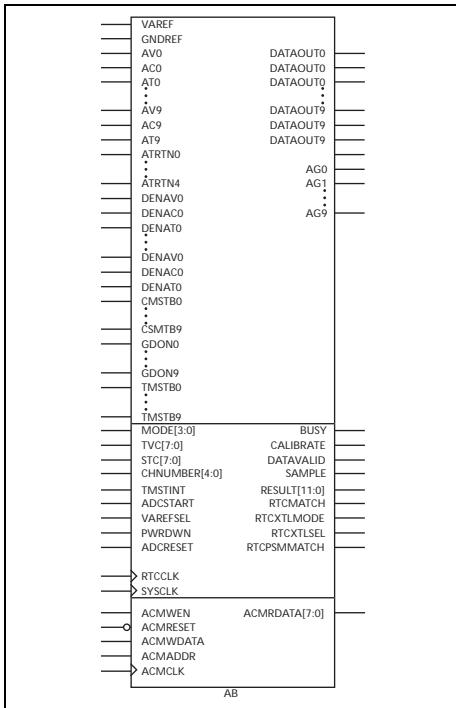

## Function

Analog system builder for use with SmartGen and Fusion. See the Fusion datasheet for a thorough description of the Analog System Builder.

## Inputs / Outputs

Inputs are listed on the left, outputs on the right.

See the description below for an explanation of the inputs and outputs available on the Analog System Builder. For a complete description of the features in the ASB, see the Fusion datasheet.

# Analog System Builder Pin Description

## Analog System Builder Pin Description

Signal Name	Number of bits	Direction	Function
VAREF	1	Inout	External voltage ref.; used as either input or output, depending on VREFSEL
GNDREF	1	Input	External ground ref.
MODE[3:0]	4	Input	ADC operating mode
SYSCLK	1	Input	External system clock
TVC[7:0]	8	Input	Clock divide control
STC[7:0]	8	Input	Sample time control
CHNUMBER[4:0]	5	Input	Analog input channel select
ADCSTART	1	Input	Start of conversion
PWRDWN	1	Input	Comparator power-down if 1
ADCRESET	1	Input	ADC initialize if 1
BUSY	1	Output	1 – Running conversion
CALIBRATE	1	Output	1 – Power-up calibration
DATAVALID	1	Output	1 – Valid conversion result
RESULT[11:0]	12	Output	Conversion result
TMSTBINT	1	Input	Internal temp. monitor strobe
SAMPLE	1	Output	1 – Analog input is sampled
CMSTB0 to CMSTB9	10	Input	Current monitor strobe – 1 per quad, active high
GDON0 to GDON9	10	Input	Control to power MOS – 1 per quad
TMSTB0 to TMSTB9	10	Input	Temperature monitor strobe – 1 per quad; active high
DAVOUT0, DACOUT0, DATOUT0 to DAVOUT9, DACOUT9, DATOUT9	30	Output	Digital outputs – 3 per quad
DENAV0, DENAC0, DENATO to DENAV9, DENAC9, DENAT9	30	Input	Digital input enables – 3 per quad
ACMCLK	1	Input	ACM clock
ACMWEN	1	Input	ACM write enable – active high
ACMRESET	1	Input	ACM reset – active low
ACMWDATA[7:0]	8	Input	ACM write data
ACMRDATA[7:0]	8	Output	ACM read data
ACMADDR[7:0]	8	Input	ACM address
VAREFSEL	1	Input	0 = Output internal voltage reference (2.56 V) to VAREF 1 = Input external voltage reference from VAREF and GNDREF
AV0	1	Input	Analog Quad 0

## Analog System Builder Pin Description (Continued)

<b>Signal Name</b>	<b>Number of bits</b>	<b>Direction</b>	<b>Function</b>
AC0	1	Input	
AG0	1	Output	
AT0	1	Input	
ATRTN0	1	Input	Temperature monitor return shared by Analog Quads 0 and 1
AV1	1	Input	Analog Quad 1
AC1	1	Input	
AG1	1	Output	
AT1	1	Input	
AV2	1	Input	Analog Quad 2
AC2	1	Input	
AG2	1	Output	
AT2	1	Input	
ATRTN1	1	Input	Temperature monitor return shared by Analog Quads 2 and 3
AV3	1	Input	Analog Quad 3
AC3	1	Input	
AG3	1	Output	
AT3	1	Input	
AV4	1	Input	Analog Quad 4
AC4	1	Input	
AG4	1	Output	
AT4	1	Input	
ATRTN2	1	Input	Temperature monitor return shared by Analog Quads 4 and 5
AV5	1	Input	Analog Quad 5
AC5	1	Input	
AG5	1	Output	
AT5	1	Input	
AV6	1	Input	Analog Quad 6
AC6	1	Input	
AG6	1	Output	
AT6	1	Input	
ATRTN3	1	Input	Temperature monitor return shared by Analog Quads 6 and 7
AV7	1	Input	Analog Quad 7
AC7	1	Input	
AG7	1	Output	

## Analog System Builder Pin Description (Continued)

Signal Name	Number of bits	Direction	Function
AT7	1	Input	
AV8	1	Input	Analog Quad 8
AC8	1	Input	
AG8	1	Output	
AT8	1	Input	
ATRTN4	1	Input	Temperature monitor return shared by Analog Quads 8 and 9
AV9	1	Input	Analog Quad 9
AC9	1	Input	
AG9	1	Output	
AT9	1	Input	
RTCMATCH	1	Output	MATCH
RTCPSSMMATCH	1	Output	MATCH connected to VRPSM
RTCXTLMODE[1:0]	2	Output	Drives XTLOSC RTCMODE[1:0] pins
RTCXTLSEL	1	Output	Drives XTLOSC MODESEL pin
RTCCLK	1	Input	RTC clock input

## Functional Description

The Fusion datasheet, available at <http://www.actel.com/techdocs/ds/default.aspx>, contains a detailed functional description of the entire Analog System Builder.

## Connecting Analog Ports

Each analog port must be connected to one of the following "virtual pads": INBUF\_A, INBUF\_DA or OUTBUF\_A.

AV0, AC0, AT0, ..., AV9, AC9 and AT9 are analog inputs that can be used either as analog or digital inputs. When used as an analog input, the analog input signal (e.g. AV0) must be connected to an INBUF\_A, and the corresponding digital input enable (e.g. DENAV0) must be tied to 0.

When used as a digital input, the analog input must be connected to an INBUF\_DA, and the corresponding digital input enable must be tied to 1.

All other analog inputs (ATRETURN01, ATRETURN23, ATRETURN45, ATRETURN67, and ATRETURN89) must be connected to an INBUF\_A.

**Note:** ATRETURN01, ATRETURN23, ATRETURN45, ATRETURN67, and ATRETURN89 must be connected to an INBUF\_A, even though they have no function in the simulation model.

Analog outputs (AG0, ..., AG9) must be connected to an OUTBUF\_A instance.

VAREF is an inout pad and does not need to be connected to INBUF\_A or OUTBUF\_A.

### Serialization concept

The analog ports are represented by a 1-bit wide port in both the Verilog and VHDL simulation models. Verilog modules and VHDL functions were developed to drive a real value through a 1-bit port and to read an analog value from a 1-bit port. The Analog System Builder macro contains embedded read and drive logic to read from the analog input and drive the analog output, respectively.

The drive module/function converts a real value into a 64-bit value, serializes it and streams it in zero simulation time, using delta delays. The read module/function deserializes a 64-bit stream into a 64-bit value and converts it into a real value.

## Verilog

Two Verilog modules (drive\_analog\_io and read\_analog\_io) are available to drive an analog input and read an analog output. You must instantiate a drive\_analog\_io for each analog, and a read\_analog\_io for each analog output. The read\_analog\_io starts as soon as there is a non 'Z' data bit on the module input pin. All read and drive operations happen in zero time (delta delays).

Example: drive\_analog\_io with an INBUF\_A and OUTBUF\_A instantiation

```
wire          AV0_stream_pad, AV0_stream_y, AG0_d, AG0_pad;
wire [63:0] AG0_VECTOR;
real         AV0_real;
drive_analog_io drive_AV0 ( $realtobits(AV0_real),  AV0_stream_pad );
INBUF_A inbuf_AV0 ( .Y(AV0_stream_y), .PAD (AV0_stream_pad) );
AB ab_inst (
    ...
    .AV0      (AV0_stream_y),
    ...
    .AG0      (AG0_d),
    ...
);
OUTBUF_A outbuf_AG0 ( .PAD(AG0_pad), .D (AG0_d) );
initial
begin
    AV0_real <= 1.28;
end
```

## VHDL

Similarly, two VHDL functions (drive\_analog\_input and read\_analog\_input) are available to drive an analog input and read an analog output. These function are part of the analog\_io VHDL package. The read\_analog\_io starts as soon as there is a non 'Z' data bit on the function input pin. All read and drive operations happen in zero time (delta delays).

Example: drive\_analog\_io and read\_analog\_io with an INBUF\_A instantiation

```
...
use work.analog_io.all;
...
signal varef_real : real
signal AT0_real : real
signal varef_serial_out  : std_logic;
signal AT0_stream_pad : std_logic;
signal AT0_stream_y : std_logic;
component INBUF_A
    port(
        ...
    );
end component;
component AB
    port(
        ...
    );

```

---

```

end component;
read_varef : process
begin
  wait until varef_serial_out /= 'Z';
  read_analog_input( varef_serial_out, varef_real );
end process read_varef;
drive_quads : process
begin
  AT0_real <= 2.18;
  drive_analog_input( AT0_real, AT0_stream_pad );
end process drive_quads;
inbuf_a_at0 : INBUF_A
  port map (
    PAD    => AT0_stream_pad,
    Y      => AT0_stream_y,
    ...
  );
ab_inst: AB
  port map (
    VAREF => varef_serial_out,
    ...
    AV0     => AT0_stream_y,
    ...
  );

```

## **drive\_temperature\_quad and drive\_current\_monitor**

In addition to the standard Verilog `drive_analog_io` modules and VHDL `drive_analog_input` procedures used to drive the analog quads, two Verilog modules and VHDL procedures are also available to drive the AC and AT quads.

The first Verilog module / VHDL procedure, `drive_temperature_quad`, takes a temperature in Celsius, converts it into a voltage, and drives it over the digital input. This can be used regardless of which input is selected by the Analog MUX - T-prescaler, temperature monitor or T-direct analog input. The equation is as follows:

$$AT(V) = (Temperature(C) + 273.15) * (2.30258 * 0.000087248)$$

The second Verilog module / VHDL procedure, `drive_current_monitor`, can only be used when driving an AC quad that will be used for Current Monitoring. As an input it takes the corresponding AV quad voltage (e.g. AV3's voltage, if driving AC3), the Resistor (in Ohm) and Current (in A) values, to calculate the voltage on the AC quad (see the Fusion datasheet for more information). The resistor must be between the 0.01 and 10 Ohm, and (AV - AC) has to be less than 250 mV. The equation is as follows:

$$AC(V) = AV(V) - (Resistor(Ohm) * Current(A))$$

If the analog MUX selects the C-prescaler or the C-direct input, then use the standard VHDL procedure `drive_analog_input` or Verilog `drive_analog_io` modules to drive the AC quad.

---

## Verilog

```
real av0, resistor0, current0, temperature0;
wire AC0 _i, AC0 _i;
drive_current_monitor drive_CM_AC0 ( $realtobits(av0), $realtobits(resistor0),
$realtobits(current0), AC0_ i );
drive_temperature_quad drive_AT0 ( $realtobits(temperature0), AT0_ i );
INBUF_A inbuf_a_ac0 ( .Y(AC0_ o), .PAD (AC0_ i) );
INBUF_A inbuf_a_at0 ( .Y(AT0_ o), .PAD (AT0_ i) );
AB ab_inst (
  ...
  .AC0      (AC0_ o),
  .AT0      (AT0_ o),
  ...
);
initial
begin
av0  <= 1.00032;
resistor0    <= 1.0;
current0   <= 1.031;
temperature0 <= -70.0;
...
end
```

## VHDL

```
component INBUF_A
port(
  PAD      : in  STD_ULOGIC;
  Y        : out STD_ULOGIC);
end component;
component AB
port(
  VAREF    : INOUT STD_LOGIC ;
  GNDREF   : IN STD_LOGIC ;
  AV0       : IN STD_LOGIC ;
  ...
  RTCMATCH  : OUT STD_LOGIC ;
  ACMRDATA  : OUT STD_LOGIC_VECTOR(7 DOWNTO 0)
);
end component;
signal ac0_pad, ac0_y, at0_pad, at0_y,  : std_logic;
signal current0, resistor0, temperature0, av0  : real;
drive_aq : process
begin
  av0 <= 1.00032;
  resistor0  <= 1.0;
  current0 <= 1.031;
  temperature0 <= -70.0;
  drive_current_monitor ( av0, Res0, Curr0, ac0_pad );
  drive_temperature_quad( TempC0, at0_pad );
  ...
end process drive_aq;
inbuf_a_ac0 : INBUF_A
  port map (
    PAD => ac0_pad,
```

---

```

Y      => ac0_y
);
inbuf_a_at0 : INBUF_A
port map (
PAD      => ato_pad,
Y        => at0_y
);
top: AB
port map (
...
AV0      => av0_y,
AC0      => ac0_y,
AT0      => at0_y,
...
);

```

Make sure that the Flash Memory System Builder's INIT\_DONE output is '1' before you drive the analog block (AB) analog quads (AV0-9, AC0-9 and AT0-9) in the stimulus file. For example:

```

ENTITY testbench IS
END testbench;
Architecture stimuli of testbench is
...
Begin
...
serial_AV0 : process
begin
    wait on AV0_real;
    if ( INIT_DONE = '1' ) then
        drive_analog_input ( real(AV0_real), AV0_serial );
    end if;
end process serial_AV0;
...

```

## Polarity

Each quad has a polarity bit, Bx[6], (e.g. B0[6] for AV0-polarity and B4[6] for AV1-polarity). The default polarity is Positive, Bx[6] = '0'. Polarity error occurs when the polarity bit is inconsistent with the quad sign (e.g. AV0 > 0 and AV0-polarity = '1').

AT-quad can only be positive and therefore its polarity can only be set to Positive, Bx[6] = '0'. For AT-quad, polarity error occurs if AT is negative or if AT-polarity is set to Negative, Bx[6] = '1'.

## Prescaler

Each quad has a Prescaler Opamp mode bit, Bx[7], (e.g. B0[7] for AV0- prescaler op-amp and B4[7] for AV1 prescaler op-amp). Default is Powerdown, Bx[7] = '0'.

If the factor of the prescaler input and scaling factor is greater than the internal reference voltage, the prescaler output will saturate and the prescaler output will be equal to the internal reference voltage (default 2.56V).

If a Polarity error occurs (e.g. AV0 > 0 and AV0-polarity = '1'), the prescaler output will be '0.0'.

## Current Monitor

Each C-quad has a Current Monitor Switch bit (B0[4] for AC0, B4[4] for AC1, etc.). This switch needs to be 'ON' if the analog MUX selects the Current Monitor, otherwise the analog MUX output will be '0.0'. Default is Off, B0[4] = '0'.

The current monitor output is the difference between the AV and AC multiplied by a factor of 10. CMSTB-9 enables the current monitor for analog quads 0-9. Additionally, each C-quad has a Current-Monitor Switch (B0[4]) which enables you to switch the current monitor on or off. This switch needs to be 'ON' if the analog MUX selects the Current Monitor input, otherwise the analog MUX output will be '0.0'. The default setting is off.

The following requirements must be met in order to use the current monitor:

- ABS(AV) needs to be greater than ABS(AC), otherwise the Current Monitor returns a value of 0.0
- AV and AC must have the same sign and polarity. If not, they are invalid Current monitor inputs, and the current monitor output will be 0.0
- If a Polarity error occurs (e.g. AV0 > 0 and AV0-polarity = '1', or AC0 < 0 and AC0-polarity = '0'), the current monitor output will be 0.0
- If the difference between the AV and AC multiplied by a factor of 10 is greater than the internal reference voltage, the current monitor output saturates and the current monitor output is equal to the internal reference voltage (default 2.56V).

## Temperature Monitor

The temperature monitor output is the AT-quad value multiplied by a factor of 12.5. TMSTB0-9 enables the temperature monitor for analog quads 0-9.

AT quad only accepts positive voltages, and T-pad polarity has to be set to 0 (Positive)

If the AT-quad value multiplied by 12.5 is greater than the internal reference voltage, the temperature monitor output saturates and the temperature monitor output is equal to the internal reference voltage (default 2.56V).

When using the temperature monitor, to reflect a temperature change, the value applied to AT should be a differential voltage.

$$AT \text{ (delta V)} = T \text{ (K)} * (0.0595 / 300)$$

$$AT \text{ (delta V)} = T \text{ (K)} * 1.983E-4$$

## Using ADC in the Temperature Monitor

Using the previous equation, 300K (room temperature) should correspond to 59.5mV (0.0595 on AT, therefore 0.748 at the temperature monitor output / ADC input). When doing a 10-bit ADC conversion using a 2.56V reference voltage, 0.0595 on AT (T=300K) will give a RESULT of 300 (decimal). In this case, 1LSB change on RESULT corresponds to 1K temperature change.

## Direct Analog Input

Each V, C and T-quad has a Direct Analog Input Switch (B0[5] for AV0, B1[5] for AC0, and B3[5] for AT0) which enables you to switch the direct analog input ON or OFF. This switch must be ON if the analog MUX selects the direct analog input, otherwise the analog MUX output will be 0.0. The default setting is OFF.

## Analog Quad Switch Conditions

For the V-quad, the analog MUX can choose the V-prescaler or the V-direct analog input; for the C-quads, the analog MUX can select the C-prescaler, C-direct analog input or current monitor; for the T-quads, the analog MUX can choose the T-prescaler, the T-direct analog input or the Temperature Monitor.

Set the V, C and T-prescaler Opamp, V, C and T-direct analog input switches and Current Monitor switch need be set according to the table below for power efficiency and/or ADC conversion accuracy.

Selected MUX input Switch \	V-Prescaler	V-Direct analog input	C-Prescaler	C-Direct analog input	Current Monitor	T-Prescaler	T-Direct analog input	Temp. Monitor
-----------------------------	-------------	-----------------------	-------------	-----------------------	-----------------	-------------	-----------------------	---------------

<b>V-Prescale Op Amp</b>	<b>ON</b>	<b>OFF</b>	<b>X</b>	<b>X</b>	<b>X</b>	<b>X</b>	<b>X</b>	<b>X</b>
<b>V-Direct analog input switch</b>	<b>OFF</b>	<b>ON</b>	<b>X</b>	<b>X</b>	"OFF" or "ON and 0<AV<var ef"	<b>X</b>	<b>X</b>	<b>X</b>
<b>C-Prescaler Op-Amp</b>	<b>X</b>	<b>X</b>	<b>ON</b>	<b>OFF</b>	<b>OFF</b>	<b>X</b>	<b>X</b>	<b>X</b>
<b>C-Direct analog input switch</b>	<b>X</b>	<b>X</b>	<b>OFF</b>	<b>ON</b>	<b>OFF</b>	<b>X</b>	<b>X</b>	<b>X</b>
<b>Current Monitor switch</b>	<b>X</b>	<b>X</b>	<b>OFF</b>	<b>OFF</b>	<b>ON</b>	<b>X</b>	<b>X</b>	<b>X</b>
<b>T-Prescaler Op-Amp</b>	<b>X</b>	<b>X</b>	<b>X</b>	<b>X</b>	<b>X</b>	<b>ON</b>	<b>OFF</b>	<b>OFF</b>
<b>T-Direct input switch</b>	<b>X</b>	<b>X</b>	<b>X</b>	<b>X</b>	<b>X</b>	<b>OFF</b>	<b>ON</b>	<b>OFF</b>

If you do not meet the switch conditions above, the analog MUX output is 0.0 and an error message appears.

In addition, when you the AV direct analog input, the scaling factor for the V-prescaler (B0[2-0]) must be

- 100 for the 1.0 V range
- 101 for the 0.5 V range
- 111 for the 0.125 V range

The same restriction applies when you select the AC direct input; the scaling factor for the C-prescaler (B1[2-0]) must be 100 or above. This restriction does not apply to the AT direct analog input.

When you do not use an analog input quad as an analog input or a digital input, it must tied to GND (1'b0 in Verilog and '0' in VHDL). The corresponding configuration byte must be set to "00000000".

## ADC

The power-up calibration time after ADC comes out of reset is 3840 ADC\_CLK cycles.

The conversion time can vary greatly depending on the SYSCLK frequency, ADCCLK frequency (determined by TVC), the STC settings, and the conversion bit-resolution (MODE).

$t_{conv} = t_{sync\_read} + t_{sample} + t_{distrib} + t_{post\_cal} + t_{sync\_write}$

$t_{conv} = \text{SYSCLK period} + ((2 + \text{STC}) * \text{ADCCLK period}) + (8, 10 \text{ or } 12 * \text{ADCCLK period}) + (2 * \text{ADCCLK period}) + \text{SYSCLK period}$

$t_{sync\_read}$ : Time for latching the input data

$t_{sample}$ : Time for sampling the analog signal

$t_{distrib}$ : Time for charge distribution

$t_{post\_cal}$ : Time for post-calibration

$t_{sync\_write}$ : Time for latching the output data

A Verilog parameter / VHDL generic enables faster conversion time. See the "User Parameter / Generics" on page 150 for more information.

## RTC

When you use the RTC, you must first write the CTRL\_STAT register. Refer to the Fusion datasheet for more information on the functionality of each CTRL\_STAT register's bit. If do not use the RTC , Actel recommends that you write the CTRL\_STAT register to "00000000".

When doing a byte-read from the counter, the match register, or the individual match bits, byte 0 must be read before other bytes can be read. A byte 0 read latches the 5-byte register into a 40-bit capture register. The following read operations are made from the 40-bit capture register. For the counter, the match register or the individual match bits, if bytes 1 through 4 are read before byte 0 is read, the read data (ACMRDATA) is irrelevant.

Example: Proper read sequence

```
Read COUNTER0
Read COUNTER4
Read COUNTER3
Read MATCHREG0
Read MATCHREG2
Read MATCHBITS0
Read MATCHBITS2
Read MATCHBITS3
```

## Register Read and Write Conditions

Use ACMADDR, ACWEN and ACMCLK (and ACMWDATA for write) to control RTC read and write operations. Besides setting those control signals properly, the following conditions need to be met before the read or write on the chosen register byte can be executed.

```
COUNTER write: rstb_cnt = '1', cntr_en = '0' and rtm_RST = '0'
MATCHREG write: rtm_RST = '0'
MATCHBITS can not be overwritten
COUNTER read: rstb_CNT = '1' and rtm_RST = '0'
MATCHREG read: rtm_RST = '0'
MATCHBITS read: rstb_CNT = '1' and rtm_RST = '0'
```

## User Parameter / Generics

### MEMORYFILE

This feature enables loading of the memory initial values. This can especially help with the AQ-ACM and RTC configurations. In Verilog the MEMORY is defined as an array of 8 bits by 90, and the memory init file format needs to be of a similar type. In VHDL, the MEMORY is defined as a 720-bit vector, and the memory init file needs to be of a similar type. Default is an empty string (i.e. no memory init file).

### WARNING\_MSGS\_ON

This feature enables you to disable the warning messages display. Default is ON ('True' in VHDL and '1' in Verilog).

### FAST\_ADC\_CONV\_SIM

Setting FAST\_ADC\_CONV\_SIM to True enables much faster ADC conversion time; In this fast simulation mode, the time for latching input and output data (one SYSCLK period each), and the time for sampling the analog input signal ((2 + STC) \* ADCCLK period) are not accounted for. The default is OFF ('False' in VHDL and '0' in Verilog). Set FAST\_ADC\_CONV\_SIM to 'True' in VHDL and to '1' in Verilog to enable this fast simulation mode.


Important: This is in simulation mode only. There is no equivalent mode on silicon.

---

## *Voltage Regulator and Power Supply Monitor Macro*

# Voltage Regulator and Power Supply Monitor (VRPSM)

Fusion

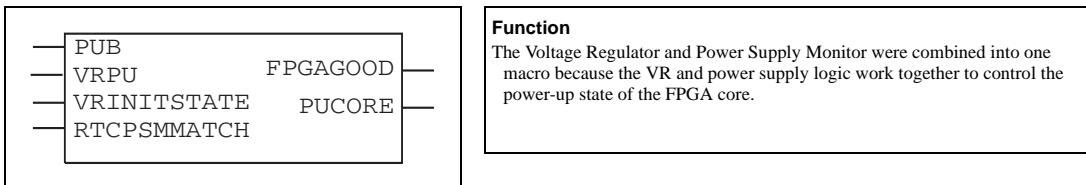

## Function

The Voltage Regulator and Power Supply Monitor were combined into one macro because the VR and power supply logic work together to control the power-up state of the FPGA core.

## Inputs / Outputs

Inputs are listed on the left, outputs on the right.  
See the VRPSM signal description below for an explanation of the inputs and outputs.

The VR generates a 1.5 V power supply (500 mA max) from the 3.3 V power supply. The 1.5 V output is intended to supply all 1.5 V needs of the Fusion product. This regulator requires an external bipolar pass transistor. Enable for this block is generated in the VR logic block, or from an external pad.

The 1.5 V is not supplied internally to the Fusion device. It must be routed externally to the VCC pins on the device. Therefore the user is not required to use the V-Reg and can use an off-chip 1.5 V supply if desired.

The VRPSM can be enabled from several sources: the PUB pin, RTCMATCH signal from the Analog Block's RTC, or triggered by the PUP0 (RTINIT1 and RTINIT1, PC bits). In the simulation library, PUP0 is represented by VRINITSTATE. VRINITSTATE is FPGAGOOD initial power-up value. It enables you to drive FPGAGOOD to '1' or '0', before the 3.3V is up. The PUCORE output is the Power-Up Bar (PUB) input inverted.

Once triggered the VRPSM remains on because of the latching functions of RS flip-flops. Only the FPGA fabric can reset these flip-flops and turn off the VRPSM. Once the FPGAGOOD signal is established, this VRPSM enable mechanism is no longer active. See the tables below for signal descriptions and recommended power-up sequences.

## VRPSM Signal Description and Power-Up Sequences

The signals for the VPRSM macro are listed in the table below. The PUB input comes from the PUB pin on the device and can be pulled high by a signal external to the Fusion device. This can be used to wake up from a standby condition. The inputs VRINITSTATE and RTCPSMMTACH come from the VR Init and RTC blocks respectively and either can initiate a VR power up.

NAME	Number of Bits	Direction	FUNCTION
PUB	1	INPUT	Power-up bar
VRPU	1	INPUT	Voltage regulator power-up
VRINITSTATE	1	INPUT	FPGAGOOD initial value (set by 2 flash bits in the FPGA)
RTCPSMMATCH	1	INPUT	Connected to RTCMATCH signal from RTC
FPGAGOOD	1	OUTPUT	Indicates that the FPGA is logically functional
PUCORE	1	OUTPUT	Power-up to core

---

Recommended power up sequences are listed below. ? indicates a don't care value.

	PUB	VRINITSTATE	VRPU	RTCPSPMMATCH	FPGAGOOD
Initial power-up	?	1	?	?	1
	?	0	?	?	0
Sequence	1	?	0	0	0
	0	?	0	0	1
	1	?	1	0	1
	1	?	0	0	0
	1	?	0	0	0
Sequence	1	?	0	0	0
	1	?	0	1	1
	1	?	1	0	1
	1	?	0	0	0

## Functional Description

The Fusion datasheet, available at <http://www.actel.com/techdocs/ds/default.aspx>, contains a detailed functional description of the entire VRPSM and its uses.




---

## *I/O Macros*

## BIBUF

Fusion, ProASIC3, ProASIC3E

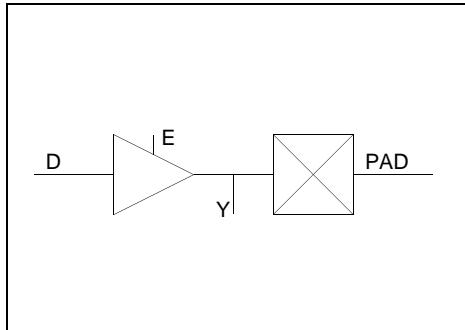

Input	Output
D, E, PAD	PAD, Y

Family	I/O Tiles
All	1

### Function

Bidirectional Buffer, High Slew (with Hidden Buffer at Y pin)

### Truth Table


MODE	E	D	PAD	Y
OUTPUT	1	X	D	D
INPUT	0	X	X	PAD

### Attribute Default Values

Attribute	Default Value	
	ProASIC3	ProASIC3E
IO_THRESH	LVTTL	LVTTL
OUT_DRIVE	12	12
SLEW	HIGH	HIGH
SKEW	OFF	OFF
IN_DELAY	N/A	OFF
SCHMITT_TRIGGER	N/A	OFF
RES_PULL	NONE	NONE

## CLKBIBUF

Fusion, ProASIC3, ProASIC3E

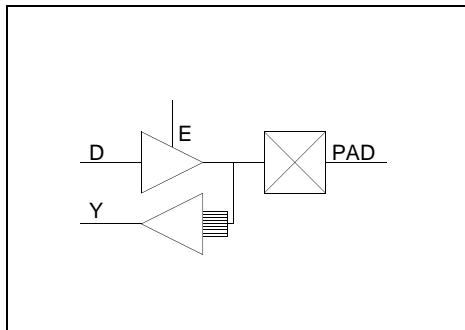

Input	Output
D, E, PAD	PAD, Y

Family	I/O Tiles
All	1

### Function

Bidirectional with Input Dedicated to routed Clock Network

### Truth Table


D	E	PAD	Y
X	0	Z	X
X	0	0	0
X	0	1	1
0	1	0	0
1	1	1	1

### Attribute Default Values

Attribute	Default Value	
	ProASIC3	ProASIC3E
IO_THRESH	LVTTL	LVTTL
OUT_DRIVE	12	12
SLEW	HIGH	HIGH
SKEW	OFF	OFF
IN_DELAY	N/A	OFF
SCHMITT_TRIGGER	N/A	OFF
RES_PULL	NONE	NONE

## CLKBUF

Fusion, ProASIC3, ProASIC3E



### Function

Input for Dedicated Routed Clock Network

### Truth Table

PAD	Y
0	0
1	1

### Attribute Default Values

Attribute	Default Value	
	ProASIC3	ProASIC3E
IO_THRESH	LVTTL	LVTTL
IN_DELAY	N/A	OFF
SCHMITT_TRIGGER	N/A	OFF
RES_PULL	NONE	NONE


Input	Output
PAD	Y

Family	I/O Tiles
All	1

NOTE 1: For an internal Clock net, refer to the CLKINT macro.

## INBUF

Fusion, ProASIC3, ProASIC3E



### Function

Input Buffer

### Truth Table

PAD	Y
0	0
1	1

### Attribute Default Values


Attribute	Default Value	
	ProASIC3	ProASIC3E
IO_THRESH	LVTTL	LVTTL
IN_DELAY	N/A	OFF
SCHMITT_TRIGGER	N/A	OFF
RES_PULL	NONE	NONE

Input	Output
PAD	Y

Family	I/O Tiles
All	1

## OUTBUF

Fusion, ProASIC3, ProASIC3E



Input	Output
D	PAD

Family	I/O Tiles
All	1

### Function

Output Buffer, High Slew

### Truth Table


D	PAD
0	0
1	1

### Attribute Default Values

Attribute	Default Value	
	ProASIC3	ProASIC3E
IO_THRESH	LVTTL	LVTTL
OUT_DRIVE	12	12
SLEW	HIGH	HIGH
RES_PULL	NONE	NONE

## TRIBUFF

Fusion, ProASIC3, ProASIC3E



Input	Output
D, E	PAD

Family	I/O Tiles
All	1

### Function

Tristate Output, High Slew

### Truth Table

E	PAD
0	Z
1	D

### Attribute Default Values

Attribute	Default Value	
	ProASIC3	ProASIC3E
IO_THRESH	LVTTL	LVTTL
OUT_DRIVE	12	12
SLEW	HIGH	HIGH
SKEW	OFF	OFF
RES_PULL	NONE	NONE

---


## Fusion, ProASIC3, and ProASIC3E Input IO Macros

Names for the input buffers are composed of up to 4 parts:

- A base name indicating the type of buffer: INBUF
- IO Technology like LVCMOS
- An optional number code 33, 25, 18 or 15 indicating a 3.3, 2.5, 1.8 OR 1.5 voltage level.
- An optional one character code (U/D) designating a pull-up/down resistor. When the buffer has no resistor, this code is omitted.

For example:

- INBUF\_LVCMOS25U - An input LVCMOS buffer with 2.5 CMOS voltage levels, pull-up resistor.
- INBUF\_PCIX - An input PCIX buffer

	<b>Function</b> Global Input Buffer						
<b>Truth Table</b>							
<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <th>PAD</th><th>Y</th></tr> <tr> <td>0</td><td>0</td></tr> <tr> <td>1</td><td>1</td></tr> </table>	PAD	Y	0	0	1	1	
PAD	Y						
0	0						
1	1						
<b>Input</b> PAD	<b>Output</b> Y						
<b>Family</b> All	<b>I/O Tiles</b> 1						

#### Available INBUF\_X Macro Types

Name	Description
INBUF_LVCMOS5	LVCMOS Input buffer with 2.5V CMOS voltage level, 5.0V tolerant †
INBUF_LVCMOS5D	LVCMOS Input buffer with 2.5V CMOS voltage level, pull-down resistor, 5.0V tolerant †
INBUF_LVCMOS5U	LVCMOS Input buffer with 2.5V CMOS voltage level, pull-up resistor, 5.0V tolerant †
INBUF_LVCMOS33	LVCMOS Input buffer with 3.3 CMOS voltage level
INBUF_LVCMOS33U	LVCMOS Input buffer with 3.3 CMOS voltage level, pull-up resistor
INBUF_LVCMOS33D	LVCMOS Input buffer with 3.3 CMOS voltage level, pull-down resistor
INBUF_LVCMOS25	LVCMOS Input buffer with 2.5 CMOS voltage level*
INBUF_LVCMOS25U	LVCMOS Input buffer with 2.5 CMOS voltage level, pull-up resistor*
INBUF_LVCMOS25D	LVCMOS Input buffer with 2.5 CMOS voltage level, pull-down resistor*
INBUF_LVCMOS18	LVCMOS Input buffer with 1.8 CMOS voltage level
INBUF_LVCMOS18U	LVCMOS Input buffer with 1.8 CMOS voltage level, pull-up resistor
INBUF_LVCMOS18D	LVCMOS Input buffer with 1.8 CMOS voltage level, pull-down resistor
INBUF_LVCMOS15	LVCMOS Input buffer with 1.5 CMOS voltage level
INBUF_LVCMOS15U	LVCMOS Input buffer with 1.5 CMOS voltage level, pull-up resistor
INBUF_LVCMOS15D	LVCMOS Input buffer with 1.5 CMOS voltage level, pull-down resistor
INBUF_PCI	PCI Input buffer
INBUF_PCIX	PCIX Input buffer
INBUF_GTL25	GTL Input buffer with 2.5 CMOS voltage level*
INBUF_GTL33	GTL Input buffer with 3.3 CMOS voltage level*
INBUF_GTL25P	GTLP Input buffer with 2.5 CMOS voltage level*
INBUF_GTL33P	GTLP Input buffer with 3.3 CMOS voltage level*
INBUF_HSTL_I	HSTL Class I Input buffer*
INBUF_HSTL_II	HSTL Class II Input buffer*
INBUF_SSTL2_I	SSTL2 Class I Input buffer*
INBUF_SSTL2_II	SSTL2 Class II Input buffer*
INBUF_SSTL3_I	SSTL3 Class I Input buffer*
INBUF_SSTL3_II	SSTL3 Class II Input buffer*
INBUF_A	Analog input buffer; you must connect the GNDREF and ATRTN01 - ATRTN89 pads (in the Analog System Builder) to this buffer. You cannot use a generic INBUF in place of INBUF_A.
INBUF_DA	Digital or analog input buffer; you must connect the voltage, current, and temperature monitoring pads (from the Analog System Builder) to this macro. You cannot use a generic INBUF in place of INBUF_DA.

† = The A3P030 device does not support INBUF\_LVCMOS5, INBUF\_LVCMOS5D, or INBUF\_LVCMOS5U


## Bi-Directional IO Macros

Names for the bi-directional buffers are composed of up to 4 parts:

- A base name indicating the type of buffer: BIBUF
- Optional IO Technology like LVCMOS
- An optional number code indicating drive strength in milli-amps.
- An optional one character code (S/F) indicating high(F) slew or low(S) slew
- An optional one character code (U/D) designating a pull-up/down resistor. When the buffer has no resistor, this code is omitted.

For example:

- BIBUF\_LVCMOS25U - A bi-directional LVCMOS buffer with 2.5 CMOS voltage levels, pull-up resistor
- BIBUF\_S\_8- A bi-directional buffer with low slew and 8 mA drive strength

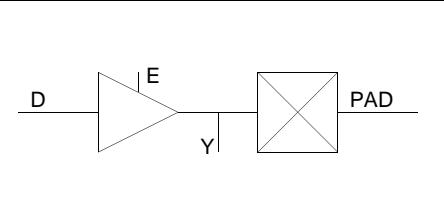BIBUF_X		Fusion, ProASIC3, ProASIC3E																	
		<b>Function</b> Bidirectional Buffer (with Hidden Buffer at Y pin)																	
		<b>Truth Table</b>																	
		<table border="1"><thead><tr><th>MODE</th><th>E</th><th>D</th><th>PAD</th><th>Y</th></tr></thead><tbody><tr><td>OUTPUT</td><td>1</td><td>X</td><td>D</td><td>D</td></tr><tr><td>INPUT</td><td>0</td><td>X</td><td>X</td><td>PAD</td></tr></tbody></table>			MODE	E	D	PAD	Y	OUTPUT	1	X	D	D	INPUT	0	X	X	PAD
MODE	E	D	PAD	Y															
OUTPUT	1	X	D	D															
INPUT	0	X	X	PAD															
<b>Family</b>		<b>I/O Tiles</b>																	
<table border="1"><thead><tr><th>Family</th><th>I/O Tiles</th></tr></thead><tbody><tr><td>All</td><td>1</td></tr></tbody></table>		Family	I/O Tiles	All	1														
Family	I/O Tiles																		
All	1																		

### BIBUF\_X Macro Types

Name	Description
BIBUF_LVCMOS33	LVCMOS bi-directional buffer with 3.3 CMOS voltage level
BIBUF_LVCMOS33U	LVCMOS bi-directional buffer with 3.3 CMOS voltage level, pull-up resistor
BIBUF_LVCMOS33D	LVCMOS bi-directional buffer with 3.3 CMOS voltage level, pull-down resistor
BIBUF_LVCMOS25	LVCMOS Bi-directional buffer with 2.5 CMOS voltage level
BIBUF_LVCMOS25U	LVCMOS Bi-directional buffer with 2.5 CMOS voltage level, pull-up resistor
BIBUF_LVCMOS25D	LVCMOS Bi-directional buffer with 2.5 CMOS voltage level, pull-down resistor
BIBUF_LVCMOS18	LVCMOS Bi-directional buffer with 1.8 CMOS voltage level
BIBUF_LVCMOS18U	LVCMOS Bi-directional buffer with 1.8 CMOS voltage level, pull-up resistor
BIBUF_LVCMOS18D	LVCMOS Bi-directional buffer with 1.8 CMOS voltage level, pull-down resistor
BIBUF_LVCMOS15	LVCMOS Bi-directional buffer with 1.5 CMOS voltage level
BIBUF_LVCMOS15U	LVCMOS Bi-directional buffer with 1.5 CMOS voltage level, pull-up resistor
BIBUF_LVCMOS15D	LVCMOS Bi-directional buffer with 1.5 CMOS voltage level, pull-down resistor
BIBUF_PCI	PCI Bi-directional buffer
BIBUF_PCIX	PCIX Bi-directional buffer
BIBUF_SSTL2_I	SSTL2 class I bi-directional buffer*
BIBUF_SSTL2_II	SSTL2 class II bi-directional buffer*
BIBUF_SSTL3_I	SSTL3 class I bi-directional buffer
BIBUF_SSTL3_II	SSTL3 class II bi-directional buffer*
BIBUF_HSTL_I	HSTL class I bi-directional buffer*
BIBUF_HSTL_II	HSTL class II bi-directional buffer*
BIBUF_GTL25	GTL bi-directional buffer*
BIBUF_GTL33	GTL bi-directional buffer*
BIBUF_GTL25	GTLP Bi-directional buffer with 2.5 CMOS voltage level*

## BIBUF\_X Macro Types (Continued)


Name	Description
BIBUF_GTL_P33	GTLP Bi-directional buffer with 3.3 CMOS voltage level*
BIBUF_F_2	Bi-directional buffer with high slew
BIBUF_F_2U	Bi-directional buffer with high slew and pull-up resistor
BIBUF_F_2D	Bi-directional buffer with high slew and pull-down resistor
BIBUF_F_4	Bi-directional buffer with high slew
BIBUF_F_4U	Bi-directional buffer with high slew and pull-up resistor
BIBUF_F_4D	Bi-directional buffer with high slew and pull-down resistor
BIBUF_F_6	Bi-directional buffer with high slew
BIBUF_F_6U	Bi-directional buffer with high slew and pull-up resistor
BIBUF_F_6D	Bi-directional buffer with high slew and pull-down resistor
BIBUF_F_8	Bi-directional buffer with high slew
BIBUF_F_8U	Bi-directional buffer with high slew and pull-up resistor
BIBUF_F_8D	Bi-directional buffer with high slew and pull-down resistor
BIBUF_F_12	Bi-directional buffer with high slew
BIBUF_F_12U	Bi-directional buffer with high slew and pull-up resistor
BIBUF_F_12D	Bi-directional buffer with high slew and pull-down resistor
BIBUF_F_16	Bi-directional buffer with high slew
BIBUF_F_16U	Bi-directional buffer with high slew and pull-up resistor
BIBUF_F_16D	Bi-directional buffer with high slew and pull-down resistor
BIBUF_F_24	Bi-directional buffer with high slew
BIBUF_F_24U	Bi-directional buffer with high slew and pull-up resistor
BIBUF_F_24D	Bi-directional buffer with high slew and pull-down resistor
BIBUF_S_2	Bi-directional buffer with low slew
BIBUF_S_2U	Bi-directional buffer with low slew and pull-up resistor
BIBUF_S_2D	Bi-directional buffer with low slew and pull-down resistor
BIBUF_S_4	Bi-directional buffer with low slew
BIBUF_S_4U	Bi-directional buffer with low slew and pull-up resistor
BIBUF_S_4D	Bi-directional buffer with low slew and pull-down resistor
BIBUF_S_6	Bi-directional buffer with low slew
BIBUF_S_6U	Bi-directional buffer with low slew and pull-up resistor
BIBUF_S_6D	Bi-directional buffer with low slew and pull-down resistor
BIBUF_S_8	Bi-directional buffer with low slew
BIBUF_S_8U	Bi-directional buffer with low slew and pull-up resistor
BIBUF_S_8D	Bi-directional buffer with low slew and pull-down resistor
BIBUF_S_12	Bi-directional buffer with low slew
BIBUF_S_12U	Bi-directional buffer with low slew and pull-up resistor
BIBUF_S_12D	Bi-directional buffer with low slew and pull-down resistor
BIBUF_S_16	Bi-directional buffer with low slew
BIBUF_S_16U	Bi-directional buffer with low slew and pull-up resistor
BIBUF_S_16D	Bi-directional buffer with low slew and pull-down resistor
BIBUF_S_24	Bi-directional buffer with low slew
BIBUF_S_24U	Bi-directional buffer with low slew and pull-up resistor
BIBUF_S_24D	Bi-directional buffer with low slew and pull-down resistor

\* = not supported in ProASIC3

## Clock Buffers

Names for the input buffers are composed of up to 3 parts:

- A base name indicating the type of buffer: CLKBUF
- IO Technology like LVCMOS
- An optional number code 33, 25, 18 or 15 indicating a 3.3, 2.5, 1.8 OR 1.5 voltage level

CLKBUF_X		Fusion, ProASIC3, ProASIC3E						
	<b>Function</b> Input for Dedicated Routed Clock Network							
<b>Input</b> PAD		<b>Truth Table</b> <table border="1"><thead><tr><th>PAD</th><th>Y</th></tr></thead><tbody><tr><td>0</td><td>0</td></tr><tr><td>1</td><td>1</td></tr></tbody></table>	PAD	Y	0	0	1	1
PAD	Y							
0	0							
1	1							
<b>Output</b> Y		<b>Family</b> <table border="1"><thead><tr><th>Family</th><th>I/O Tiles</th></tr></thead><tbody><tr><td>All</td><td>1</td></tr></tbody></table>	Family	I/O Tiles	All	1		
Family	I/O Tiles							
All	1							

NOTE 1: For an internal Clock net, refer to the CLKINT macro.

### Available CLKBUF\_X Macro Types

Name	Description
CLKBUF_LVCMOS5	LVCMOS Clock buffer with 2.5V CMOS voltage level, 5.0V tolerant
CLKBUF_LVCMOS33	LVCMOS Clock buffer with 3.3 CMOS voltage level
CLKBUF_LVCMOS25	LVCMOS Clock buffer with 2.5 CMOS voltage level *
CLKBUF_LVCMOS18	LVCMOS Clock buffer with 1.8 CMOS voltage level
CLKBUF_LVCMOS15	LVCMOS Clock buffer with 1.5 CMOS voltage level
CLKBUF_PCI	PCI Clock buffer
CLKBUF_PCIX	PCIX Clock buffer
CLKBUF_GTL25	GTL Clock buffer with 2.5 CMOS voltage level *
CLKBUF_GTL33	GTL Clock buffer with 3.3 CMOS voltage level*
CLKBUF_GTL25P	GTLP Clock buffer with 2.5 CMOS voltage level *
CLKBUF_GTL33P	GTLP Clock buffer with 3.3 CMOS voltage level *
CLKBUF_HSTL_I	HSTL Class I Clock buffer *
CLKBUF_HSTL_II	HSTL Class II Clock buffer *
CLKBUF_SSTL2_I	SSTL2 Class I Clock buffer *
CLKBUF_SSTL2_II	SSTL2 Class II Clock buffer *
CLKBUF_SSTL3_I	SSTL3 Class I Clock buffer *
CLKBUF_SSTL3_II	SSTL3 Class II Clock buffer *

\* = The A3P030 device does not support CLKBUF\_LVCMOS


\* = LVCMOS 2.5 V and LVCMOS 2.5 V / 5.0 V I/O standards are identical in the ProASIC3 family. For the A3P030 device, these standards have no clamp diode; therefore, they both behave like a LVCMOS 2.5 V standard. For other ProASIC3 devices, these standards have a clamp diode; therefore, they both behave like a LVCMOS 2.5 V / 5.0 V input standard.

---

## **Output Buffers**

Names for the bi-directional buffers are composed of up to 4 parts:

- A base name indicating the type of buffer: OUTBUF
- Optional IO Technology like LVCMOS
- An optional number code indicating drive strength in milli-amps.
- An optional one character code (S/F) indicating high (F) slew or low (S) slew

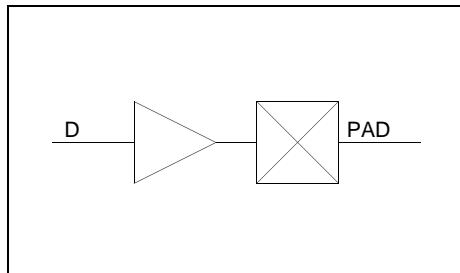

**Function**  
Output Buffer,

**Truth Table**

D	PAD
0	0
1	1

**Family**

Family	I/O Tiles
All	1

Input
D

Output
PAD

**Available OUTBUF\_X Macro Types**

Name	Description
OUTBUF_LVCMOS33	LVCMOS Output buffer with 3.3 CMOS voltage level †
OUTBUF_LVCMOS25	LVCMOS Output buffer with 2.5 CMOS voltage level
OUTBUF_LVCMOS18	LVCMOS Output buffer with 1.8 CMOS voltage level
OUTBUF_LVCMOS15	LVCMOS Output buffer with 1.5 CMOS voltage level
OUTBUF_PCI	PCI Output buffer
OUTBUF_PCIX	PCIX Output buffer
OUTBUF_HSTL_I	HSTL Class I Output buffer *
OUTBUF_HSTL_II	HSTL Class II Output buffer *
OUTBUF_SSTL2_I	SSTL2 Class I Output buffer *
OUTBUF_SSTL2_II	SSTL2 Class II Output buffer *
OUTBUF_SSTL3_I	SSTL3 Class I Output buffer *
OUTBUF_SSTL3_II	SSTL3 Class II Output buffer *
OUTBUF_GTL25	GTL Output buffer with 2.5 CMOS voltage level *
OUTBUF_GTL33	GTL Output buffer with 3.3 CMOS voltage level *
OUTBUF_GTLP25	GTLP Output buffer with 2.5 CMOS voltage level *
OUTBUF_GTLP33	GTLP Output buffer with 3.3 CMOS voltage level *
OUTBUF_F_2	Output buffer with high slew
OUTBUF_F_4	Output buffer with high slew
OUTBUF_F_6	Output buffer with high slew
OUTBUF_F_8	Output buffer with high slew
OUTBUF_F_12	Output buffer with high slew
OUTBUF_F_16	Output buffer with high slew
OUTBUF_F_24	Output buffer with high slew *
OUTBUF_S_2	Output buffer with low slew
OUTBUF_S_4	Output buffer with low slew
OUTBUF_S_6	Output buffer with low slew
OUTBUF_S_8	Output buffer with low slew
OUTBUF_S_12	Output buffer with low slew
OUTBUF_S_16	Output buffer with low slew
OUTBUF_S_24	Output buffer with low slew *
OUTBUF_A	Analog output buffer. You must use this output buffer to indicate your analog outputs. You cannot use a generic OUTBUF in place of OUTBUF_A.

† = Actel recommends that you use this buffer to drive a 5.0V receiver

\* = not supported in ProASIC3

---


## Tri-State Buffer Macros

Names for the tri-state outputs are composed of up to 4 parts:

- A base name indicating the type of buffer: TRIBUFF
- Optional IO Technology like LVCMOS
- An optional number code indicating drive strength in milli-amps.
- An optional one character code (S/F) indicating high(F) slew or low(S) slew
- An optional one character code (U/D) designating a pull-up/down resistor. When the buffer has no resistor, this code is omitted.

For example:

- TRIBUFF\_LVCMOS25U - A tri-state LVCMOS output with 2.5 CMOS voltage levels, pull-up resistor
- TRIBUFF\_S\_8- A tri-state output with low slew and 8 mA drive strength

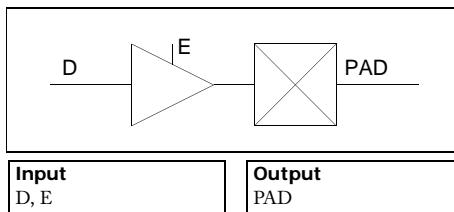

**Function**  
Tristate Output

**Truth Table**

E	PAD
0	Z
1	D

**Family**

Family	I/O Tiles
All	1

### TRIBUFF\_X Macro Types

Name	Description
TRIBUFF_LVCMOS33	LVC MOS tri-state output with 3.3 CMOS voltage level †
TRIBUFF_LVCMOS25	LVC MOS tri-state output with 2.5 CMOS voltage level
TRIBUFF_LVCMOS18	LVC MOS tri-state output with 1.8 CMOS voltage level
TRIBUFF_LVCMOS15	LVC MOS tri-state output with 1.5 CMOS voltage level
TRIBUFF_PCI	PCI tri-state output
TRIBUFF_PCIX	PCIX tri-state output
TRIBUFF_GTL25	GTL tri-state output with 2.5 CMOS voltage level *
TRIBUFF_GTL33	GTL tri-state output with 3.3 CMOS voltage level *
TRIBUFF_GTLP25	GTLP tri-state output with 2.5 CMOS voltage level *
TRIBUFF_GTLP33	GTLP tri-state output with 3.3 CMOS voltage level *
TRIBUFF_HSTL_I	HSTL Class I tri-state output buffer *
TRIBUFF_HSTL_II	HSTL Class II tri-state output buffer *
TRIBUFF_SSTL2_I	SSTL2 Class I tri-state output buffer *
TRIBUFF_SSTL2_II	SSTL2 Class II tri-state output buffer *
TRIBUFF_SSTL3_I	SSTL3 Class I tri-state output buffer *
TRIBUFF_SSTL3_II	SSTL3 Class II tri-state output buffer *
TRIBUFF_F_2	Tri-state output with high slew
TRIBUFF_F_4	Tri-state output with high slew
TRIBUFF_F_6	Tri-state output with high slew
TRIBUFF_F_8	Tri-state output with high slew
TRIBUFF_F_12	Tri-state output with high slew
TRIBUFF_F_16	Tri-state output with high slew
TRIBUFF_F_24	Tri-state output with high slew *
TRIBUFF_S_2	Tri-state output with low slew
TRIBUFF_S_4	Tri-state output with low slew
TRIBUFF_S_6	Tri-state output with low slew
TRIBUFF_S_8	Tri-state output with low slew
TRIBUFF_S_12	Tri-state output with low slew
TRIBUFF_S_16	Tri-state output with low slew
TRIBUFF_S_24	Tri-state output with low slew *


† = Actel recommends that you use this buffer to drive a 5.0V receiver

\* = not supported in ProASIC3

## Differential IO Macros

### INBUF\_LVDS; INBUF\_LVPECL

Fusion, ProASIC3, ProASIC3E

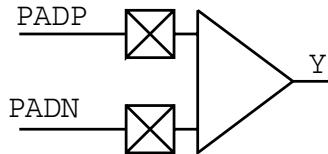

**Function**  
INBUF\_LVDS and INBUF\_LVPECL

**Input**  
PADP; PADN


**Output**  
Y

#### Available Differential Macro Types

Name	Description
INBUF_LVDS	
INBUF_LVPECL	

### CLKBUF\_LVDS; CLKBUF\_LVPECL

Fusion, ProASIC3, ProASIC3E

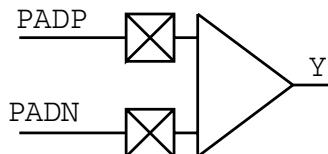

**Function**  
CLKBUF\_LVDS and CLKBUF\_LVPECL

**Input**  
PADP; PADN


**Output**  
Y

#### Available Differential Macro Types

Name	Description
CLKBUF_LVDS	
CLKBUF_LVPECL	

## OUTBUF\_LVDS; OUTBUF\_LVPECL

Fusion, ProASIC3, ProASIC3E

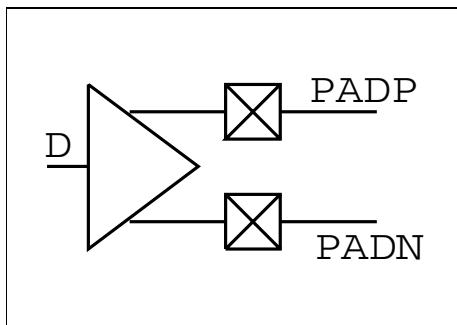

### Function

OUTBUF\_LVDS and OUTBUF\_LVPECL

**Input**  
D

**Output**  
PADP, PADN


### Available Differential Macro Types

Name	Description
OUTBUF_LVDS	
OUTBUF_LVPECL	

## DDR Macros

### DDR\_REG

Fusion, ProASIC3, ProASIC3E

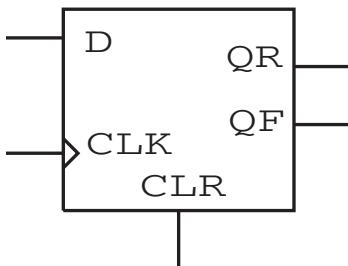

#### Function

DDR (DDR) Register; please refer to the Fusion or ProASIC3/E datasheet for more information on the DDR\_REG

#### Truth Table

CLR	CLK	QR(n+1)	QF(n+1)
1	X	0	0
0	↑	D	QF(n)
0	↓	QR(n)	D

**Input**  
D, CLK, CLR


**Output**  
QR, QF

#### Family

Family	I/O Tiles
All	1

### DDR\_OUT

Fusion, ProASIC3, ProASIC3E

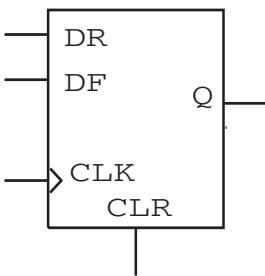

#### Function

DDR (DDR) output; please refer to the Fusion or ProASIC3/E datasheet for more information on the DDR\_OUT

#### Truth Table

CLR	CLK	Q
1	X	0
0	↑	DR
0	↓	DF

**Input**  
DR, DF, CLK, CLR


**Output**  
Q

#### Family

Family	I/O Tiles
All	1

---

## *Clocking Resources*

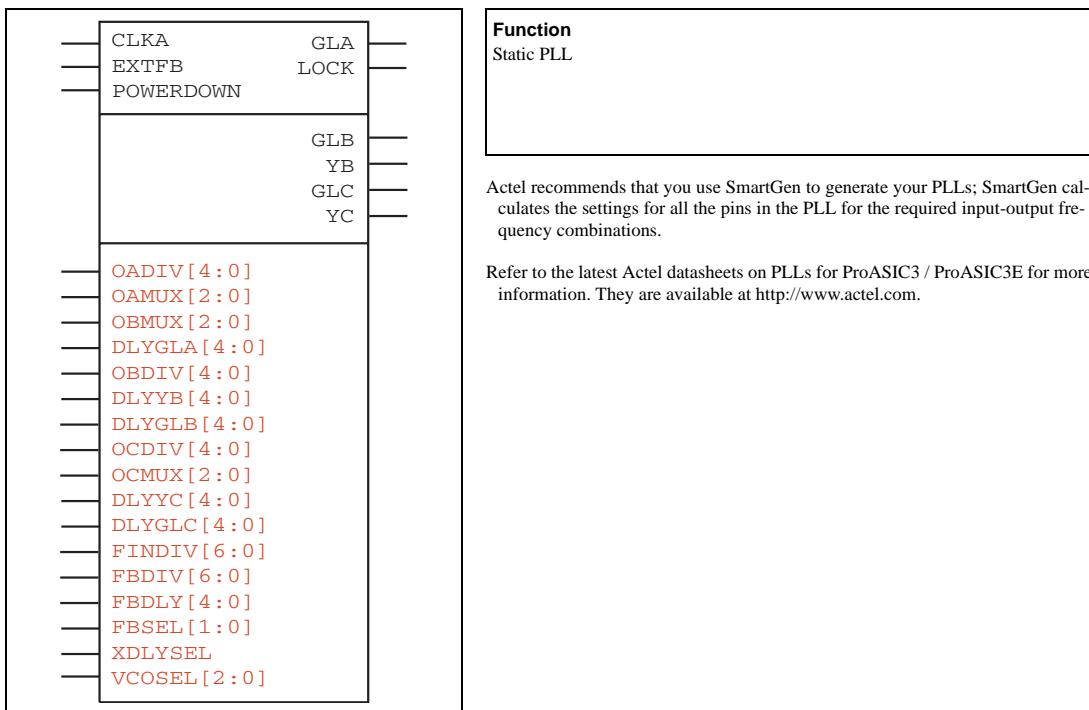**Inputs / Outputs**

See the description below for an explanation of the inputs and outputs available on the Static PLL for ProASIC3/E; all inputs are shown on the left, and outputs are to the right.

The static PLL supports only a single input. The Combiner is able to combine the PLL with the regular CLKBUF macros and any of the CCC macros to utilize available unused globals.

In the symbol shown above, all the required user-accessible inputs and outputs are above the top horizontal line. The ones below the top line are optional inputs and outputs. The static configuration inputs are below the second line. These pins can only be connected to GND or VCC.

The table below summarizes the configuration control bits.

**Configuration Control Bits Summary**

NAME	FUNCTION
FINDIV<6:0>	7-BIT INPUT DIVIDER (/N)
FBDIV<6:0>	7-BIT FEEDBACK DIVIDER (/M)
OADIV<4:0>	5-BIT OUTPUT DIVIDER (/U)
OBDIV<4:0>	5-BIT OUTPUT DIVIDER (/V)
OCDIV<4:0>	5-BIT OUTPUT DIVIDER (/W)
OAMUX<2:0>	3-BIT POST-PLL MUXA (BEFORE DIVIDER /U)
OBMUX<2:0>	3-BIT POST-PLL MUXB (BEFORE DIVIDER /V)


---

## Configuration Control Bits Summary (Continued)


NAME	FUNCTION
OCMUX<2:0>	3-BIT POST-PLL MUXC (BEFORE DIVIDER /W)
FBSEL<1:0>	2-BIT PLL FEEDBACK MUX
FBDLY<4:0>	FEEDBACK DELAY
XDLYSEL	1-BIT PLL FEEDBACK MUX
DLYGLA<4:0>	DELAY ON GLOBAL A
DLYGLB<4:0>	DELAY ON GLOBAL B
DLYGLC<4:0>	DELAY ON GLOBAL C
DLYB<4:0>	DELAY ON YB
DLYC<4:0>	DELAY ON YC
VCOSEL<2:0>	3-BIT VCO GEAR CONTROL (4 FREQUENCY RANGES)

### Static Clock with Divider and/or Delay

The Combiner is able to combine the clock conditioning circuit macro with the regular CLKBUF macros and the PLL to utilize available unused globals.

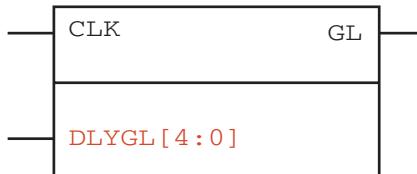

The CLKDLY is essentially a CLKBUF with a delay. The PLLINT macro is included to unambiguously show Designer which routing resources are required to connect the REFCLK input: The PLLINT is used when REFCLK is driven by a pad in a different I/O tile.

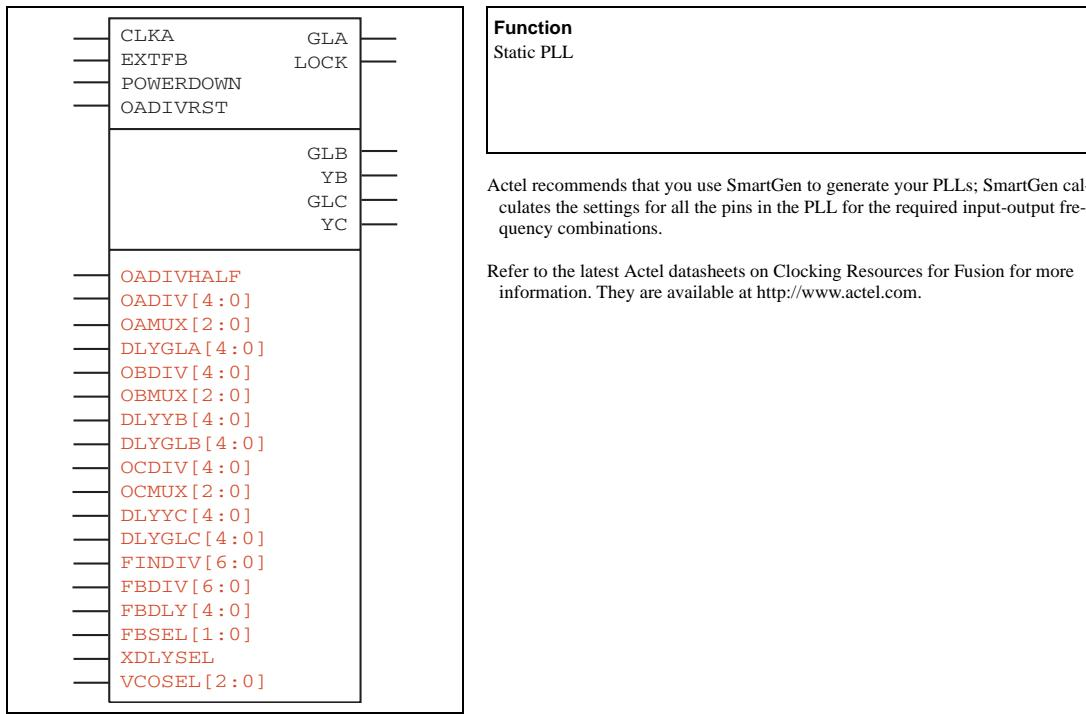**Inputs / Outputs**

See the description below for an explanation of the inputs and outputs available on the Static PLL for Fusion; all inputs are shown on the left, and outputs are to the right.

The static PLL supports only a single input. The Combiner is able to combine the PLL with the regular CLKBUF macros and any of the CCC macros to utilize available unused globals.

In the symbol shown above, all the required user-accessible inputs and outputs are above the top horizontal line. The ones below the top line are optional inputs and outputs. The static configuration inputs are below the third line. These pins can only be connected to GND or VCC.

OADIVRST may only be used when you bypass the PLL core (i.e. OAMUX = 001).

The table below summarizes the configuration control bits.

**Configuration Control Bits Summary**

NAME	FUNCTION
FINDIV<6:0>	7-BIT INPUT DIVIDER (/N)
FBDIV<6:0>	7-BIT FEEDBACK DIVIDER (/M)
OADIVHALF*	Division by half (see Fusion datasheet for more information)
OADIV<4:0>	5-BIT OUTPUT DIVIDER (/U)
OBDIV<4:0>	5-BIT OUTPUT DIVIDER (/V)
OCDIV<4:0>	5-BIT OUTPUT DIVIDER (/W)

## Configuration Control Bits Summary (Continued)

NAME	FUNCTION
OAMUX<2:0>	3-BIT POST-PLL MUXA (BEFORE DIVIDER /U)
OBMUX<2:0>	3-BIT POST-PLL MUXB (BEFORE DIVIDER /V)
OCMUX<2:0>	3-BIT POST-PLL MUXC (BEFORE DIVIDER /W)
FBSEL<1:0>	2-BIT PLL FEEDBACK MUX
FBDLY<4:0>	FEEDBACK DELAY
XDLYSEL	1-BIT PLL FEEDBACK MUX
DLYGLA<4:0>	DELAY ON GLOBAL A
DLYGLB<4:0>	DELAY ON GLOBAL B
DLYGLC<4:0>	DELAY ON GLOBAL C
DLYB<4:0>	DELAY ON YB
DLYC<4:0>	DELAY ON YC
VCOSEL<2:0>	3-BIT VCO GEAR CONTROL (4 FREQUENCY RANGES)


\* OADIVHALF may only be used when you bypass the PLL core (i.e. OAMUX = 001) and the RC Oscillator (RCOSC) drives the CLKA input.

### Static Clock with Divider and/or Delay

The Combiner is able to combine the clock conditioning circuit macro with the regular CLKBUF macros and the PLL to utilize available unused globals.



The CLKDLY is essentially a CLKBUF with a delay. The PLLINT macro is included to unambiguously show Designer which routing resources are required to connect the REFCLK input: The PLLINT is used when REFCLK is driven by a pad in a different I/O tile.

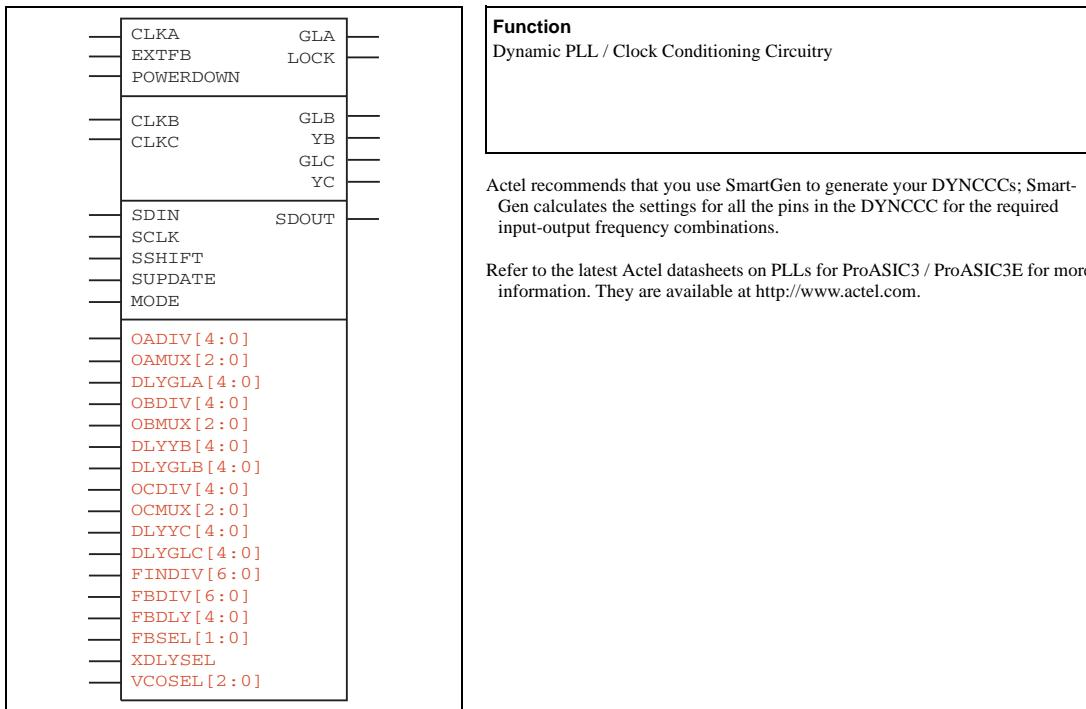**Inputs / Outputs**

See the description below for an explanation of the inputs and outputs available on the Dynamic PLL for ProASIC3/E; all inputs are shown on the left, and outputs are to the right.

In the symbol shown above, all the required user-accessible inputs and outputs are above the top horizontal line. The ones below the top line are optional inputs and outputs. The elements below the second line (SDIN, SCLK, SDOUT, etc.) are associated with the dynamic shift register. The static configuration inputs are below the third line. Static configuration input pins can only be connected to GND or VCC.


There are seventy-four static configuration ports on the DYNCCC model, but there are eighty dynamic configuration bits that may be shifted in. The extra bits control the STATSEL and DYNSEL input multiplexors, a silicon feature that is not reflected in the simulation model. These extra bits are ignored by the simulation model. See the PLL for ProASIC3 and ProASIC3E macro description on page 172 for a summary of the configuration control bits.

Please note the following during dynamic configuration:

- When the “MODE” pin is at logic high, the PLL control bits are the bits from the configuration register. Before “MODE” is switched from logic low to logic high, the desired dynamic configuration bits should already be shifted-in.
- Reconfiguration does not unlock the PLL as long as the new configuration does not change the state of input divider or feedback elements.

## PLLINT

Fusion, ProASIC3, ProASIC3E

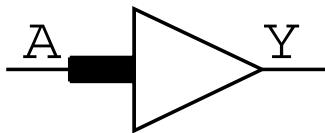

### Function

PLL Int

### Truth Table

A	Y
0	0
1	1

Connect only to the REFCLK input of PLL when the PLL is driven by a pad other than the one in the same super cluster.


**Input**  
A

**Output**  
Y

Refer to the latest Actel datasheets on PLLs for ProASIC / ProASIC 3E for more information. They are available at <http://www.actel.com>.

## UJTAG

Fusion, ProASIC3, ProASIC3E

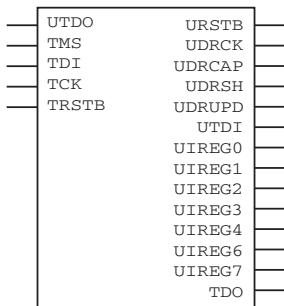

### Function


The UJTAG macro is a special purpose macro. It is provided to allow users access to the user JTAG circuitry on board the chip. You must instantiate a UJTAG macro in their design if they plan to make use of the user JTAG feature. It is identical to the APA and A500K UJTAG macro.

**Input**

**Output**

## UFROM

Fusion, ProASIC3, ProASIC3E

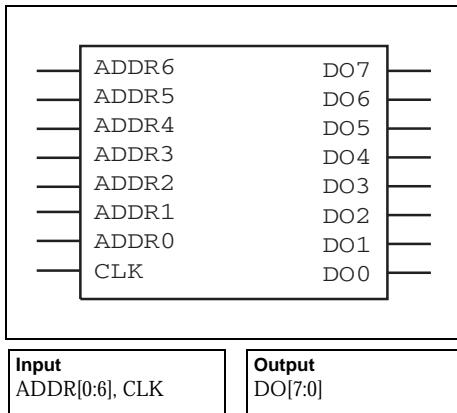


### Function

The UFROM is the USER FlashROM macro. It is a simple 128 X 8 synchronous read-only memory. There is only one UFROM per chip. New data appears on the DO pins after the falling edge of the clock pin. The UFROM can only be programmed by the user via the JTAG pins. There is currently no support for programming the UFROM in any of the CAE tools or libraries, however the simulation models will utilize a memory initialization file so users can specify the contents of the memory for simulation purposes. The memory initialization file will be an ASCII format text file containing exactly 128 lines of 8-character binary strings.

## RCOSC


Fusion

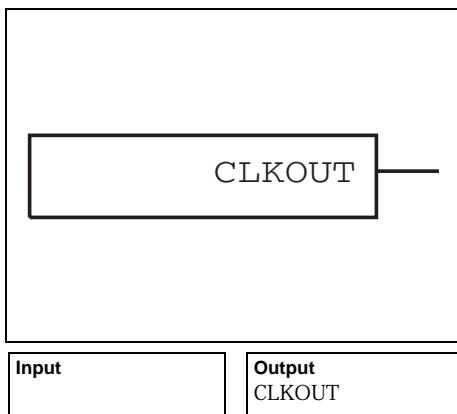

### Function

On-chip free-running clock source that generates a 100 Mhz clock.


Refer to the Clocking Resources of the Fusion datasheet for more information on this macro. The Fusion datasheet is available at <http://www.actel.com>.

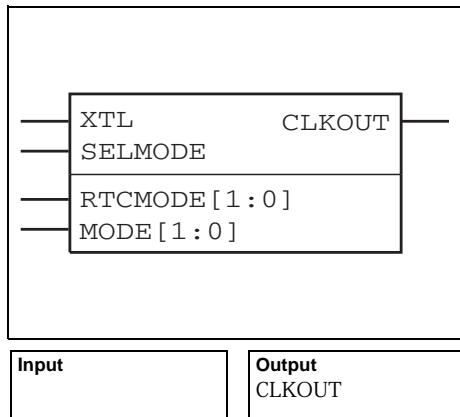**Function**

On-chip crystal oscillator circuit that works with an off-chip crystal to generate a high-precision clock.

Refer to the Clocking Resources of the Fusion datasheet for more information on this macro. The Fusion datasheet is available at <http://www.actel.com>.

The XTLOSC requires a physical connection to an external crystal, ceramic resonator, or a resistor/capacitor network. For simulation purposes you can use the XTL pin to provide a clock signal running at the desired input frequency.

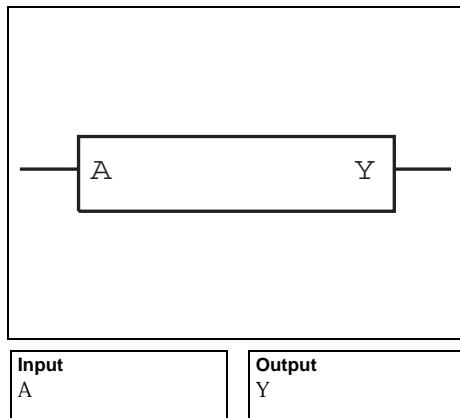
**Function**

Clock buffer used to connect either the RCOSC or the XTLOSC to the core.

Refer to the Clocking Resources of the Fusion datasheet for more information on this macro. The Fusion datasheet is available at <http://www.actel.com>.

## CLKDLY


Fusion, ProASIC3, ProASIC3E

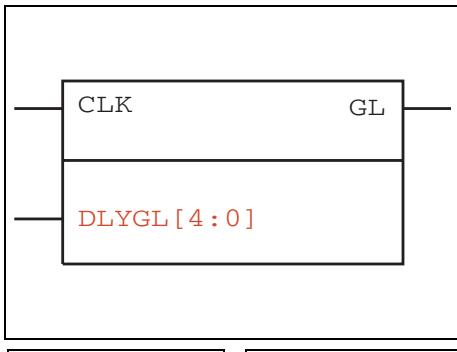

### Function


Static clock with delay.

Refer to the Clocking Resources of the Fusion and ProASIC3/E datasheets for more information on this macro. They are available at <http://www.actel.com>.

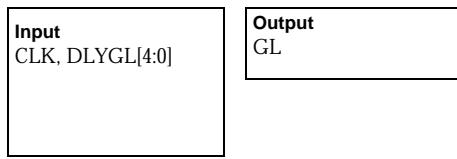

## CLKDIVDLY


Fusion

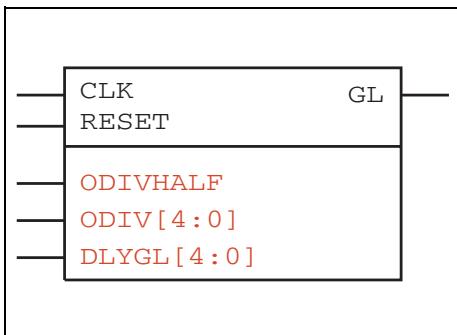


### Function

Static clock with divider and/or delay with global output driver only.

Refer to the Clocking Resources of the Fusion and ProASIC3/E datasheets for more information on this macro. They are available at <http://www.actel.com>.

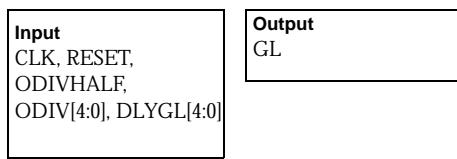

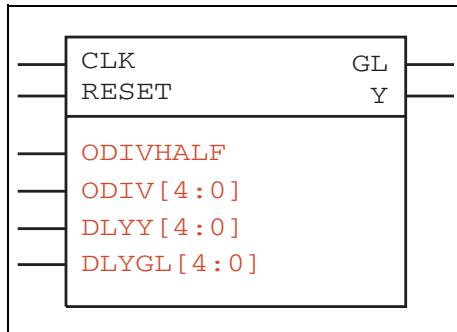
**Function**

Static clock with divider and/or delay with both global output driver and regular net driver.

Refer to the Clocking Resources of the Fusion datasheet for more information on this macro. It is available at <http://www.actel.com>.

<b>Input</b>
CLK, RESET,
ODIVHALF,
ODIV[4:0], DLYY[4:0],
DLYGL[4:0]

<b>Output</b>
GL, Y

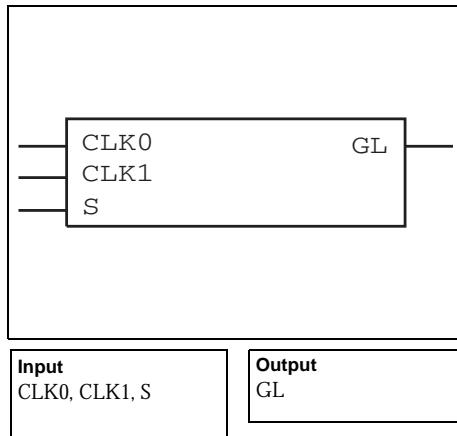**Function**

No-glitch MUX. NGMUX provides a special switching sequence between two asynchronous clock domains to avoid generating any unwanted narrow clock pulses.

Refer to the Clocking Resources of the Fusion datasheet for more information on this macro. It is available at <http://www.actel.com>.

Transition S from high to low to initiate a switch to CLK0, and from low to high to initiate a switch to CLK1. The output of NGMUX is undefined if S switches again before the previous switch operation has completed.



---

# Product Support

Actel backs its products with various support services including Customer Service, a Customer Technical Support Center, a web site, an FTP site, electronic mail, and worldwide sales offices. This appendix contains information about contacting Actel and using these support services.

## Customer Service

Contact Customer Service for non-technical product support, such as product pricing, product upgrades, update information, order status, and authorization.

From Northeast and North Central U.S.A., call 650.318.4480  
From Southeast and Southwest U.S.A., call 650.318.4480  
From South Central U.S.A., call 650.318.4434  
From Northwest U.S.A., call 650.318.4434  
From Canada, call 650.318.4480  
From Europe, call 650.318.4252 or +44 (0)1276.401500  
From Japan, call 650.318.4743  
From the rest of the world, call 650.318.4743  
Fax, from anywhere in the world 650.318.8044

## Actel Customer Technical Support Center

Actel staffs its Customer Technical Support Center with highly skilled engineers who can help answer your hardware, software, and design questions. The Customer Technical Support Center spends a great deal of time creating application notes and answers to FAQs. So, before you contact us, please visit our online resources. It is very likely we have already answered your questions.

## Actel Technical Support

Visit the [Actel Customer Support website](http://www.actelcom/.custsup/search.html) ([www.actelcom/.custsup/search.html](http://www.actelcom/.custsup/search.html)) for more information and support. Many answers available on the searchable web resource include diagrams, illustrations, and links to other resources on the Actel web site.

## Website

You can browse a variety of technical and non-technical information on Actel's [home page](http://www.actel.com), at [www.actel.com](http://www.actel.com).

# Contacting the Customer Technical Support Center

Highly skilled engineers staff the Technical Support Center from 7:00 A.M. to 6:00 P.M., Pacific Time, Monday through Friday. Several ways of contacting the Center follow:

## Email

You can communicate your technical questions to our email address and receive answers back by email, fax, or phone. Also, if you have design problems, you can email your design files to receive assistance. We constantly monitor the email account throughout the day. When sending your request to us, please be sure to include your full name, company name, and your contact information for efficient processing of your request.

The technical support email address is [tech@actel.com](mailto:tech@actel.com).

## Phone

Our Technical Support Center answers all calls. The center retrieves information, such as your name, company name, phone number and your question, and then issues a case number. The Center then forwards the information to a queue where the first available application engineer receives the data and returns your call. The phone hours are from 7:00 A.M. to 6:00 P.M., Pacific Time, Monday through Friday. The Technical Support numbers are:

**650.318.4460**  
**800.262.1060**

Customers needing assistance outside the US time zones can either contact technical support via email ([tech@actel.com](mailto:tech@actel.com)) or contact a local sales office. [Sales office listings](#) can be found at [www.actel.com/contact/offices/index.html](http://www.actel.com/contact/offices/index.html).

**For more information about Actel's products, visit our website at**  
**<http://www.actel.com>**

**Actel Corporation** • 2061 Stierlin Court • Mountain View, CA 94043 USA

Customer Service: 650.318.1010 • Customer Applications Center: 800.262.1060

**Actel Europe Ltd.** • Dunlop House, Riverside Way • Camberley, Surrey GU15 3YL • United Kingdom

Phone +44 (0) 1276 401 450 • Fax +44 (0) 1276 401 490

**Actel Japan** • EXOS Ebisu Bldg. 4F • 1-24-14 Ebisu Shibuya-ku • Tokyo 150 • Japan

Phone +81.03.3445.7671 • Fax +81.03.3445.7668 • [www.jp.actel.com](http://www.jp.actel.com)

**Actel Hong Kong** • Suite 2114, Two Pacific Place • 88 Queensway, Admiralty Hong Kong

Phone +852 2185 6460 • Fax +852 2185 6488 • [www.actel.com.cn](http://www.actel.com.cn)

5-02-00029-5

